



Device manual

IO-Link master with Modbus TCP interface  
CabinetLine  
8 Ports  
IP 20

**AL1940**

Firmware: 3.1.x

English

## Contents

<b>1</b>	<b>Preliminary note</b>	<b>5</b>
1.1	Legal and copyright information.....	5
1.2	Purpose of the document.....	5
1.3	Explanation of Symbols .....	6
1.4	Change history .....	6
<b>2</b>	<b>Safety instructions</b>	<b>7</b>
2.1	General .....	7
2.2	Required background knowledge .....	7
2.3	Safety symbols on the device .....	7
2.4	IT security.....	8
<b>3</b>	<b>Intended use</b>	<b>9</b>
<b>4</b>	<b>Function</b>	<b>10</b>
4.1	Communication, parameter setting, evaluation .....	11
4.1.1	IO-Link.....	11
4.1.2	Modbus TCP .....	11
4.1.3	Internet of Things (IoT) .....	11
4.1.4	Security mode .....	11
4.1.5	Parameter setting .....	11
4.1.6	Visual indication .....	12
4.2	Digital inputs.....	12
4.3	IO-Link supply .....	12
<b>5</b>	<b>Mounting</b>	<b>13</b>
5.1	Install the device .....	13
<b>6</b>	<b>Electrical connection</b>	<b>14</b>
6.1	Notes .....	14
6.2	Connecting the Modbus TCP ports.....	14
6.3	IoT port.....	15
6.4	IO-Link ports.....	16
6.4.1	Connect IO-Link devices for Class A operation .....	16
6.4.2	Connect IO-Link devices for Class B operation .....	17
6.5	Connect the device .....	18
<b>7</b>	<b>Operating and display elements</b>	<b>19</b>
7.1	Overview .....	19
7.2	LED indicators .....	20
7.2.1	Status LEDs .....	20
7.2.2	Ethernet ports .....	20
7.2.3	IoT port .....	21
7.2.4	Power supply .....	21
7.2.5	IO-Link Ports (Class A).....	21

---

<b>8</b>	<b>Set-up</b>	<b>22</b>
----------	---------------	-----------

---

<b>9</b>	<b>Configuration</b>	<b>23</b>
9.1	LR DEVICE .....	24
9.1.1	Remarks .....	25
9.1.2	IoT: Configure IP settings .....	25
9.1.3	IoT: Configure security mode .....	26
9.1.4	IoT: Configuring access rights .....	27
9.1.5	IoT: Configure the interface to LR AGENT or LR SMARTOB SERVER .....	28
9.1.6	Fieldbus: Configure IP settings.....	29
9.1.7	Fieldbus: set the length of the process data .....	30
9.1.8	IO-Link ports: Activate data transfer to LR AGENT or LR SMARTOB SERVER .....	30
9.1.9	IO-Link ports: Configure operating mode.....	31
9.1.10	IO-Link ports: Set the device validation and data storage .....	32
9.1.11	IO-Link ports: set fail-safe values .....	33
9.1.12	Info: Show device information .....	33
9.1.13	Firmware: Reset device to factory settings.....	34
9.1.14	Firmware: Reboot the device.....	34
9.1.15	Configure IO-Link devices .....	35
9.2	ifm IoT Core .....	36
9.2.1	Programmers' notes .....	37
9.2.2	First steps.....	41
9.2.3	General functions .....	41
9.2.4	IoT: Configuring access rights .....	45
9.2.5	IoT: Configuring IP settings .....	45
9.2.6	IoT: Configuring the LR AGENT or LR SMARTOB SERVER interface .....	46
9.2.7	IoT: Configuring security mode.....	46
9.2.8	Fieldbus: Configuring the IP settings.....	49
9.2.9	Fieldbus: Configuring the fieldbus interface .....	49
9.2.10	Fieldbus: Setting fail-safe values.....	50
9.2.11	IO-Link ports: Setting the operating mode of pin 4 (US) .....	50
9.2.12	IO-Link ports: Configuring device validation and data storage .....	51
9.2.13	IO-Link ports: Configuring data transfer to LR AGENT or LR SMARTOB SERVER.....	53
9.2.14	IO-Link ports: Reading / writing process data.....	53
9.2.15	IO-Link ports: Indicating port events.....	56
9.2.16	IO-Link devices: Accessing parameters .....	56
9.2.17	IO-Link devices: Reading an writing device information .....	58
9.2.18	IO-Link devices: Indicating IO-Link events .....	58
9.2.19	Gateway: Resetting, rebooting and localising the device .....	58
9.2.20	Gateway: Reading device information .....	59
9.2.21	Gateway: Reading status and diagnostic information.....	59
9.2.22	Gateway: Updating the firmware .....	60
9.2.23	Gateway: Setting the application tag .....	61
9.2.24	Subscribing to notifications.....	62
9.2.25	Using Web Socket.....	66
9.2.26	MQTT support .....	68
9.2.27	Using the IoT-Core Visualizer.....	72
9.3	Modbus TCP .....	79
9.3.1	Integrate the AL1940 into the Modbus project.....	79
9.3.2	Set IO-Link master .....	81
9.3.3	Set IO-Link ports .....	82
9.3.4	Read input data of several IO-Link ports .....	83
9.3.5	Read input data of individual IO-Link ports.....	84
9.3.6	Write output data of several IO-Link ports .....	85
9.3.7	Write output data of individual IO-Link ports.....	86
9.3.8	Read diagnostic information and events.....	87
9.3.9	Read device information.....	88
9.3.10	Control IO-Link master .....	88
9.3.11	Configure IO-Link devices .....	88
9.3.12	Modbus TCP: Programmers' notes .....	89

<b>10</b>	<b>Operation</b>	<b>91</b>
10.1	Using web-based management .....	91
<b>11</b>	<b>Maintenance, repair and disposal</b>	<b>92</b>
11.1	Cleaning process .....	92
11.2	Updating the firmware .....	92
11.3	Replacing IO-Link device .....	92
<b>12</b>	<b>Factory settings</b>	<b>93</b>
<b>13</b>	<b>Accessories</b>	<b>94</b>
<b>14</b>	<b>Appendix</b>	<b>95</b>
14.1	Technical data.....	96
14.1.1	Application.....	96
14.1.2	Electrical data.....	96
14.1.3	Inputs / outputs...	96
14.1.4	Inputs.....	97
14.1.5	Outputs.....	97
14.1.6	Interfaces.....	97
14.1.7	Environmental conditions .....	98
14.1.8	Approvals / tests.....	98
14.1.9	Mechanical data .....	98
14.1.10	Electrical connection .....	99
14.2	Modbus TCP .....	100
14.2.1	Register .....	101
14.2.2	Acyclic commands.....	120
14.3	ifm IoT Core .....	129
14.3.1	Overview: IoT profile .....	130
14.3.2	Overview: IoT types.....	137
14.3.3	Overview: IoT services .....	138
<b>15</b>	<b>Index</b>	<b>152</b>

# 1 Preliminary note

## Content

Legal and copyright information .....	5
Purpose of the document .....	5
Explanation of Symbols .....	6
Change history .....	6

33203

## 1.1 Legal and copyright information

33117

© All rights reserved by ifm electronic gmbh. No part of this manual may be reproduced and used without the consent of ifm electronic gmbh.

All product names, pictures, companies or other brands used on our pages are the property of the respective rights owners:

- AS-i is the property of the AS-International Association, (→ [www.as-interface.net](http://www.as-interface.net))
- CAN is the property of the CiA (CAN in Automation e.V.), Germany (→ [www.can-cia.org](http://www.can-cia.org))
- CODESYS™ is the property of the CODESYS GmbH, Germany (→ [www.codesys.com](http://www.codesys.com))
- DeviceNet™ is the property of the ODVA™ (Open DeviceNet Vendor Association), USA (→ [www.odva.org](http://www.odva.org))
- EtherNet/IP® is the property of the → ODVA™
- EtherCAT® is a registered trade mark and patented technology, licensed by Beckhoff Automation GmbH, Germany
- IO-Link® is the property of the → PROFIBUS Nutzerorganisation e.V., Germany (→ [www.io-link.com](http://www.io-link.com))
- ISOBUS is the property of the AEF – Agricultural Industry Electronics Foundation e.V., Deutschland (→ [www.aef-online.org](http://www.aef-online.org))
- Microsoft® is the property of the Microsoft Corporation, USA (→ [www.microsoft.com](http://www.microsoft.com))
- Modbus® is the property of the Schneider Electric SE, France (→ [www.schneider-electric.com](http://www.schneider-electric.com))
- PROFIBUS® is the property of the PROFIBUS Nutzerorganisation e.V., Germany (→ [www.profibus.com](http://www.profibus.com))
- PROFINET® is the property of the → PROFIBUS Nutzerorganisation e.V., Germany
- Windows® is the property of the → Microsoft Corporation, USA

## 1.2 Purpose of the document

34227

This document is only for device types "IO-Link master - Modbus TCP gateway (CabinetLine) 8 port IP 20" (art. no.: AL1940).

It is part of the device and contains information about the correct handling of the product.

- Read this document before using the device.
- Keep this document during the service life of the device.

## 1.3 Explanation of Symbols



### **WARNING**

Warning of serious personal injury.

Death or serious irreversible injuries may result.



### **CAUTION**

Warning of personaly injury.

Slight reversible injuries may result.

### **NOTICE**

Warning of damage to property



Important note

Non-compliance can result in malfunction or interference



Information

Supplementary note



► ... Request for action



> ... Reaction, result



→ ... "see"



**abc** Cross-reference



123 Decimal number



0x123 Hexadecimal number



0b010 Binary number



[...] Designation of pushbuttons, buttons or indications

## 1.4 Change history

Version	Topic	Date
00	New creation of the document	04 / 2019
01	Correction: Technical data - current rating per output	09 / 2019
02	<ul style="list-style-type: none"> <li>▪ Added: New IoT Core functions</li> <li>▪ Added: IoT Core Visualizer</li> <li>▪ Correction: Description SENS PWR and AUX PWR</li> <li>▪ Correction: Description of IoT Core service getsubscriptioninfo</li> </ul>	10 / 2020
03	Deleted: ifm IoT Core – DNS support	10 / 2021

## 2 Safety instructions

### Content

General .....	7
Required background knowledge .....	7
Safety symbols on the device .....	7
IT security .....	8

28333

### 2.1 General

58525

- The device described is a subcomponent for integration into a system. The manufacturer is responsible for the safety of the system. The system manufacturer undertakes to perform a risk assessment and to create documentation in accordance with legal and normative requirements to be provided to the operator and user of the system. This documentation must contain all necessary information and safety instructions for the operator, the user and, if applicable, for any service personnel authorised by the manufacturer of the system.
- Read this document before setting up the product and keep it during the entire service life.
- The product must be suitable for the corresponding applications and environmental conditions without any restrictions.
- Only use the product for its intended purpose (→ **Intended use** (→ p. 9)).
- If the operating instructions or the technical data are not adhered to, personal injury and/or damage to property may occur.
- The manufacturer assumes no liability or warranty for any consequences caused by tampering with the product or incorrect use by the operator.
- Installation, electrical connection, set-up, programming, configuration, operation and maintenance of the product must be carried out by personnel qualified and authorised for the respective activity.
- Protect units and cables against damage.

### 2.2 Required background knowledge

34185

This document is intended for specialists. Specialists are people who, based on their relevant training and experience, are capable of identifying risks and avoiding potential hazards that may be caused during operation or maintenance of the product.

The document contains information about the correct handling of the product.

### 2.3 Safety symbols on the device

34199



General warning

Observe instructions in chapter "Electrical connection" (→ **Electrical connection** (→ p. 14))!

## 2.4 IT security

54678

### NOTICE!

If the device is operated in an unprotected network environment.

- > Unauthorised read or write access to data is possible.
  - > Unauthorised manipulation of the device function is possible.
  - Check and restrict access options to the device:
    - Restrict access to authorised persons.
    - Do not connect the device to open networks or the internet.
- If access from the internet is inevitable:
- choose a safe method to connect with the device (e. g. VPN).
  - Use encrypted data transmission (e. g. https / TLS).

The IO-Link master serves as a gateway between intelligent IO-Link devices and the Modbus TCP network. The device is designed for use as cabinet module in plant construction.

- Use the device only within the limits of the technical data (→ **Technical data** (→ p. [96](#))).

## 4 Function

### Content

Communication, parameter setting, evaluation .....	11
Digital inputs .....	12
IO-Link supply .....	12

33836

## 4.1 Communication, parameter setting, evaluation

### Content

IO-Link .....	11
Modbus TCP .....	11
Internet of Things (IoT) .....	11
Security mode .....	11
Parameter setting .....	11
Visual indication .....	12

33860

### 4.1.1 IO-Link

34084

The device offers the following IO-Link functions:

- IO-Link master (IO-Link revision 1.0 and 1.1)
- 8 IO-Link ports for connection of IO-Link devices
- Provision of process data of the connected IO-Link devices for LR SMARTOB SERVER monitoring software (→ [www.ifm.com](http://www.ifm.com))

### 4.1.2 Modbus TCP

33676

The device offers the following Modbus TCP functions:

- Provision of the functions of a Modbus TCP Slave
- 2 port switch for access to the Modbus TCP interface (X21/X22)
- Gateway for transmission of the process and parameter data between the connected IO-Link devices and the higher-level Modbus TCP controller

### 4.1.3 Internet of Things (IoT)

54679

The device offers the following IoT functions:

- Gateway for the transmission of process, parameter and monitoring data between IO-Linkmaster / IO-Link devices and the IT network level
- REST-API to access process and parameter data
- Supported protocols: TCP/IP JSON, MQTT

### 4.1.4 Security mode

54697

The IoT interface offers the following optional security functions:

- Secure data transfer via encrypted connection (Secure Layer Transport - TLS)
- Access protection via authentication

### 4.1.5 Parameter setting

34210

The device provides the following configuration options:

- Parameter setting of the IO-Link master of the AL1940 with LR DEVICE parameter setting software, Modbus TCP projection software or ifm IoT-Core services.
- Parameter setting of the connected IO-Link devices (sensors, actuators) with LR DEVICE parameter setting software, Modbus TCP projection software or ifm IoT-Core services

- Storage of parameter sets of the connected IO-Link devices for automatic recovery (data storage)

#### 4.1.6 Visual indication

34192

The device has the following visual indicators:

- Status and error indication of the gateway, of the Modbus TCP connection and of the system
- Status display of the voltage supply
- Status and activity display of the Ethernet connection
- Status, error and short circuit/overload indication of the IO-Link ports

### 4.2 Digital inputs

33817

The device has 8 additional digital inputs (type 2 according to EN 61131-2).

The digital inputs are on clamp 2 of the ports X01...X04.

All inputs refer to the potential of the device supply (clamp 3).

### 4.3 IO-Link supply

34077

The device has 8 supplies for IO-Link devices.

The IO-Link ports X01...X08 are ports class A.

Every supply provides short circuit monitoring.

The device ensures fire protection for the connected IO-Link devices by providing a power-restricted circuit at the IO-Link ports (according to IEC61010-1 and Class 2 according to UL1310).

## 5 Mounting

### Content

Install the device .....	13
	34058

### 5.1 Install the device

34070



- ▶ Disconnect power before installation.

The device contains components that can be damaged or destroyed by electrostatic discharge.

- ▶ When handling the device, observe the necessary safety precautions against electrostatic discharge (ESD).
- ▶ Only operate the device when mounted on a grounded DIN rail.

- ▶ Install the device in a control cabinet of protection rating IP 54 or higher. The control cabinet has to be installed in accordance with local and national regulations.
- ▶ Fix the device vertically onto a 35 mm raised rail.
- ▶ Leave enough space between the unit and the top or bottom of the control cabinet as well as to adjacent devices to enable air circulation and to avoid inadmissible heating.

## 6 Electrical connection

### Content

Notes .....	14
Connecting the Modbus TCP ports .....	14
IoT port .....	15
IO-Link ports .....	16
Connect the device .....	18

33805

### 6.1 Notes

34181



The unit must be connected by a qualified electrician.

- ▶ The national and international regulations for the installation of electrical equipment must be adhered to.

The unit is only suitable for operation using SELV/PELV voltages.

- ▶ Observe the information concerning IO-Link circuits!

The IP rating of the overall system depends on the protection ratings of the individual devices and the applied connection elements.

For UL applications:

- ▶ To connect the IO-Link master, only use cables with AWG 26 to 12 and a minimum temperature range of 75 °C.


Wiring: → **Technical data** (→ p. [96](#))

The circuits are separated from each other and from device surfaces that could be touched by means of basic insulation according to EN61010-1 (secondary circuit with 30 V DC maximum, supplied from mains circuit up to 300 V of overvoltage category II).

The communication interfaces are separated from each other and from device surfaces that could be touched by means of basic insulation according to EN61010-1 (secondary circuit with 30 V DC maximum, supplied from mains circuit up to 300 V of overvoltage category II). They are designed for network environment 0 according to IEC TR62102.


### 6.2 Connecting the Modbus TCP ports

33678

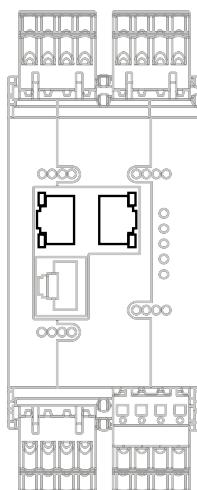

- ▶ Connect the unit via the sockets X21 and/or X22 to the Modbus TCP network.
- ▶ To connect the devices, use connectors with protection rating IP 20 or higher (→ **Accessories** (→ p. [94](#))).

## 6.3 IoT port

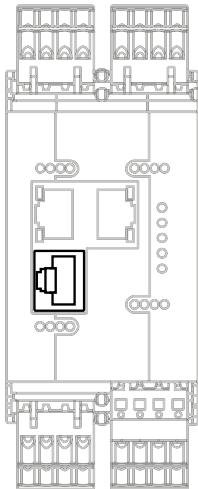

- ▶ Connect the device via the socket X23 to the IT network (e.g. laptop/PC with LR DEVICE parameter setting software, laptop/PC with LR SMARTOB SERVER monitoring software, laptop/PC with http request enabled software).
- ▶ To connect the devices, use connectors with protection rating IP 20 or higher (→ **Accessories** (→ p. [94](#))).

## 6.4 IO-Link ports

The IO-Link ports of the device meet the requirements of the IO-Link specification 1.0 to 1.1.2.

- Please note the information concerning IO-Link wiring!



### WARNING


Supply of energy to the IO-Link ports of the IO-Link master

- > Risk of fire!
- Prevent supply and feedback of energy to the IO-Link ports.
- Before set-up check the correct connection of the supply cables.

### 6.4.1 Connect IO-Link devices for Class A operation

Wiring information:

- The connected IO-Link devices must be supplied exclusively via the IO-Link master.
- The additional digital inputs of the IO-Link ports X01...X08 (clamp 2) have a type 2 behaviour according to the standard EN61131-2. The connected electronics must be electrically suited for this.

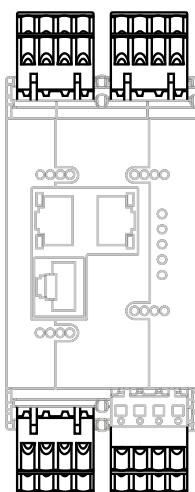


- Connect IO-Link devices to the ports X01...X08.
  - Maximum cable length per IO-Link port: 20 m
- To connect the devices, only use cables with protection rating IP 20 or higher.

## 6.4.2 Connect IO-Link devices for Class B operation

Wiring information:

- For the Class B operation, the IO-Link device must be supplied with an additional auxiliary voltage UA.
- Wiring diagram:

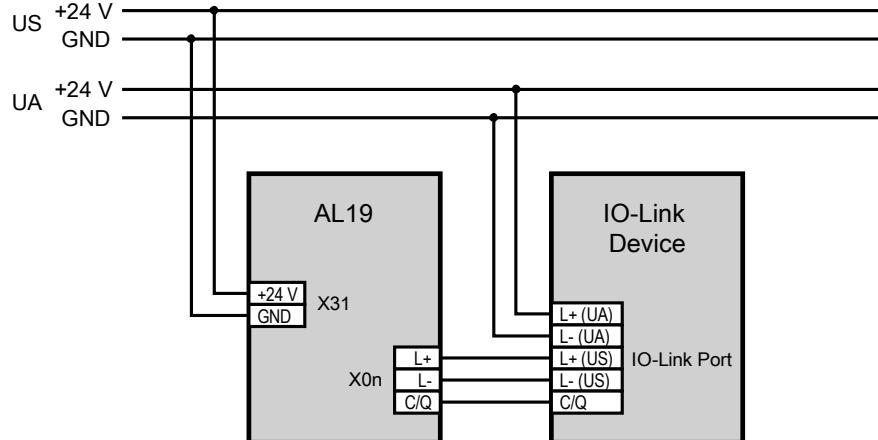


- Permitted maximum current intensity for UA: 4A



### WARNING

Non-compliance with the electrical separation of the circuits


- > Risk of fire!
- ▶ Ensure that the external supply UA is galvanically separated from the circuit of the IO-Link Master by assuring basic insulation (according to IEC 61010-1, secondary circuit with 30 V DC maximum, supplied from mains circuit up to 300 V of overvoltage category II).
- ▶ Ensure that the IO-Link devices and the connection technology support the galvanic separation.

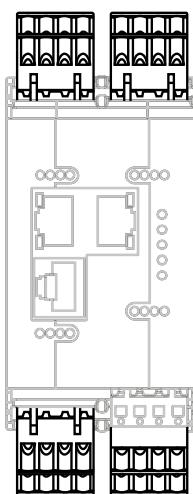

- ▶ Connect the IO-Link devices to the ports X01 ... X08.
  - Maximum cable length per IO-Link port: 20 m
- ▶ Connect the IO-Link devices to UA with 24 V DC (20...30 V SELV/PELV).
- ▶ To connect the IO-Link devices, only use cables with protection rating IP 20 or higher.

## 6.5 Connect the device

33890

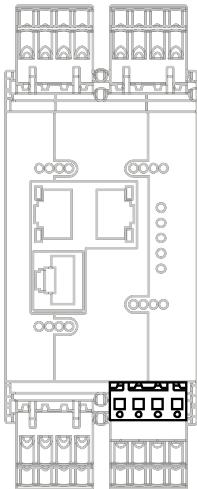

- ▶ Disconnect power.
- ▶ Connect the IO-Link master via port X31 to 24 V DC (20...30 V SELV/PELV).
  - Recommended maximum cable length: 25 m
- ▶ To connect the device, use cables with protection rating IP 20 or higher.



With cable lengths greater than 25 m observe the voltage drop and the necessary minimum supply voltage of 20 V!

## 7 Operating and display elements


### Content

Overview.....	19
LED indicators .....	20

34063

### 7.1 Overview

34353

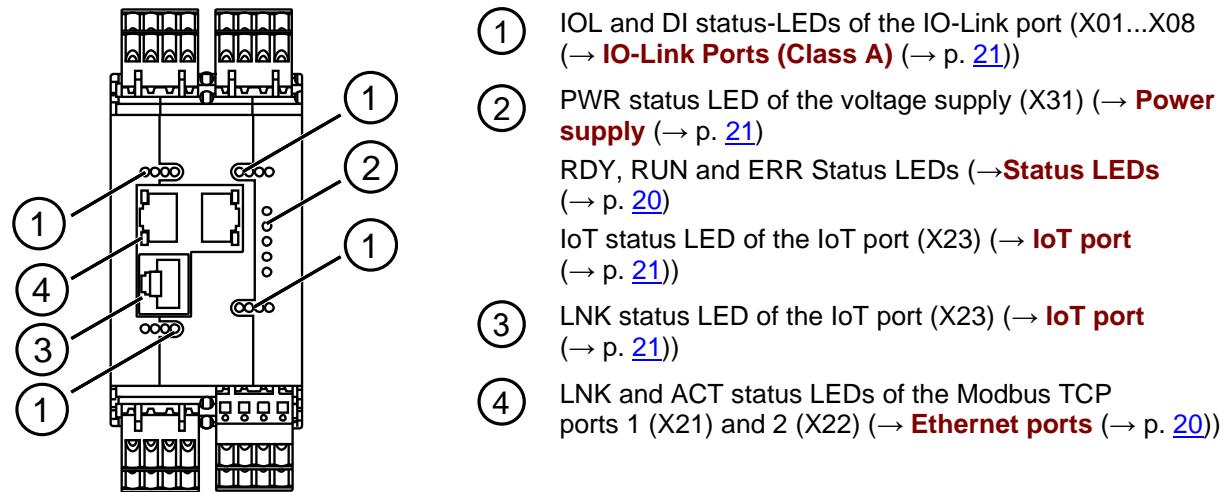

## 7.2 LED indicators

34047

The device only has the following LED indicators:

### 7.2.1 Status LEDs

34436

The RDY LED indicates the status of the gateway.

The RUN LED indicates the current state of the Modbus TCP state machine.

The ERR LED indicates occurring errors.

Status LED		Description	
RDY	green	on	Status: OK
		flashes 5 Hz	Status: Error
		flashes (200 ms on, 800 ms off)	Status: Firmware update is running
		off	Status: Gateway not running or gateway booting
ERR	red	on	communication error
		flashes 10 Hz	boot error
		flashes (200 ms on, 200 ms off, 200 ms on, 1000 ms off)	watchdog error (Modbus TCP or process data)
		flashes (200 ms on, 1000 ms off)	local error
		flashes 2.5 Hz	invalid configuration
		off	no error
RUN	green	on	connection established
		flashes 1 Hz	ready, but not yet configured
		flashes 5 Hz	waiting for connection
		off	not ready

### 7.2.2 Ethernet ports

34348

Each Ethernet port has 2 LEDs (LNK and ACT). The LEDs indicate the status of the Ethernet connection.

Status LED		Description	
LNK	green	on	Ethernet connection established
		off	No Ethernet connection
ACT	yellow	flashes	Data is transmitted via the Ethernet interface.
		off	No data transmission

### 7.2.3 IoT port

34043

The IoT port has the 3 LNK, ACT and IoT LEDs. The LEDs indicate the status of the Ethernet connection and the device identification.

Status LED			Description
LNK	green	on	Ethernet connection established
		off	No Ethernet connection
ACT	yellow	flashes	Data is transmitted via the Ethernet interface.
		off	No data transmission
IoT	green	flashes	Device identification active

### 7.2.4 Power supply

34203

The interface for voltage supply (X31) has the PWR LED. The LED indicates the status of the voltage supply.

Status LED			Description
PWR	green	on	Supply voltage Us is applied
		off	No supply voltage is applied or the applied supply voltage is too low

### 7.2.5 IO-Link Ports (Class A)

34074

Each IO-Link Port Class A has 2 LEDs labelled IOL and DI. The LEDs indicate the status of the IO-Link port.

Status LED			Description
IOL	yellow	Off	Port configured as DI/DO: clamp 4 (C/Q) = OFF
		on	Port configured as DI/DO: clamp 4 (C/Q) =ON
	green	flashing 1 Hz	Port configured as IO-Link: no IO-Link device found
		Flashing with 2 Hz	Port configured as IO-Link: Status PREOPERATE
		on	Port configured as IO-Link: Status OPERATE
		Flashing with 2 Hz	Port configuration error or short circuit / overload on US
		on	Transmission Error
	red	Off	Digital input: clamp 2 = OFF
		on	Digital input: clamp 2 = ON
DI	yellow	Off	Digital input: clamp 2 = OFF
		on	Digital input: clamp 2 = ON

## 8 Set-up

When the supply voltage is switched on, the AL1940 starts with the factory settings. The display elements signal the current operating mode (→ **Operating and display elements** (→ p. 19)).

To enable parameter setting of the AL1940, the IoT interface and / or the fieldbus interface must be configured according to the network environment.

- ▶ Configure IoT interface (LR DEVICE: → **IoT: Configure IP settings** (→ p. 25) or → **IoT: Configuring IP settings** (→ p. 45)).
- ▶ Configure fieldbus interface (LR DEVICE: → **Fieldbus: Configure IP settings** (→ p. 29) or IoT: → **Fieldbus: Configuring the IP settings** (→ p. 49)).
- > IoT / fieldbus interface has valid IP settings.
- > User can set the parameters of the AL1940.

Further steps:

- Optional: Update firmware of AL1940 (→ **Updating the firmware** (→ p. 92)).
- Set the parameters of the AL1940 (→ **Configuration** (→ p. 23)).

## 9 Configuration

### Content

LR DEVICE.....	24
ifm IoT Core.....	36
Modbus TCP.....	79

33858

## 9.1 LR DEVICE

### Content

Remarks .....	25
IoT: Configure IP settings .....	25
IoT: Configure security mode .....	26
IoT: Configuring access rights .....	27
IoT: Configure the interface to LR AGENT or LR SMARTOB SERVER .....	28
Fieldbus: Configure IP settings .....	29
Fieldbus: set the length of the process data.....	30
IO-Link ports: Activate data transfer to LR AGENT or LR SMARTOB SERVER .....	30
IO-Link ports: Configure operating mode .....	31
IO-Link ports: Set the device validation and data storage.....	32
IO-Link ports: set fail-safe values .....	33
Info: Show device information .....	33
Firmware: Reset device to factory settings .....	34
Firmware: Reboot the device.....	34
Configure IO-Link devices .....	35

33692

On delivery, the AL1940 is configured with the factory settings (→ **Factory settings** (→ p. [93](#))).

Required software: LR DEVICE (1.5.0.x or higher) (art.-no.: QA0011/QA0012)

## 9.1.1 Remarks

### Content

Offline parameter setting .....	25
Parameter setting with LR DEVICE.....	25

34180

## Offline parameter setting

34060

The AL1940 supports the offline parameter setting. In this context, the user creates and stores a configuration for the IO-Link master and the connected IO-Link devices without being connected to the AL1940 (OFFLINE mode). The configuration created in this way can be stored as a file (\*.lrp) and loaded to the AL1940 and activated at a later date.



Further information about offline parameter setting: → Operating instructions LR DEVICE

## Parameter setting with LR DEVICE

34437

Parameter setting of the AL1940 with the LR DEVICE is only possible via the IoT interface X23.

## 9.1.2 IoT: Configure IP settings

34049

For access to the IO-Link master via the IT infrastructure the user has to set the IP settings of the IoT port.



To configure the IP settings with DHCP, a DHCP server has to be active in the IT network. If no DHCP server can be reached in the IT network, an IP address is automatically assigned to the IoT port with the Zeroconfig protocol (address range: → **Factory settings** (→ p. [93](#))).

To configure the IP settings of the IoT interface:

- ▶ Select [IoT] menu.
- > The menu page shows the current settings.
- ▶ Set the following parameters as required:

Name	Description	Possible values	
[DHCP]	Activate/deactivate the DHCP client of the device	[Static IP]	IP settings were set by the user
		[DHCP]	IP settings are set by a DHCP server in the network.
[IP address]*	IP address of the IoT port	Factory setting: 169.254.X.X	
[Subnet mask]*	Subnet mask of the Ethernet network	Factory setting: 255.255.0.0	
[Default gateway IP address]*	IP address of the network gateway	Factory setting: 0.0.0.0	
[MAC address]	MAC address of the IoT port	The value is firmly set.	

\* ... can only be edited if parameter [DHCP] = [Static IP]

- ▶ Save changed values on the device.

### 9.1.3 IoT: Configure security mode

The IoT interface of the IO-Link offers a security mode. It enables secure data transmission via transport encryption and restriction of the access to IO-Link masters and IO-Link devices via user authentication.

To configure the security mode:

- ▶ Select [IoT] menu.
- > The menu page shows the current settings.
- ▶ Set the following parameters as required:

Name	Description	Possible values	
[Security mode HTTPS]	Set the security mode	[Disabled]	Security mode disabled
		[Enabled]	Security mode enabled
[Security password]	Password Note: The set password is not displayed.		

- ▶ Save changed values on the device.

 The security mode only protects the access to the device via the IoT interface.  
The user name "administrator" cannot be changed.

 The security mode can be enabled without setting the password. During the attempt to write to the device, LR DEVICE requires to enter and confirm the password.

After entering the password, the user has unrestricted access to IO-Link masters and connected IO-Link devices. The password will only be requested again if the current LR DEVICE session is over (e. g. after restarting the LR DEVICE).

To change the set password:

- ▶ Sign in with a valid password.
- ▶ Enter the new password in the field [Security password].
- ▶ Write changes to the device.
- > The new password is set.

## 9.1.4 IoT: Configuring access rights

The access rights define which instance may read and / or write the parameter data, process data and event/diagnostic messages.

In order to configure the access rights to the IO-Link master:

- ▶ Select [IoT] menu.
- > The menu page shows the current settings.
- ▶ Set the following parameters as required:

Name	Description	Possible values	
[Access Rights]	The access rights to the parameter data, process data and the event/diagnostic messages of the IO-Link master as well as the connected IO-Link devices	[Modbus TCP + IoT]*	<ul style="list-style-type: none"> <li>▪ Modbus TCP and IoT Core have read and write access rights to parameters and process data</li> <li>▪ Modbus TCP and IoT Core have read access rights to events/alarms</li> </ul>
		[Modbus TCP + IoT (read-only)]	<ul style="list-style-type: none"> <li>▪ Modbus TCP has read and write access rights to parameters and process data</li> <li>▪ Modbus TCP has read access rights to events/alarms</li> <li>▪ IoT Core only has read access rights to parameters, process data and events/alarms</li> </ul>
		[IoT only]	<ul style="list-style-type: none"> <li>▪ IoT Core has read and write access rights to parameters and process data</li> <li>▪ IoT has read access rights to events/alarms</li> <li>▪ Modbus TCP has no access rights</li> </ul>

\* ... Factory setting

- ▶ Save changed values on the device.



If in LR DEVICE and Modbus TCP projection software the parameter [Access Rights] is = [Modbus TCP + IoT], the parameter values set in the Modbus TCP projection software will always apply.

If the parameter [Access Rights] in LR DEVICE is = [IoT only], set the parameter [Access Rights] = [Keep settings] in the Modbus TCP projection software.

If the parameter [Access Rights] in LR DEVICE is = [<Fieldbus> + IoT (read-only)], write access to the device configuration via LR DEVICE and IoT core services is blocked. To enable write access again, set the parameter to [<Fieldbus> + IoT] via fieldbus configuration software.

Changes of the parameter [Access Rights] will only be effective after restarting the IO-Link master (→ **Firmware: Reboot the device** (→ p. [34](#))).

## 9.1.5 IoT: Configure the interface to LR AGENT or LR SMARTOB SERVER

To enable transfer of process data from the IO-Link master to LR AGENT or LR SMARTOB SERVER, the interface has to be configured accordingly.

- ▶ Select [IoT] menu.
- > The menu page shows the current settings.
- ▶ Set the following parameters as required:

Name	Description	Possible values	
[IP address LR Agent or SMARTOB SERVER]	IP address of LR AGENT or LR SMARTOB SERVER	Factory setting: 255.255.255.255	
[Port LR Agent or SMARTOB SERVER]	Port number that is used to send process data to LR AGENT or LR SMARTOB SERVER	0 ... 65535	Factory setting:: 35100
[Interval LR Agent or SMARTOB SERVER]	Cycle time for the transfer of the process data to LR AGENT or LR SMARTOB SERVER (value in milliseconds)	[Off] 500 ... 2147483647	no transfer 500 ms ... 2147483647 ms
[Application Tag]	Source identifier of the IO-Link master in the structure of LR AGENT or LR SMARTOB SERVER (String32)	Factory setting: AL1940	

-  After changing the parameter [Port LR Agent or SMARTOB SERVER] or [Application Tag], it may take 120 seconds before the device establishes a new TCP connection.  
 To prevent the delay:  
 ▶ Reboot the device after changing the the parameter.  
 ▶ Save changed values on the device.

## 9.1.6 Fieldbus: Configure IP settings

 The configuration of the IP settings of the fieldbus port is only possible via LR DEVICE and IoT.

To configure the IP settings of the Modbus TCP interface:

- ▶ Select [Fieldbus] menu.
- > The menu page shows the current settings.
- ▶ Set the following parameters as required:

Name	Description	Possible values	
[DHCP]	Activate / deactivate the DHCP client of the device	[Static IP]	IP parameters are set by the user
		[DHCP]	IP parameters are set by a DHCP server in the network.
		[BOOTP]	IP parameters are set via the Bootstrap Protocol (BOOTP)
[IP address]*	IP address of the Modbus TCP interface	Factory setting:: 192.168.1.250	
[Subnet mask]*	Subnet mask of the IP network	Factory setting: 255.255.255.0	
[Default gateway IP address]*	IP address of the gateway	Factory setting: 0.0.0.0	
[MAC address]	MAC address of the Modbus TCP interface	The value is firmly set.	
[Fieldbus firmware]	Firmware version of the Modbus TCP stack	e.g. 2.6.0.5	
[connectiontimeout]	Max. value for Connection Timeout (value in milliseconds)	1 ... 300000	

\* ... Parameter nur editierbar, wenn Parameter [DHCP] = [Static IP]

- ▶ Save changed values on the device.

### 9.1.7 Fieldbus: set the length of the process data

To set the length of the process data to be transmitted and the arrangement of the bytes:

- Select [Fieldbus] menu.
- > The menu page shows the current settings.
- Set the following parameters as required:

Name	Description	Possible values	
[Process data length]	Length of the process input data and process output data per IO-Link port	2 bytes input 2 bytes output	2 bytes input data, 2 bytes output data
		4 bytes input 4 bytes output	4 bytes input data, 4 bytes output data
		8 bytes input 8 bytes output	8 bytes input data, 8 bytes output data
		16 bytes input 16 bytes output	16 bytes input data, 16 bytes output data
		32 bytes input 32 bytes output	32 bytes input data, 32 bytes output data
[Swap]	Arrangement of the bytes in process data	off	as Array of Bytes
		on	as Integer16 value; during an update of the process data, bytes are exchanged word by word (input data and output data)

- Save changed values on the device.

### 9.1.8 IO-Link ports: Activate data transfer to LR AGENT or LR SMARTOB SERVER

The user can decide separately for each IO-Link port whether the process data of the connected IO-Link devices should be transferred to LR AGENT or LR SMARTOB SERVER.



To transfer process data the interface to the LR AGENT or LR SMARTOB SERVER has to be correctly configured (→ **IoT: Configure the interface to LR AGENT or LR SMARTOB SERVER** (→ p. [28](#))).

To activate / deactivate data transfer:

- Select [Port x] menu (x = 1...8).
- > The menu page shows the current settings.
- Set the following parameters as required:

Name	Description	Possible values	
[Transmission to LR Agent or SMARTOB SERVER]	Transfer of process data of the connected IO-Link device to LR AGENT oder LR SMARTOB SERVER	[Disabled]	Transfer process data
		[Enabled]	Don't transfer process data

- Save changed values on the device.

## 9.1.9 IO-Link ports: Configure operating mode

The IO-Link ports X01...X08 of the device support the following operating modes:

- Disabled: no data transfer at clamp 4 (C/Q) of the IO-Link port
- Digital input (DI): binary input signal at clamp 4 (C/Q) of the IO-Link port
- Digital output (DO): binary output signal at clamp 4 (C/Q) of the IO-Link port
- IO-Link: IO-Link data transfer via clamp 4 (C/Q) of the IO-Link port

The user can set the operating mode separately for each IO-Link port.

To set the operating mode of an IO-Link port:

- ▶ Select [Port x] menu (x = 1...8).
- > The menu page shows the current settings.
- ▶ Set the following parameters as required:

Name	Description	Possible values	
[Mode Pin4 US]	Operating mode of clamp 4 of the IO-Link port	[Disabled]	Port deactivated
		[DI]	Operation as digital input
		[DO]	Operation as digital output
		[IO-Link]	Operation as IO-Link interface
[Cycle time actual]**	Current cycle time of the data transfer between IO-Link master and IO-Link device on the port (value in microseconds)	Parameter can only be read	
[Cycle time preset]*	Cycle time of the data transfer between the IO-Link master and the IO-Link device at the port (value in microseconds)	0	The device automatically sets the fastest possible cycle time.
		1	1 microsecond
		...	...
		132800	132800 microseconds
[Bitrate]**	Current transmission rate of the data transfer between the IO-Link master and the IO-Link device on the port	Parameter can only be read	

\* ... Parameter only available if [Mode] = [IO-Link]

\*\* ... Parameter only visible if the IO-Link device is connected to the IO-Link port.

- ▶ Save changed values on the device.

## 9.1.10 IO-Link ports: Set the device validation and data storage

The user can choose how the IO-Link ports are to behave with regard to the device validation and the storage / recovery of parameter data of the connected IO-Link device.

The following options are available:

Option	Validation of the IO-Link device	Storage of the parameter values	Recovery of the parameter values
[No check and clear]	no	no	no
[Type compatible V1.0 device]	yes, test the compatibility with IO-Link standard V1.0	no	no
[Type compatible V1.1 device]	yes, test the compatibility with IO-Link standard V1.1	no	no
[Type compatible V1.1 device with Backup + Restore]	yes, test the compatibility with IO-Link standard V1.1 and identity of design (vendor ID and device ID)	yes, automatic storage of the parameter values; changes of the current parameter values will be stored	yes, recovery of the parameter values when connecting an identical IO-Link device with factory settings
[Type compatible V1.1 device with Restore]	yes, test the compatibility with IO-Link standard V1.1 and identity of design (vendor ID and device ID)	no, there is no automatic storage changes of the current parameter values will not be stored	yes, recovery of the parameter values when connecting an identical IO-Link device with factory settings



The options only apply if the IO-Link port is in the operating mode "IO-Link".

For options [Type compatible V1.1 device with Backup + Restore] and [Type compatible V1.1 device with Restore]: If the vendor ID and device ID are changed in the online mode, the data memory will be deleted and a new backup of the parameter values of the connected IO-Link device will be created in the IO-Link master.

To configure the device validation and the data storage:

- ▶ select [Port x] menu (x = 1...8).
- > The menu page shows the current settings.
- ▶ Set the following parameters as required:

Name	Description	Possible values	
[Validation / Data Storage]	Supported IO-Link standard and behaviour of the IO-Link master when connecting a new IO-Link device at port x (x = 1...8)	[No check and clear]	
		[Type compatible V1.0 device]	
		[Type compatible V1.1 device]	
		[Type compatible V1.1 device with Backup + Restore]	
		[Type compatible V1.1 device with Restore]	
[Vendor ID]	ID of the manufacturer that is to be validated	0...65535	Factory setting: 0# ifm electronic: 310
[Device ID]	ID of the IO-Link device that is to be validated	0...16777215	Factory setting: 0

- ▶ Save changed values on the device.

### 9.1.11 IO-Link ports: set fail-safe values

34459

In case the Modbus TCP connection is interrupted, fail-safe values can be assigned to the outputs of the IO-Link ports.

To set the fail-safe values of the IO-Link ports:

- Select [Port x] menu (x = 1...8).
- > The menu page shows the current settings.
- Set the following parameters as required:

Name	Description	Possible values	
[Fail-safe digital out]	Fail-safe values for output (operating mode "DO")	Reset	Reset value (LOW)
		Old	hold old value
		Set	Set value (HIGH)
[Fail-safe IO-Link]	Fail-safe value for output (operating mode "IO-Link")	Off	no fail-safe value
		Reset	reset value
		Old	hold old value
		Pattern	provide sample

- Save changed values on the device.

### 9.1.12 Info: Show device information

34065

To read the general information of the ifm IO-Link master:

- Select [Info] menu.
- > The menu page shows the current settings.

Name	Description	Possible values
[Product code]	Article number of the IO-Link master	AL1940
[Device family]	Device family of the IO-Link master	IO-Link master
[Vendor]	Vendor	ifm electronic gmbh
[SW-Revision]	Firmware of the IO-Link master	
[HW revision]	Hardware version of the IO-Link master	
[Bootloader revision]	Bootloader version of the IO-Link master	
[Serial number]	Serial number	

### 9.1.13 Firmware: Reset device to factory settings

33838

When the IO-Link master is reset, all parameters are set to the factory settings:

To reset the device to factory settings:

- ▶ Select [Firmware] menu.
- > The menu page shows the current settings.
- ▶ Click on [Factory Reset] to reset the device.
- > LR DEVICE sets the device to the factory settings.

### 9.1.14 Firmware: Reboot the device

33832

When rebooting the device, all settings are kept.

To restart the AL1940:

- ▶ Select [Firmware] menu.
- > The menu page shows the current settings.
- ▶ Click on [Reboot] to reboot the device.
- > LR DEVICE reboots the ifm IO-Link master.

## 9.1.15 Configure IO-Link devices

To configure the IO-Link devices connected to the device with the LR DEVICE parameter setting software:

**Requirements:**


- > IO-Link master is correctly installed and connected to the LR DEVICE parameter setting software.
- > The IO-Link device is connected correctly with the AL1940.
- > Operating mode of the IO-Link port is "IO-Link" (→ **IO-Link ports: Configure operating mode** (→ p. 31)).
- > IoT has write access rights to the IO-Link master (→ **IoT: Configuring access rights** (→ p. 27)).

**1 Select IO-Link master**

- ▶ Start LR DEVICE.
- ▶ Update IODD file library  
OR:  
Import IODD file of the IO-Link device manually.
- ▶ Scan network for devices.
- > LR DEVICE detects IO-Link master.

**2 Add IO-Link device**

- ▶ Under [ONLINE]: Click on the required IO-Link master.
- > LR DEVICE automatically detects the IO-Link devices connected to the IO-Link master (e.g. ifm sensor KG5065).

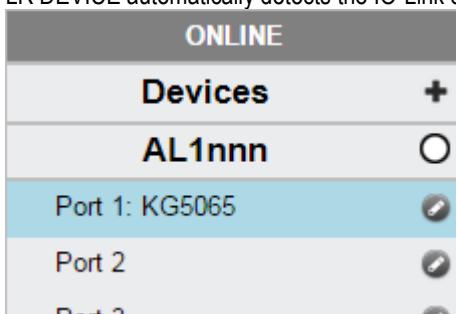

**3 Configure IO-Link device**

- ▶ Mouse click on the port to which the IO-Link device is connected.
- > LR DEVICE reads and shows the current parameter values of the IO-Link device.
- ▶ Configure IO-Link device.



Information about the available parameters of the IO-Link device: → IO Device Description (IODD) des IO-Link Devices

- ▶ Save the changed configuration on the IO-Link device.

## 9.2 ifm IoT Core

### Content

Programmers' notes .....	37
First steps .....	41
General functions .....	41
IoT: Configuring access rights .....	45
IoT: Configuring IP settings .....	45
IoT: Configuring the LR AGENT or LR SMARTOB SERVER interface .....	46
IoT: Configuring security mode .....	46
Fieldbus: Configuring the IP settings .....	49
Fieldbus: Configuring the fieldbus interface .....	49
Fieldbus: Setting fail-safe values .....	50
IO-Link ports: Setting the operating mode of pin 4 (US) .....	50
IO-Link ports: Configuring device validation and data storage .....	51
IO-Link ports: Configuring data transfer to LR AGENT or LR SMARTOB SERVER .....	53
IO-Link ports: Reading / writing process data .....	53
IO-Link ports: Indicating port events .....	56
IO-Link devices: Accessing parameters .....	56
IO-Link devices: Reading and writing device information .....	58
IO-Link devices: Indicating IO-Link events .....	58
Gateway: Resetting, rebooting and localising the device .....	58
Gateway: Reading device information .....	59
Gateway: Reading status and diagnostic information .....	59
Gateway: Updating the firmware .....	60
Gateway: Setting the application tag .....	61
Subscribing to notifications .....	62
Using Web Socket .....	66
MQTT support .....	68
Using the IoT-Core Visualizer .....	72

52244



General notes on the ifm IoT Core: → **Programmers' notes** (→ p. [37](#))

## 9.2.1 Programmers' notes

### Content

IoT Core: General information .....	37
Access the ifm IoT Core .....	38
IoT Core: Diagnostic codes .....	40
	34229

### IoT Core: General information

52256

The CabinetLine device family has an IoT Core. The IoT Core allows the user to address the AL1940 from IT networks via a REST API and to integrate it into Internet-of-Things applications.

A device description is stored on the AL1940. This device description is a structured, machine-readable data object in JSON format. All current values of parameters, process data, diagnostic data and device information are mapped in this data object. These data values can be read and changed by means of services.

## Access the ifm IoT Core

52257

The user can access the ifm IoT Core via HTTP requests. The following request methods are available.

### GET request

33804

Using the GET method the user has read access to a data point.

The syntax of the request to the IoT Core is:

`http://ip/datapoint/service`

Parameter	Description
ip	IP address of the IoT interface
data_point	Data point which is to be accessed
service	Service

The syntax of the return of the IoT Core is:

```
{
  "cid":id,
  "data":{"value":resp_data},
  "code":diag_code
}
```

Parameter	Description
id	Correlation ID for the assignment of request and return
resp_data	Value of the data point; depending on the data type of the data point
diag_code	Diagnostic code (→ <b>IoT Core: Diagnostic codes</b> (→ p. 40))

### Example: GET request

54033

Request (via browser):

`http://192.168.0.250/devicetag/applicationtag/getdata`

Response:

```
{
  "cid":-1,
  "data":{"value":"AL1940"},
  "code":200
}
```

## POST request

Using a POST request the user has read and write access to a data point.

The syntax of the request to the IoT Core is:

```
{
  "code": "code_id",
  "cid": id,
  "adr": "data_point/service",
  "data": {req_data},
  "auth": {"user": "usr_id", "passwd": "password"}
}
```

Field	Parameter	Description	
code	code_id	Service class	
		▪ request	Request
		▪ transaction	Transaction
		▪ event	Event
cid	id	Correlation ID for the assignment of request and response; ID freely assignable by the user	
adr	data_point	Data point of the element tree which is to be accessed	
	service	Service to be performed (→ <b>Overview: IoT services</b> (→ p. <a href="#">138</a> ))	
data*	req_data	Data to be transferred to the IoT Core (e.g. new values); syntax depending on the service	
auth**	usr_id	user name (base64 coded); default value: administrator	
	password	password (base64 coded)	

\* = optional; only required for services, that submit data to the IoT core (e. g. setdata)

\*\* = optional; only required, if security mode is activated

The syntax of the return of the IoT Core is:

```
{
  "cid": id,
  "data": {resp_data},
  "code": diag_code
}
```

Field	Parameter	Description
cid	id	Correlation ID for the assignment of request and response (see request)
data*	resp_data	Value of the data point; syntax depending on the service
code	diag_code	Diagnostic code (→ <b>IoT Core: Diagnostic codes</b> (→ p. <a href="#">40</a> ))

\* = optional; only required for services, that receive data from the IoT core (e.g. getdata)

## Example: POST request

Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "devicetag/applicationtag/getdata"
}
```

Response:

```
{
  "cid":4711,
  "data": {"value": "AL1940"},
  "code":200
}
```

## IoT Core: Diagnostic codes

54688

Code	Text	Description
200	OK	Request successfully processed
230	OK but needs reboot	Request successfully processed; IO-Link master must be restarted
231	OK but block request not finished	Request successfully processed; blockwise request, but not yet finished
232	Data has been accepted, but internally modified	New values have been accepted, but were adjusted by the IO-Link master (Master cycle time)
233	IP settings (of IoT-Port) have been updated. Application needs to reload device. Wait at least 1 second before reloading device.	IP settings have been successfully changed, IO-Link master will be reloaded; wait for at least 1 second
400	Bad request	Invalid request
401	Unauthorized	Non authorised request
403	Forbidden	Forbidden request
500	Internal Server Error	Internal fault
503	Service Unavailable	The service is not available (e. g. IO-Link port in wrong operating mode; no IO-Link device at IO-Link port)
530	The requested data is invalid	Invalid process data
531	IO-Link error	Error in IO-Link Master / device
532	PLC connected Error	Error while setting data, because IO-Link master is still connected to fieldbus PLC

## 9.2.2 First steps

To read the device description of the AL1940:

- ▶ Send the following POST request to the AL1940:  
`{"code": "request", "cid": -1, "adr": "gettree"}`
- > AL1940 returns the device description as structured JSON object.
- ▶ Identify all substructures and the data points contained therein in the tree structure of the JSON object.
- ▶ Identify the applicable services for the access to substructures and the data points contained therein.

## 9.2.3 General functions

The AL1940 has the type device (→ **Overview: IoT types** (→ p. [137](#))).

The following services can be used on the root element of the type device:

Service	Description
../gettree	Provide the complete tree or subtree of the device description (JSON)
../getidentity	Reading device information
../getdatamulti	Reading several parameter values sequentially
../getelementinfo	Reading detailed information of an element
../getsubscriberlist	Print a list of all active notification subscriptions
../querytree	Search device description for specific elements

Depending on the read and write access rights, the following services can be applied to elements of type data:

Service	Description
../getdata	Reading the value of the element
../setdata	Write the value of the element

## Example: Reading properties of an element

**Task:** Determine the data type and value range of the `accessrights` parameter.

**Solution:** Read the properties of the element `iotsetup/accessrights` of the `getelementinfo` service. The fields `type` (data type) and `valuation` (range of values) contain the required information.

- Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "getelementinfo",
  "data": {"adr": "iotsetup/accessrights"}
}
```

- Response:

```
{
  "cid": 4711,
  "data": {
    "identifier": "accessrights",
```

```

"type": "data",
"uid": null,
"profiles": ["parameter"],
"format": {
  "type": "enum",
  "namespace": "json",
  "encoding": "integer",
  "valuation": {
    "valuelist": {
      "0": "Fieldbus + IoT",
      "1": "Fieldbus + IoT (read-only)",
      "3": "IoT only"
    }
  },
  "code": 200
}

```

The accessrights parameter has the data type ENUM with the valid values "Fieldbus + IoT", "Fieldbus + IoT (read only)" and "IoT only".

## Example: output subtree

61149

**Task:** Output all direct sub-elements of the node `firmware`.

Solution: Use the service `gettree` to output the required subtree (root node: `firmware`, sub-levels to be shown: 1)

- Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "gettree",
  "data": {
    "adr": "firmware",
    "level": 1
  }
}
```

- Response:
- ```
{
  "cid": 4711,
  "data": {
    "identifier": "firmware",
    "type": "structure",
    "profiles": [
      "software", "software/uploadablesoftware"
    ],
    "subs": [
      {
        "identifier": "version", "type": "data", "profiles": ["parameter"],
        "format": {"type": "string", "namespace": "json", "encoding": "UTF-8"},

        {
          "identifier": "type", "type": "data",
          "format": {"type": "string", "namespace": "json", "encoding": "UTF-8"},

          {
            "identifier": "install", "type": "service",
            {
              "identifier": "factoryreset", "type": "service",
              {
                "identifier": "signal", "type": "service",
                {
                  "identifier": "container", "type": "data",
                  "format": {"type": "binary", "namespace": "json", "encoding": "base64"}
                }
              }
            }
          }
        }
      }
    ]
  }
}
```

```
{
  "identifier": "reboot", "type": "service"}]
},
"code": 200
}
```

## Example: Read several parameter values of the IO-Link master simultaneously

33840

**Task:** The following current values are to be read by the IO-Link master: temperature, serial number

**Solution:** Read the current parameter values using the getdatamulti service (data point temperature: /processdatamaster/temperature; data point serial number: /deviceinfo/serialnumber)

- Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/getdatamulti",
  "data": {"dataToSend": ["/processdatamaster/temperature", "/deviceinfo/serialnumber"]}
}
```

- Response:

```
{
  "cid": 4711,
  "data": {"processdatamaster/temperature": {"code": 200, "data": 44},
            "deviceinfo/serialnumber": {"code": 200, "data": "000174210147"}},
  "code": 200
}
```

## Example: Browsing device description

61150

**Task:** List all elements with the designation "status" and the profile "runcontrol".

**Solution:** Use the service querytree to browse the device description with the parameters "status" (name) and "runcontrol" (profile)

- Request:

```
{
  "cid": 4711,
  "adr": "querytree",
  "code": "request",
  "data": {
    "profile": "runcontrol",
    "name": "status"
  }
}
```

- Response:

```
{
  "cid": 4711,
  "data": {
    "adrList": [
      "device/connections/mqttConnection/status",
      "device/connections/mqttConnection/mqttCmdChannel/status"
    ],
    "code": 200
}
```

61153

The IoT Core offers the possibility to set the storage duration of data and notifications. The Services **Service: setdata** (→ p. [148](#)) and **Service: subscribe** (→ p. [150](#)) therefore have the parameter "duration".

## Example: Subscribing to notifications

61154

**Task:** The current values of the following parameters are to be sent regularly to a network server with IP address 192.168.0.4:

- Product name of the IO-Link Devices an IO-Link port X02
- Cyclic input data of the IO-Link Devices an IO-Link port X02
- Operating temperature of the IO-Link master.

The subscription is only to be active until the next restart of the IO-Link master.

**Solution:** Subscribe to the required data using the subscribe service.

- Request:

```
{  
  "code": "request",  
  "cid": 4711,  
  "adr": "/timer[1]/counter/datachanged/subscribe",  
  "data": {  
    "callback": "http://192.168.0.4:80/temp",  
    "datatosend": [  
      "/iolinkmaster/port[2]/iolinkdevice/productname",  
      "/iolinkmaster/port[2]/iolinkdevice/pdin",  
      "/processdatamaster/temperature"],  
    "duration": "uptime"  
  }  
}
```

- Response:

```
{  
  "cid": 4711,  
  "code": 200  
}
```

## 9.2.4 IoT: Configuring access rights

59785

Substructure: iotsetup

Available data points:

| Name            | Description                         | Access |
|-----------------|-------------------------------------|--------|
| ../accessrights | Access rights to the IO-Link master | rw     |

rw ... read and write

 If in IoT and Modbus TCP projection software the parameter [Access Rights] is = [Modbus TCP + IoT], the parameter values set in the Modbus TCP projection software will always apply.

If in IoT the parameter [Access Rights] is = [IoT only], set the parameter [Access Rights] = [Keep settings] in the Modbus TCP projection software.

If in LR DEVICE the parameter [Access Rights] is = [EtherCAT + IoT (read-only)], write access to the device configuration via LR DEVICE and IoT core services is blocked. To enable write access again, set the parameter to [EtherCAT + IoT] via fieldbus configuration software.

Changes of the parameter [Access Rights] will only be effective after restarting the IO-Link master (→ **Firmware: Reboot the device** (→ p. [34](#))).

## 9.2.5 IoT: Configuring IP settings

61155

Substructure: iotsetup

Available data points:

| Name                        | Description                                      | Access |
|-----------------------------|--------------------------------------------------|--------|
| ../network/dhcp             | Configuration of the IP settings of the IoT port | rw     |
| ../network/ipaddress        | IP address of the IoT port                       | rw     |
| ../network/subnetmask       | Subnet mask of the network segment               | rw     |
| ../network/ipdefaultgateway | IP address of the network gateway                | rw     |

rw ... read and write

Applicable services:

| Name                | Description                                    |
|---------------------|------------------------------------------------|
| ../network/setblock | Write all values of the substructure blockwise |

 Change the IP parameters in the substructure network only blockwise with the setblock service!

## 9.2.6 IoT: Configuring the LR AGENT or LR SMARTOB SERVER interface

59786

Substructure: iotsetup

Available data points:

| Name            | Description                                                                  | Access |
|-----------------|------------------------------------------------------------------------------|--------|
| ../smobip       | IP address of the LR SMARTOB SERVER                                          | rw     |
| ../smobport     | Port number of the LR SMARTOB SERVER                                         | rw     |
| ../smobinterval | Cycle time for data transmission to LR SMARTO SERVER (value in milliseconds) | rw     |

rw ... read and write

## 9.2.7 IoT: Configuring security mode

54683

The access to the IoT interface of the IO-Link master can be protected with a security mode:

Substructure: iotsetup

Available data points:

| Name                     | Description                                | Access |
|--------------------------|--------------------------------------------|--------|
| ../security/securitymode | active security mode                       | rw     |
| ../security/password     | Password for authentication (Base64 coded) | w      |

rw ... read and write

w ... write only



Valid character set for the Base64 coding / decoding of the password: UTF-8

Online tool for coding / decoding: → [www.base64encode.org](http://www.base64encode.org)

### Note: Security mode

54684

The security mode enables restricting access to the IO-Link master and the connected IO-Link devices from the IT network. In the activated security mode, the following restrictions apply:

- Access only with authentication (password-protected user account)
- Access only via secure https connection (Transport Layer Security - TLS)



The security mode only protects the access to the device via the IoT interface.

The standard value for users is: administrator

The set password cannot be read with getdata.

The current status of the security function can be read with the getidentity service (→ **Servicet: getidentity** (→ p. [141](#))).For the authentication, the user must additionally provide the POST requests with a valid user name and password in the field "auth". The user name and the password will be shown as Base64-coded character strings (→ **Example: Request with authentication** (→ p. [47](#))).

The following requests can be done if the security mode is enabled, also without authentication:

- /getidentity
- /deviceinfo/vendor/getdata
- /deviceinfo/productcode/getdata

## Example: Activate security mode

**Task:** Activate the security mode of the IO-Link interface of the IO-Link master. Set the password "password" (Base64 coded: cGFzc3dvcmQ=)

**Solution:** The activation consists of 2 steps:

### 1 Activate security mode

Use service setdata with datapoint iotsetup/security/securitymode to activate the security mode.

- Request:

```
{
  "code": "request",
  "cid": -1,
  "adr": "/iotsetup/security/securitymode/setdata",
  "data": {"newvalue": "1"}
}
```

- Response:

```
{
  "cid": -1,
  "code": 200
}
```

### 2 Set required password

Use service setdata with data point iotsetup/security/password to set the required password.

- Request:

```
{
  "code": "request",
  "cid": -1,
  "adr": "/iotsetup/security/password/setdata",
  "data": {"newvalue": "cGFzc3dvcmQ="}
}
```

- Response:

```
{
  "cid": -1,
  "code": 200
}
```

## Example: Request with authentication

**Task:** The temperature of the IO-Link master is to be read. The security function is enabled (current password: password).

**Solution:** Read the data point processdatamaster/temperature with the getdata service. The request must be sent using https. The user name and the password are transferred as a Base64-coded character string ("administrator" = "YWRtaW5pc3RyYXRvcg==", "password" = "cGFzc3dvcmQ=")

- Request:

```
{
  "code": "request",
  "cid": -1,
  "adr": "processdatamaster/temperature/getdata",
  "auth": {"user": "YWRtaW5pc3RyYXRvcg==", "passwd": "cGFzc3dvcmQ="}
}
```

- Response:

```
{  
    "cid": -1,  
    "data": {"value": 37},  
    "code": 200  
}
```

## Example: reset password

54686

**Task:** The existing password is to be reset.

**Solution:** To reset a password, disable the security mode. To disable it, enter the user name and the password (the fields "user" and "passwd").

- Request:

```
{  
    "code": "request",  
    "cid": -1,  
    "adr": "iotsetup/security/securitymode/setdata",  
    "data": {"newvalue": 0},  
    "auth": {"user": "YWRtaW5pc3RyYXRvcg==", "passwd": "SW9UNGlmbQ=="}  
}
```

- Response:

```
{  
    "cid": -1,  
    "code": 200  
}
```

## 9.2.8 Fieldbus: Configuring the IP settings

Substructure: fieldbussetup

Available data points:

| Name                        | Description                                        | Access |
|-----------------------------|----------------------------------------------------|--------|
| ../fieldbusfirmware         | Firmware version of the IO-Link master             | r      |
| ../network/macaddress       | MAC address of the fieldbus interface              | r      |
| ../network/ipaddress        | IP address of the fieldbus interface               | rw*    |
| ../network/subnetmask       | Subnet mask of the network segment                 | rw*    |
| ../network/ipdefaultgateway | IP address of the network gateway                  | rw*    |
| ../network/dhcp             | Activate / deactivate the DHCP client              | rw     |
| ../connectionstatus         | Status of the connection to the Modbus TCP network | r      |

r ... read only

rw ... read and write

\* ... only editable, if the Modbus TCP plc ist not in RUNNING state

Applicable services:

| Name                | Description                             |
|---------------------|-----------------------------------------|
| ../network/setblock | write all values of substructur at once |



Change the IP parameters in the substructure network only blockwise by using the service setblock!

## 9.2.9 Fieldbus: Configuring the fieldbus interface

Substructure: fieldbussetup/configuration

Available data points:

| Name                        | Description                                | Access |
|-----------------------------|--------------------------------------------|--------|
| ../processdataconfiguration | Length of the process data                 | rw*    |
| ../connectiontimeout        | max. value for fieldbus connection timeout | rw*    |
| ../swap                     | Byte order of process data                 | rw*    |

rw ... read and write

\* ... only editable, if the Modbus TCP plc ist not in RUNNING state

## 9.2.10 Fieldbus: Setting fail-safe values

61441

Substructure: fieldbussetup/configuration/port[n] (n = 1...8)

Available data points:

| Name                  | Description                                                 | Access |
|-----------------------|-------------------------------------------------------------|--------|
| ../failsafedigitalout | Fail-safe value for the digital output - clamp 4 (DO)       | rw*    |
| ../failsafeiolink     | Fail-safe value for output data IO-Link - clamp 4 (IO-Link) | rw*    |

rw ... read and write

\* ... only editable, if the Modbus TCP plc ist not in RUNNING state

## 9.2.11 IO-Link ports: Setting the operating mode of pin 4 (US)

59793

Substructure: iolinkmaster/port[n] (n = 1...8).

Available data points:

| Name                      | Description                                                               | Access |
|---------------------------|---------------------------------------------------------------------------|--------|
| ../mode                   | Operating mode of the IO-Link port                                        | rw*    |
| ../mastercycletime_preset | Cycle time of the data transfer at the IO-Link port (value in ms)         | rw*    |
| ../mastercycletime_actual | Current cycle time of the data transfer at the IO-Link port (value in ms) | r      |
| ../comspeed               | Data transfer rate of the IO-Link port                                    | r      |

r ... read only

rw ... read and write

\* ... only changeable, if the &lt;Fieldbus&gt; plc is not in RUNNING state

## 9.2.12 IO-Link ports: Configuring device validation and data storage

59792

Substructure: `/iolinkmaster/port[n]` ( $n = 1 \dots 8$ ).

Available data points:

| Name                                        | Description                                                         | Access           |
|---------------------------------------------|---------------------------------------------------------------------|------------------|
| <code>../validation_datastorage_mode</code> | Response of the IO-Link port when a new IO-Link device is connected | <code>rw*</code> |
| <code>../validation_vendorid</code>         | IO-Link ID of the manufacturer that is to be validated              | <code>rw*</code> |
| <code>../validation_deviceid</code>         | IO-Link ID of the device that is to be validated                    | <code>rw*</code> |
| <code>../datastorage</code>                 | Structure for port data storage                                     | <code>rw</code>  |
| <code>../datastorage/maxsize</code>         | Maximum size of the data storage content (in bytes)                 | <code>r</code>   |
| <code>../datastorage/chunksize</code>       | Size of a data segment (in bytes)                                   | <code>r</code>   |
| <code>../datastorage/size</code>            | Size of the data storage content (in bytes)                         | <code>r</code>   |

`r` ... read only

`rw` ... read and write

\* ... can only be changed if the Modbus TCP PLC is not in RUNNING state

Applicable services:

| Service                                       | Description                                                |
|-----------------------------------------------|------------------------------------------------------------|
| <code>../validation_useconnecteddevice</code> | Validate the IO-Link device connected to the IO-Link port* |
| <code>../datastorage/getblobdata</code>       | Reading the content of the data storage area               |
| <code>../datastorage/stream_set</code>        | Transfer an individual data segment*                       |
| <code>../datastorage/start_stream_set</code>  | Start sequential transmission of several data segments*    |

\* ... can only be changed if the Modbus TCP PLC is not in the RUNNING state

### Example: Clone the Data Storage of an IO-Link port

52344

**Task:** Save the Data Storage of IO-Link port X02 of IO-Link master 1 and restore the data at IO-Link master 2.

**Solution:** The cloning process consists of 2 steps. In the first step, the Data Storage of the IO-Link port of IO-Link master 1 is saved. In the second step, the saved data is restored at the Data Storage of port IO-Link port of IO-Link master 2.

Save Data Storage:

#### 1 Preparations

- ▶ Read size of segments of Data Storage ( $h$  = number of bytes):  
`{"code": "request", "cid": -1, "adr": "/iolinkmaster/port[2]/datastorage/chunksize/getdata"}`  
Example:  $h = 256$

- ▶ Read total size of Data Storage area ( $g$  = number of bytes):  
`{"code": "request", "cid": -1, "adr": "/iolinkmaster/port[2]/datastorage/size/getdata"}`  
Example:  $g = 550$

- ▶ Calculate the number of reading steps  $n$ :  $n = \text{first integer value to which the following applies: } g < n \cdot h$   
Example:  $n = 3$ , because  $550 < 3 \cdot 256$

#### 2 Read Data Storage of IO-Link port

- ▶ Read Data Storage segment by segment ("pos" is the byte offset, at which the reading process with length "length" starts).  
`{"code": "request", "cid": -1, "adr": "/iolinkmaster/port[2]/datastorage/getblobdata", "data": {"pos": 0, "length": h}}`

```
{"code": "request", "cid": -1, "adr": "/iolinkmaster/port[2]/datastorage/getblobdata", "data": {"pos": h, "length": h}}
{"code": "request", "cid": -1, "adr": "/iolinkmaster/port[2]/datastorage/getblobdata", "data": {"pos": 2*h, "length": h}}
```

...

```
{"code": "request", "cid": -1, "adr": "/iolinkmaster/port[2]/datastorage/getblobdata", "data": {"pos": n*h, "length": h}}
```

Example:

1st read request: pos = 0, length = 256

2nd read request: pos = 256, length = 256

3rd read request: pos = 512, length = 256

- > Each segment value will be returned as BASE64 coded string.

- ▶ Join segments.

Restore Data Storage:

## 1 Preparations

- ▶ Determine the size of the saved Data Storage value (n = number of bytes).

Example: n = 550

- ▶ Read size of segments (s = number of bytes):

```
{"code": "request", "cid": -1, "adr": "/iolinkmaster/port[1]/datastorage/chunksize/getdata"}
```

Example: s = 256

## 2 Transfer Data Storage strings

- ▶ Start transfer of Data Storage string ("size" = size of Data Storage string):

```
{"code": "request", "cid": -1, "adr": "/iolinkmaster/port[1]/datastorage/start_stream_set", "data": {"size": n}}
```

Example: size = 550

- ▶ Transfer Data Storage string segment by segment ("value" = string value of length s):

```
{"code": "request", "cid": -1, "adr": "/iolinkmaster/port[1]/datastorage/stream_set", "data": {"value": "aWZtfgIAAABBTDF4NXhfY25faXRfdDIuMi43Nw..."}}
```

## 9.2.13 IO-Link ports: Configuring data transfer to LR AGENT or LR SMARTOBSERVER

59795

Substructure: `iolinkmaster/port[n]` ( $n = 1 \dots 8$ ).

Available data points:

| Name                           | Description                                  | Access          |
|--------------------------------|----------------------------------------------|-----------------|
| <code>../senddatatosmob</code> | Process data to LR AGENT or LR SMARTOBSERVER | <code>rw</code> |

`rw` ... read and write

## 9.2.14 IO-Link ports: Reading / writing process data

61156

Substructure: `iolinkmaster/port[n]` ( $n = 1 \dots 8$ )

Available data points:

| Name                               | Description                                                | Access           |
|------------------------------------|------------------------------------------------------------|------------------|
| <code>../pin2in</code>             | Value of the digital input on clamp 2 of the IO-Link port  | <code>r</code>   |
| <code>../iolinkdevice/pdin</code>  | Value of the IO-Link input on clamp 4 of the IO-Link port  | <code>r</code>   |
| <code>../iolinkdevice/pdout</code> | Value of the IO-Link output on clamp 4 of the IO-Link port | <code>rw*</code> |

`r` ... read only`rw` ... read and write

\*... can only be changed if the fieldbus PLC is not in RUNNING state

### Example: Read IO-Link process data (operating mode "IO-Link")

33842

**Task:** Read the current measured value of the ifm temperature sensor TN2531 at IO-Link port X02**Solution:** Read the data point for the process input data with the `getdata` service.

- Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/iolinkmaster/port[2]/iolinkdevice/pdin/getdata"
}
```

- Response:

```
{
  "cid": 4711,
  "data": {"value": "03C9"},
  "code": 200
}
```

The return value is given in hexadecimal format. Besides the temperature value the return value comprises additional information (→ IO Device Description (IODD) of the sensor). The temperature value is shown in bits 2 to 15.

0x03C9 = 0b1111001001

Temperature value: 0b11110010 = 242

Therefore: The current temperature value is 24.2 °C.

### Example: Writing IO-Link value (operating mode "IO-Link")

59804

**Task:** Switch on the buzzer of DV2500 at IO-Link Port X2. The DV2500 operates in On/Off mode.

**Solution:** The IODD of the DV2500 shows the structure of the IO-Link process value (→ e.g. LED activity). The buzzer will be switched using bit 40 of the process value (OFF = 0, ON = 1).

To switch the buzzer:

1. Read the current process value (→ **Example: Read IO-Link process data (operating mode "IO-Link")** (→ p. 53)).
2. Set bit 40 of the read value to 1.
3. Write the process value to the IO-Link device.

Example:

Read process value:

0x0000 0000 004D = 0b0000 0000 0000 0000 0000 0000 0000 0000 0000 0000 0100 1101

New process value:

0b0000 0001 0000 0000 0000 0000 0000 0000 0000 0000 0100 1101 = 0x0100 0000 004D

- Request:

```
{
  "code": "request",
  "cid": 10,
  "adr": "iolinkmaster/port[2]/iolinkdevice/pdout/setdata",
  "data": {"newvalue": "0100000004D"}
}
```

- Response:

```
{
  "cid": 10,
  "code": 200
}
```

## Example: Writing digital output (operating mode "DO")

59803

**Task:** Set the output value of the IO-Link devices at IO-Link Port X1 to "ON". The operating mode of the IO-Link port is "Digital Output (DO)".

**Solution:** Write the value 1 to data point pdout. The value has to be written as hexadecimal value with a length of 1 byte (OFF = "00", ON = "01").

- Request:

```
{
  "code": "request",
  "cid": 10,
  "adr": "iolinkmaster/port[1]/iolinkdevice/pdout/setdata",
  "data": {"newvalue": "01"}
}
```

- Response:

```
{
  "cid": 10,
  "code": 200
}
```

## Example: Reading digital input (operating mode "DI")

59802

**Task:** Read the current input value of the IO-Link device at IO-Link port X5. The operating mode of the IO-Link port is "Digital Input (DI)".

**Solution:** Read the value of data point pdin. The value will be returned as hexadecimal value with a length of 1 byte (OFF = "00", ON = "01").

- Request:

```
{  
  "code": "request",  
  "cid": 10,  
  "adr": "iolinkmaster/port[5]/iolinkdevice/pdin/getdata"  
}
```

- Response:

```
{  
  "cid": 10,  
  "data": {"value": "00"},  
  "code": 200  
}
```

## 9.2.15 IO-Link ports: Indicating port events

59796

Substructure: iolinkmaster/port[n] (n = 1...8).

Available data points:

| Name         | Description                                                                                                                                                                                                        | Access |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
| ../portevent | Indication of the following events at IO-Link port n: <ul style="list-style-type: none"><li>▪ plugging IO-Link device</li><li>▪ pulling IO-Link device</li><li>▪ changing operating mode of IO-Link port</li></ul> | r      |

r ... read only



Subscribing events: → **Subscribing to notifications** (→ p. [62](#))

## 9.2.16 IO-Link devices: Accessing parameters

59800

The ifm IoT Core supports the configuration of the connected IO-Link devices. A parameter is accessed via IO-Link index and subindex (→ IO Device Description (IODD) of the device).

Substructure: iolinkmaster/port[n]/iolinkdevice (n = 1...8)

Applicable services:

| Service           | Description                                      |
|-------------------|--------------------------------------------------|
| ../ioreadacyclic  | Read a parameter of an IO-Link device (acyclic)  |
| ../iowriteacyclic | Write a parameter of an IO-Link device (acyclic) |

### Example: Read the parameter value of an IO-Link device

33847

**Task:** Read the serial number of the ifm temperature sensor TN2531 at IO-Link port X02

**Solution:** Read the serial number with the ioreadacyclic service from the IO-Link device (index: 21, subindex: 0)

- **Request:**

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/iolinkmaster/port[2]/iolinkdevice/ioreadacyclic",
  "data": {"index": 21, "subindex": 0}
}
```

- **Return:**

```
{
  "cid": 4711,
  "data": {"value": "4730323134323830373130"},
  "code": 200
}
```

The returned value is given in hexadecimal format. The conversion of the HEX value in a STRING value is: G0214280710

## Example: Change the parameter value of an IO-Link device

33844

**Task:** Set the output configuration OUT1 of the ifm temperature sensor TN2531 at IO-Link port X02 to the value "Hnc / hysteresis function, normally closed".

**Solution:** Change the parameter [ou1] of the sensor to the value 4 using the iolwriteacyclicdata service. The parameter can be accessed via IO-Link index 580, subindex 0 (→ IO-Link description of the sensor).

- Request:

```
{  
  "code": "request",  
  "cid": 4711,  
  "adr": "/iolinkmaster/port[2]/iolinkdevice/iolwriteacyclic",  
  "data": {"index": 580, "subindex": 0, "value": "34"}  
}
```

The value has to be given in hexadecimal format. The conversion of the STRING value in a HEX value is: 34.

- Response:

```
{  
  "cid": 4711,  
  "code": 200  
}
```

## 9.2.17 IO-Link devices: Reading and writing device information

59797

Substructure: `iolinkmaster/port[n]/iolinkdevice (n = 1...8)`

Available data points:

| Name                                   | Description                                      | Access |
|----------------------------------------|--------------------------------------------------|--------|
| <code>../status</code>                 | Status of the connected IO-Link device           | r      |
| <code>../vendorid</code>               | IO-Link ID of the vendor                         | r      |
| <code>../deviceid</code>               | IO-Link ID of the IO-Link device                 | r      |
| <code>../productname</code>            | Product name of the IO-Link device               | r      |
| <code>../serial</code>                 | Serial number of the IO-Link device              | r      |
| <code>../applicationspecifictag</code> | Device-specific identification (application tag) | rw     |

r ... read only

rw ... read and write

## 9.2.18 IO-Link devices: Indicating IO-Link events

59798

Substructure: `iolinkmaster/port[n]/iolinkdevice (n = 1...8)`.

Available data points:

| Name                        | Description                  | Access |
|-----------------------------|------------------------------|--------|
| <code>../iolinkevent</code> | Indication of IO-Link events | r      |

r ... read only

Subscribing events: → **Subscribing to notifications** (→ p. [62](#))

## 9.2.19 Gateway: Resetting, rebooting and localising the device

59790

Substructure: `firmware`

Applicable services:

| Name                         | Description                              |
|------------------------------|------------------------------------------|
| <code>../factoryreset</code> | Reset IO-Link master to factory settings |
| <code>../reboot</code>       | Reboot IO-Link master                    |
| <code>../signal</code>       | Trigger the flashing of the status LED   |

## 9.2.20 Gateway: Reading device information

52254

Substructure: deviceinfo

Available data points:

| Name                  | Description                     | Access |
|-----------------------|---------------------------------|--------|
| ../productcode        | Article number                  | r      |
| ../vendor             | Manufacturer                    | r      |
| ../devicefamily       | Device family                   | r      |
| ../hwrevision         | Hardware revision               | r      |
| ../serialnumber       | Serial number                   | r      |
| ../revision           | Firmware version                | r      |
| ../bootloaderrevision | Bootloader version              | r      |
| ../extensionrevisions | Firmware and bootloader version | r      |
| ../fieldbustype       | Fieldbus                        | r      |

r ... read only

Additional information about the AL1940 can be read with the service **getidentity** (→ **Servicet: getidentity** (→ p. [141](#))).

## 9.2.21 Gateway: Reading status and diagnostic information

61157

Substructure: processdatamaster

Available data points:

| Name                 | Description                                                  | Access |
|----------------------|--------------------------------------------------------------|--------|
| ../temperature       | Temperature of the IO-Link master (value in °C)              | r      |
| ../voltage           | Present voltage value of the supply voltage US (value in mV) | r      |
| ../current           | Present current value of the sensor supply US (value in mA)  | r      |
| ../supervisionstatus | Status of the device supply US                               | r      |

r ... read only

## 9.2.22 Gateway: Updating the firmware

59789

Substructure: **firmware**

Available data points:

| Name                   | Description                                        | Access |
|------------------------|----------------------------------------------------|--------|
| ../version             | Software version                                   | r      |
| ../type                | Software type                                      | r      |
| ../container           | Structure for updating the firmware                | w      |
| ../container/maxsize   | Maximum size of the container structure (in bytes) | r      |
| ../container/chunksize | Size of a data segment (in bytes)                  | r      |
| ../container/size      | Size of the container content (in bytes)           | r      |

r = only read

w = write only

Applicable services:

| Name                         | Description                                            |
|------------------------------|--------------------------------------------------------|
| ./install                    | Install firmware transferred to the IO-Link master     |
| ./container/stream_set       | Transfer an individual data segment                    |
| ./container/start_stream_set | Start sequential transmission of several data segments |

## Example: Update firmware

52252

### Task:

Update the firmware of the device; size of the firmware file: 356676 bytes

### Solution:

The firmware is transferred to the device in fragments (chunks). The size of the fragments depends on the size of the flash memory of the IO-Link master. To transfer the firmware, the firmware file must be converted into a character string using BASE64.

#### 1 Preparations

- ▶ Determine the size of the fragments (g = number of bytes):  
`{"code": "request", "cid": -1, "adr": "/firmware/container/chunksize/getdata"}`
- ▶ Convert the firmware file into a BASE64 string.

#### 2 Start the transfer of the firmware

- ▶ Start the transfer of the firmware via the service start\_stream\_set (parameter "size": size of the firmware file):  
`{"code": "request", "cid": -1, "adr": "/firmware/container/start_stream_set", "data": {"size": 356676}}`

#### 3 Load the firmware into the flash memory of the IO-Link master

- ▶ Send the BASE64 string of the firmware file to the IO-Link master fragment by fragment (value = string value with length g).  
`{"code": "request", "cid": -1, "adr": "/firmware/container/stream_set", "cid": -1, "data": {"value": "aWZtfgIAAABBTDF4NXhfY25faXRfdDluMi43Nw..."}}`
- ▶ Repeat step 3 until all fragments of the firmware file have been sent to the IO-Link master.
- > IO-Link master stores the segments received in the container area.

#### 4 Install firmware

- ▶ Start the installation of the transmitted firmware.  
`{"code": "request", "cid": -1, "adr": "/firmware/install", "data": {}}`

## 9.2.23 Gateway: Setting the application tag

59791

Substructure: devicetag

Available data points:

| Name              | Description                                  | Access |
|-------------------|----------------------------------------------|--------|
| ../applicationtag | Name of the IO-Link master (application tag) | rw     |

rw ... read and write

 For the storage of the applicationtag 32 bytes are available on the IO-Link master. If the memory area is exceeded during writing with setdata, the IoT core aborts the write process and returns the diagnostics code 400.

When writing the application tag, note the different memory requirements of the individual UTF-8 characters:

- characters 0-127: 1 byte per character
- characters >127: more than 1 byte per character

### Example: Change name of the IO-Link master

a33823

**Task:** Set the name of the IO-Link master to AL1940 for the representation in the LR SMARTOBSERVER.

**Solution:** Change the parameter [Application Tag] with the setdata service to the value [AL1940].

The data point of the parameter [Application Tag] in the device description object is /devicetag/applicationtag.

- Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/devicetag/applicationtag/setdata",
  "data": {"newvalue": "AL1940"}
}
```

- Response:

```
{"cid": 4711, "code": 200}
```

## 9.2.24 Subscribing to notifications

If a data point has the sub-element `datachanged`, the user can subscribe to notifications on value and condition changes. Notifications can be triggered by the expiration of a timer or an event. The IoT Core supports the output of notifications in CSV or JSON format.

Available data points:

| Name                                          | Description                                                                                                                                                       | Access |
|-----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
| timer[x]/counter                              | Timer for triggering a notification                                                                                                                               | rw     |
| timer[x]/interval                             | Cycle time of the update of the subscribed values                                                                                                                 | rw     |
| iolinkmaster/port[n]/portevent                | Display of the following events on IO-Link port n:<br>▪ IO-Link device connected<br>▪ IO-Link device disconnected<br>▪ Operating mode of the IO-Link port changed | rw     |
| iolinkmaster/port[n]/iolinkdevice/iolinkevent | Display of IO-Link events                                                                                                                                         | rw     |

r ... read only

rw ... read and write

x = [1,2]

n = 1...8

Applicable services:

| Name                               | Description                          |
|------------------------------------|--------------------------------------|
| ../datachanged/subscribe           | Subscribe to notification            |
| ../datachanged/unsubscribe         | Unsubscribe notification             |
| ../datachanged/getsubscriptioninfo | Show information about notifications |

Additionally, the user can use **Service: getsubscriberlist** (→ p. [142](#)) show all active subscriptions.

### Example: Subscribing to notifications

**Task:** The current values of the following parameters are to be sent regularly to a network server with IP address 192.168.0.4:

- cyclic input data of the IO-Link Devices an IO-Link port X02
- Operating temperature of the IO-Link master.

**Solution:** Subscribe to the required data using the subscribe service.



The following options are additionally available:

- via WebSockets (ws://): **Example: Subscribing notifications via WebSocket** (→ p. [66](#))
- via MQTT (mqtt://): **Example: Configuring the MQTT command channel** (→ p. [69](#))

- Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/timer[1]/counter/datachanged/subscribe",
  "data": {
    ...
  }
}
```

```
"callback": "http://192.168.0.4:80/temp",
"datatosend": [
"/iolinkmaster/port[2]/iolinkdevice/pdin",
"/processdatamaster/temperature"]
}
```

In addition, the time interval of the timer[1] must be set to a value between 500 ms and 2147483647 ms.

- Request:

```
{
"code": "request",
"cid": 4712,
"adr": "/timer[1]/interval/setdata",
"data": {"newvalue": 500}
}
```

- Response:

```
{
"cid": 4712,
"code": 200
}
```

- Notification (JSON)

```
{
"code": "event",
"cid": 4711,
"adr": "",
"data": {
"eventno": 6317,
"srcurl": "/timer[1]/counter/datachanged",
"payload": {
"/timer[1]/counter": {"code": 200, "data": 1},
"/processdatamaster/temperature": {"code": 200, "data": 39},
"/iolinkmaster/port[2]/iolinkdevice/pdin": {"code": 200, "data": "03B0"}}}
```

## Example: Changing a subscription

61161

**Task:** The existing subscription (**Example: Subscribing to notifications** (→ p. 62)) is to be changed. Instead of the temperature of the IO-Link master, the operating voltage applied is to be transmitted.

**Solution:** Overwrite the existing subscription. For this purpose, the parameter values for "cid" and "callback" in the request must be the same as those of the existing subscription.

- Request:

```
{
"code": "request",
"cid": 4711,
"adr": "/timer[1]/counter/datachanged/subscribe",
"data": {
"callback": "http://192.168.0.4:80/temp",
"datatosend": [
"/iolinkmaster/port[2]/iolinkdevice/pdin",
"/processdatamaster/voltage"]}}
```

## Example: Subscribing to notifications in CSV format

**Task:** Every 2 seconds, the current values of the following parameters are to be sent to a network server with the IP address 192.168.0.4

- cyclic IO-Link input data of the IO-Link device at port X02
- Operating temperature of the IO-Link master.

The data should be transmitted in CSV format (comma separator).

**Solution:**

- Use the subscribe service to subscribe to the required data and set the output format to "csv0".



Data in CSV format can only be sent via TCP protocol.

- Request:

```
{
  "cid": 1,
  "adr": "/timer[1]/counter/datachanged/subscribe",
  "code": "request",
  "callback": "tcp://192.168.50.59:1883/topic",
  "codec": "csv0",
  "data": {
    "datatosend": [
      "/iolinkmaster/port[2]/iolinkdevice/pdin",
      "/processdatamaster/temperature"]
  }
}
```

- Set the interval of the timer to 2 seconds:

- Request:

```
{
  "code": "request",
  "cid": 4712,
  "adr": "/timer[1]/interval/setdata",
  "data": {"newvalue": 2000}
}
```

The cyclically sent notification has the following structure:

/timer[1]/counter/datachanged,6317,200,1,200,39,200,03B0

## Example: Unsubscribing from notifications

**Task:** The existing subscription (**Example: Subscribing to notifications** (→ p. 62)) is to be deleted.

**Solution:** Use the unsubscribe service to delete the subscription. For this purpose, the value of the parameter "callback" in the request must be equal to the value of the existing subscription.

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/timer[1]/counter/datachanged/unsubscribe",
  "data": {
    "callback": "http://192.168.0.4:80/temp"
  }
}
```

## Example: Checking subscriptions

Task: Information about the existing subscription (**Example: Subscribing to notifications** (→ p. [62](#))Show **Example: Subscribing to notifications** (→ p. [62](#))).

Solution: Use the service getsubscriptioninfo and the parameter values cid, "adr" and "callback" of the existing subscription to retrieve the information.

- Request:

```
{  
  "code": "request",  
  "cid": 4711,  
  "adr": "/timer[1]/counter/datachanged/getsubscriptioninfo",  
  "data": {  
    "callback": "http://192.168.0.4:80/temp"  
  }  
}
```

- Response:

```
{  
  "cid": 4711,  
  "data": {  
    "callback": "http://192.168.0.4:80/temp",  
    "datatosend": [  
      "/iolinkmaster/port[2]/iolinkdevice/productname",  
      "/iolinkmaster/port[2]/iolinkdevice/pdin",  
      "/processdatamaster/temperature"]  
    ],  
    "code": 200  
  }  
}
```

## 9.2.25 Using Web Socket

The IoT Core supports communication via WebSocket protocol. With Web Sockets, the user can establish a full-duplex communication channel via a TCP connection.

WebSockets can be used for the following services:

- subscribe / unsubscribe

 Maximum number of WebSocket connections: 8  
Fail-safe WebSocket connections (wss://) are not supported.

To transmit notifications via a WebSockets connection:

- ▶ Establish the WebSocket connection (e.g. "ws://192.168.0.55:80/websocket")
- Option 1: without parameter "callback"
- ▶ make subscribe/unsubscribe request without parameter "callback".
- > IoT-Core sends notifications about existing WebSocket connections.
- Option 2. with parameter "callback"
- ▶ make subscribe/unsubscribe requests with parameter "callback" ("ws:///myTopic").
- > IoT-Core sends notifications about existing WebSocket connections to the topic myTopic.

### Example: Subscribing notifications via WebSocket

**Task:** The current values of the following parameters are to be sent regularly to the data sink myTopic via an existing WebSocket connection:

- Product name of the IO-Link Devices an IO-Link port X02
- cyclic input data of the IO-Link Devices an IO-Link port X02
- Operating temperature of the IO-Link master.

**Solution:** Subscribe to the required data using the subscribe service.

- Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/timer[1]/counter/datachanged/subscribe",
  "data": {
    "callback": "ws:///myTopic",
    "datatosend": [
      "/iolinkmaster/port[2]/iolinkdevice/productname",
      "/iolinkmaster/port[2]/iolinkdevice/pdin",
      "/processdatamaster/temperature"
    ]
  }
}
```

If the notifications are to be transmitted via the existing WebSocket connection, but without a special data sink, the callback parameter is not required.

- Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/timer[1]/counter/datachanged/subscribe",
  "data": {
    "datatosend": [
      ...
    ]
  }
}
```

```
"/iolinkmaster/port[2]/iolinkdevice/productname",
"/iolinkmaster/port[2]/iolinkdevice/pdin",
"/processdatamaster/temperature"]}
```

## 9.2.26 MQTT support

61168

The IoT Core supports the MQTT protocol. The protocol allows an MQTT client to communicate with the IoT Core via an MQTT broker to request and receive data. The IoT Core can publish data via the MQTT connection.

### Configuring the MQTT command channel

61169

To enable MQTT communication, the user needs to activate and configure an MQTT command channel.

Substructure: connections/mqttConnection

| Name                                                    | Description                                                                                                                                                                                                                                                                                                             | Access |
|---------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
| ../type                                                 | Type of the connection (MQTT)                                                                                                                                                                                                                                                                                           | r      |
| ../status                                               | Global MQTT status                                                                                                                                                                                                                                                                                                      | r      |
| ../status/preset                                        | Presetting of the MQTT status; Basic settings: running                                                                                                                                                                                                                                                                  | r      |
| ../MQTTSetup                                            | Substructure for general MQTT settings                                                                                                                                                                                                                                                                                  | w      |
| ../MQTTSetup/QoS                                        | Quality of Service of the MQTT communication <ul style="list-style-type: none"> <li>▪ 0: QoS Level 0 - PUBLISH (without confirmation)</li> <li>▪ 1: QoS Level 1 - PUBLISH &gt; PUBREC (one-time confirmation)</li> <li>▪ 2: QoS Level 2 - PUBLISH &gt; PUBREC &gt; PUBREL &gt; PUBCOMP (double confirmation)</li> </ul> | rw     |
| ../MQTTSetup/version                                    | MQTT version                                                                                                                                                                                                                                                                                                            | r      |
| ../mqttCmdChannel                                       | Substructure of the MQTT command channel                                                                                                                                                                                                                                                                                | w      |
| ../mqttCmdChannel/type                                  | Type of the MQTT command channel                                                                                                                                                                                                                                                                                        | r      |
| ../mqttCmdChannel/status                                | Status of the MQTT command channel                                                                                                                                                                                                                                                                                      | r      |
| ../mqttCmdChannel/status/preset                         | Presetting of the MQTT status; Basic setting: stopped                                                                                                                                                                                                                                                                   | r      |
| ../mqttCmdChannel/mqttCmdChannelSetup                   | Structure for settings of the command channel                                                                                                                                                                                                                                                                           | w      |
| ../mqttCmdChannel/mqttCmdChannelSetup/brokerIP          | IP address of the MQTT broker                                                                                                                                                                                                                                                                                           | rw     |
| ../mqttCmdChannel/mqttCmdChannelSetup/brokerPort        | Port number of the MQTT broker                                                                                                                                                                                                                                                                                          | rw     |
| ../mqttCmdChannel/mqttCmdChannelSetup/cmdTopic          | Designation of the MQTT topic                                                                                                                                                                                                                                                                                           | rw     |
| ../mqttCmdChannel/mqttCmdChannelSetup/defaultReplyTopic | Standard response topic                                                                                                                                                                                                                                                                                                 | rw     |

Applicable services:

| Name                           | Description                     |
|--------------------------------|---------------------------------|
| ../status/start                | Enable MQTT                     |
| ../status/stop                 | Deactivate MQTT                 |
| ../status/reset                | Reset MQTT                      |
| ../mqttCmdChannel/status/start | Activate MQTT command channel   |
| ../mqttCmdChannel/status/stop  | Deactivate MQTT command channel |
| ../mqttCmdChannel/status/reset | Reset MQTT command channel      |



Notes on the states of an MQTT connection: **Note: Connection states** (→ p. [69](#))

To create an MQTT connection, perform the following steps in sequence:



Ensure that the MQTT broker can be reached and that the selected port of the MQTT broker is enabled for data transmission.

Max. number of simultaneous MQTT connections: 10


Wildcards "+" and "#" in topics are not supported.

- ▶ Activate MQTT command channel.
- ▶ Set the IP address of the MQTT.
- ▶ Set the port number of the MQTT broker.
- ▶ Set topic.
- ▶ Set standard response topic.
- > The command channel is created with the selected properties.
- > The user can publish on the topic with the IoT Core.
- > MQTT clients can subscribe to the topic.

### Note: Connection states

61170

The following status diagram shows the influence of the services "start", "stop" and "reset" on the status of an MQTT connection:

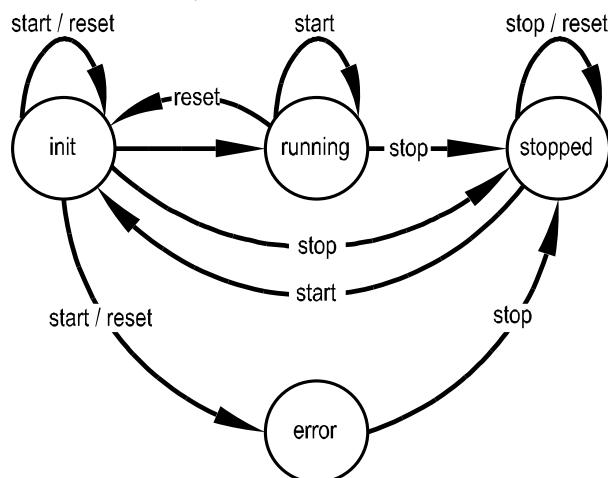

After the initialisation in the "init" state has been completed, the connection automatically changes to the "running" state.

The connection automatically switches to the "error" state if at least one of the following events occurs:

- no MQTT broker available

### Example: Configuring the MQTT command channel

61171

**Task:** Configuring and activating the MQTT command channel (IP address MQTT broker: 192.168.82.100, port: 1883, topic: abc).

#### Solution:

- ▶ Check whether MQTT broker can be reached and the port has been released.
- ▶ Activate command channel

- Request:

```
{  
  "code": "request",  
  "cid": 4711,  
  "adr": "/connections/mqttConnection/MQTTSetup/mqttCmdChannel/status/start"  
}
```

► Set the IP address of the MQTT broker/server.

- Request:

```
{  
  "code": "request",  
  "cid": 4712,  
  "adr": "/connections/mqttConnection/mqttCmdChannel/mqttCmdChannelSetup/brokerIP/set  
  data"  
  "data": {"192.168.82.100"}  
}
```

► Set the port number of the MQTT broker/server.

- Request:

```
{  
  "code": "request",  
  "cid": 4713,  
  "adr": "/connections/mqttConnection/mqttCmdChannel/mqttCmdChannelSetup/brokerPort/s  
  etdata"  
  "data": {"1883"}  
}
```

► Set topic.

- Request:

```
{  
  "code": "request",  
  "cid": 4714,  
  "adr": "/connections/mqttConnection/mqttCmdChannel/mqttCmdChannelSetup/cmdTopic/set  
  data"  
  "data": {"abc"}  
}
```

► Set standard response topic.

- Request:

```
{  
  "code": "request",  
  "cid": 4715,  
  "adr": "/connections/mqttConnection/mqttCmdChannel/mqttCmdChannelSetup/defaultReply  
  Topic/setdata"  
  "data": {"xyz"}  
}
```

► Set the QoS.

- Request:

```
{  
  "code": "request",  
  "cid": 4716,  
  "adr": "/connections/mqttConnection/MQTTSetup/QoS/setdata",  
  "data": {"QoS2"}  
}
```

## Example: Publish the temperature to an MQTT broker

54687

**Task:** Publish the temperature of the IO-Link master to an MQTT broker (IP address MQTT broker: 192.168.82.100, port: 1883, topic: abc)

### Solution:

- Request:

```
{  
  "code": "request",  
  "cid": -1,  
  "adr": "/timer[1]/counter/datachanged/subscribe",  
  "data": {  
    "callback": "mqtt://192.168.82.100:1883/abc",  
    "datatosend": ["processdatamaster/temperature"]  
  }  
}
```

- Response:

```
{  
  "cid": -1,  
  "code": 200  
}
```

## 9.2.27 Using the IoT-Core Visualizer

### Content


|                                                 |    |
|-------------------------------------------------|----|
| Managing notifications .....                    | 73 |
| Searching for elements in the device tree ..... | 75 |
| Configuring IO-Link the master .....            | 75 |
| Reading and writing process data .....          | 77 |
| Updating the firmware .....                     | 78 |

61173

The ifm-IoT Core Visualizer of the IO-Link master provides a graphical user interface for accessing functions of the ifm-IoT Core.

To start the IoT Core Visualizer:

- ▶ Start web browser.
- ▶ Call the following address: <http://ipaddress/web/subscribe>
- > Browser shows IoT Core Visualizer:

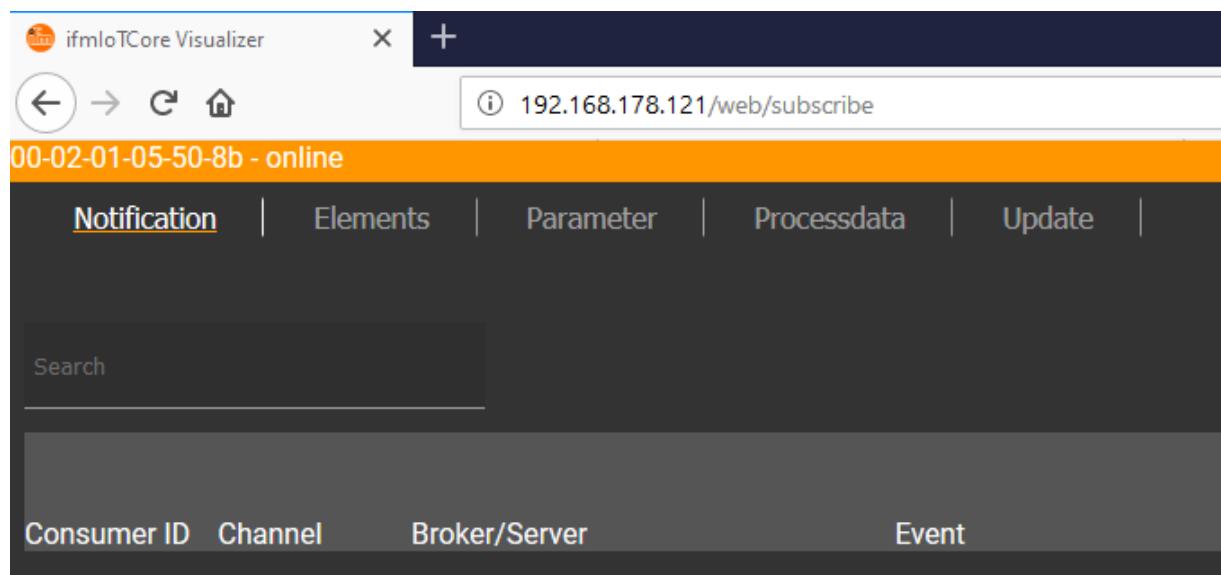

The navigation menu gives the user access to the following functions:

- [Notification]: Creating and managing notifications (subscribe / unsubscribe)
- [Elements]: Searching for elements in device description
- [Parameter]: Configuring IO-Link master
- [Processdata]: Reading and writing process data
- [Update]: Updating the firmware of the IO-Link master

## Managing notifications

61174

The menu page allows you to perform the following functions

- Creating notifications
- Showing active notifications
- Deleting notifications (single, all)

Requirements:

- IoT-Core Visualizer has been started.
- Click on [Notification].
- > The menu page for managing notifications appears.
- > The menu page shows all registered notifications in a table

## Creating a new notification

61175

A wizard is used to register new notifications.

Requirements:

- The [Notification] menu page is open.
- Click on [+] on the right side of the table.
- > The wizard for the creation of notifications appears.

00-02-01-05-50-8b - online

Notification | Elements | Parameter | Processdata | Update |

Add Subscription

1 Events      2 Data      3 Transfer Info

Event

Please choose one event, you want to subscribe to.

Search for ... Identifier of data element to subscribe to its changes

counter  
 00-02-01-05-50-8b/timer[1]/counter/databchanged

counter  
 00-02-01-05-50-8b/timer[2]/counter/databchanged

preset  
 00-02-01-05-50-8b/connections/mqttconnection/status/preset/databchanged

status  
 00-02-01-05-50-8b/connections/mqttconnection/status/databchanged

qos  
 00-02-01-05-50-8b/connections/mqttconnection/mqttsetup/qos/databchanged

preset  
 00-02-01-05-50-8b/connections/mqttconnection/mqtcmdchannel/status/preset/databchanged

CANCEL      NEXT >

- ▶ Use the wizard to enter the required notification parameters step by step.
- > Created notification subscription is displayed in the table.



For cyclical notifications via timer[1] or timer[2], the user also needs to set the interval time of the timer in question.

## Deleting a notification

61176

Requirements:

- The [Notification] menu page is open.
- At least one notification is active.
- ▶ Click on [x] in the column [Unsubscribe].
- > The selected notification will be deleted (unsubscribe).

## Searching for elements in the device tree

The [Elements] menu page allows you to search the device description for elements with specific properties (status, profile, name) and to output the results.

Requirements:

- IoT-Core Visualizer has been started.
- Click on [Elements].
- > The input mask appears.

The screenshot shows the 'Elements' menu page of the IoT-Core Visualizer. At the top, there is a navigation bar with tabs: Notification, Elements (which is selected and highlighted in orange), Parameter, Processdata, Update, and a separator line. Below the navigation bar is a search bar labeled 'Search for ...'. Underneath the search bar are three input fields with labels: 'identifier', 'profile', and 'type'. Each field has a placeholder text: 'one identifier to search for', 'profile(s) to search for. Separator ;', and 'one type to search for'. Below these input fields is a horizontal bar containing several links: Processdatamaster, Deviceinfo, Timer[1], Timer[2], Iotsetup, Fieldbussetup, Connections, Iolinkmaster, Firmware, and Devicetag. A small upward arrow icon is positioned next to the '00-02-01-05-50-8' link. The main content area displays a table with three rows of search results. Each row contains three columns: 'getidentity' (link), '00-02-01-05-50-8b/getidentity' (URL), and 'type: service profiles: undefined' (description). To the right of each URL column is a 'Copy URL' button. The table has a dark header and light gray rows.

|             | 00-02-01-05-50-8b/getidentity | type: service<br>profiles: undefined | Copy URL |
|-------------|-------------------------------|--------------------------------------|----------|
| getidentity | 00-02-01-05-50-8b/gettree     | type: service<br>profiles: undefined | Copy URL |
| gettree     | 00-02-01-05-50-8b/querytree   | type: service<br>profiles: undefined | Copy URL |

- Enter the search criteria of the required item in the [identifier], [profile] and [type] boxes.
- Click on [Search for ...].
- > IoT-Core Visualizer searches device description for elements with selected search criteria.
- > The result list shows all elements found.

## Configuring IO-Link the master

The [Parameter] menu page allows you to configure the IO-Link master.

Available options:

- Reading and writing individual parameters
- Backup and restore the current configuration of the machine.

Requirements:

- IoT-Core Visualizer has been started.
- Click on [Parameter].
- > The menu page shows the available parameters of the IO-Link master.
- > Current parameter values are displayed.

- > Editable parameters can be changed.

00-02-01-05-50-8b - online

Notification | Elements | **Parameter** | Processdata | Update |

| Deviceinfo                                                                                                                                                                                                                                                                                                                                                                                                      | Timer[1]     | Timer[2]                                                                                      | <b>iotsetup</b> | Fieldbussetup | Connections | iolinkmaster | Firmware | Devicetag |              |          |                                                                                               |                |  |                                                                               |        |              |  |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|-----------------------------------------------------------------------------------------------|-----------------|---------------|-------------|--------------|----------|-----------|--------------|----------|-----------------------------------------------------------------------------------------------|----------------|--|-------------------------------------------------------------------------------|--------|--------------|--|
|                                                                                                                                                                                                                                                                                                                                                                                                                 |              |                                                                                               | Network         |               |             |              |          |           |              |          |                                                                                               |                |  |                                                                               |        |              |  |
| <b>iotsetup</b> <table border="1"> <tr> <td>accessrights</td> <td>iot only</td> <td>Type: enum<br/>Namespace: json<br/>Encoding: integer<br/>Valuation: valuelist:<br/>0:<br/>1:<br/>3:</td> </tr> <tr> <td colspan="2"><b>network</b></td> <td>Type: string<br/>Namespace: json<br/>Encoding: utf-8<br/>Valuation: minlength: 1</td> </tr> <tr> <td>smobip</td> <td>192.168.82.2</td> <td></td> </tr> </table> |              |                                                                                               |                 |               |             |              |          |           | accessrights | iot only | Type: enum<br>Namespace: json<br>Encoding: integer<br>Valuation: valuelist:<br>0:<br>1:<br>3: | <b>network</b> |  | Type: string<br>Namespace: json<br>Encoding: utf-8<br>Valuation: minlength: 1 | smobip | 192.168.82.2 |  |
| accessrights                                                                                                                                                                                                                                                                                                                                                                                                    | iot only     | Type: enum<br>Namespace: json<br>Encoding: integer<br>Valuation: valuelist:<br>0:<br>1:<br>3: |                 |               |             |              |          |           |              |          |                                                                                               |                |  |                                                                               |        |              |  |
| <b>network</b>                                                                                                                                                                                                                                                                                                                                                                                                  |              | Type: string<br>Namespace: json<br>Encoding: utf-8<br>Valuation: minlength: 1                 |                 |               |             |              |          |           |              |          |                                                                                               |                |  |                                                                               |        |              |  |
| smobip                                                                                                                                                                                                                                                                                                                                                                                                          | 192.168.82.2 |                                                                                               |                 |               |             |              |          |           |              |          |                                                                                               |                |  |                                                                               |        |              |  |

To change a parameter:

- Navigate to the desired parameter in the device description.
- Changing the parameter value
- Click on the pencil icon to save the change on the IO-Link master.
- > The changed parameter value is active.
- Optional: Repeat the procedure to change further parameter values.

## Reading and writing process data

The menu page allows the process data of the IO-Link master and the connected IO-Link devices to be read and written.

Requirements:

- IoT-Core Visualizer has been started.
- Click on [Processdata].
- > Menu page shows the substructures of the device description that contain process data and events.
- > The current process values are displayed.
- > Editable process data can be changed.

| Path                    | Name      | Type   | Namespace | Encoding  | Value  | Min | Max   |
|-------------------------|-----------|--------|-----------|-----------|--------|-----|-------|
| iolinkmaster > Port[1]  | portevent | string | json      | hexstring | FF0200 |     |       |
| iolinkdevice > VendorID | vendorid  | number | json      | integer   | 310    | 0   | 65535 |

To change the value of a process date:


- Navigate to the required process date in the device description.
- Change the process value.
- Click on the pencil icon to save the change on the IO-Link master.
- > The changed process value is active.
- Optional: Repeat the procedure to change further process values.

## Updating the firmware

The [Update] menu page allows you to update the firmware of the IO-Link master:

Requirements:

- IoT-Core Visualizer has been started.
- Click on [Update].
- > Menu page displays information about the current firmware version.

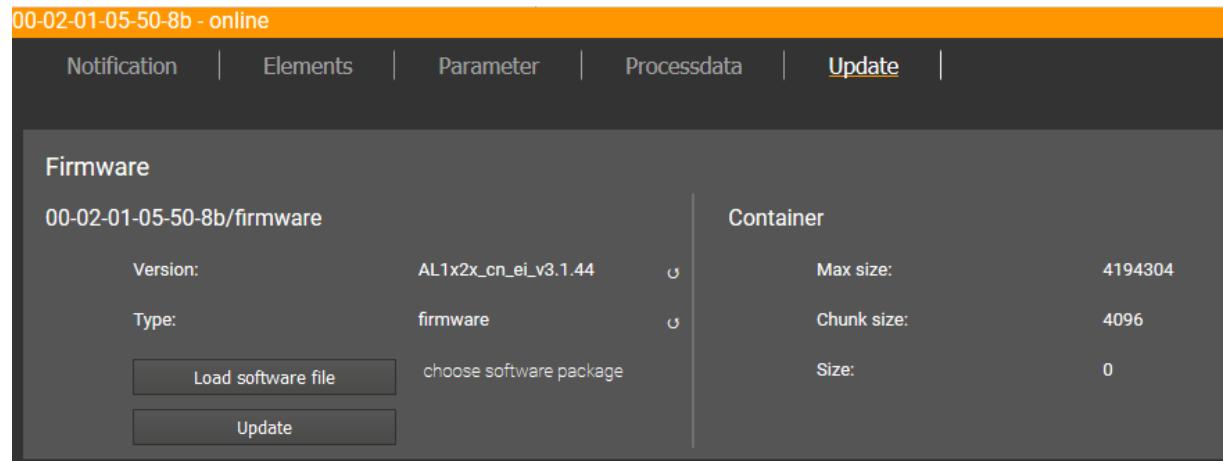

- Click on [Load software file] and select a new firmware file (\*.bin).
- Click on [Update] to start the update process.
- > The firmware of the IO-Link master will be updated.
- > The area shows the progress bar.
- > If the update process has been successful, the IO-Link master will restart automatically.

## 9.3 Modbus TCP

### Content

|                                                     |    |
|-----------------------------------------------------|----|
| Integrate the AL1940 into the Modbus project .....  | 79 |
| Set IO-Link master.....                             | 81 |
| Set IO-Link ports.....                              | 82 |
| Read input data of several IO-Link ports.....       | 83 |
| Read input data of individual IO-Link ports .....   | 84 |
| Write output data of several IO-Link ports.....     | 85 |
| Write output data of individual IO-Link ports ..... | 86 |
| Read diagnostic information and events .....        | 87 |
| Read device information.....                        | 88 |
| Control IO-Link master .....                        | 88 |
| Configure IO-Link devices .....                     | 88 |
| Modbus TCP: Programmers' notes .....                | 89 |

34455

On the field bus side, the device can be configured with any Modbus TCP compatible projection software.

### 9.3.1 Integrate the AL1940 into the Modbus project

34456

The AL1940 provides the functionality of a Modbus-TCP slave. The user can integrate the IO-Link master via the profile of a generic Modbus-TCP slave to a fieldbus project.

The IO-Link master, the IO-Link Ports and the process data are configured via the Modbus register of the AL1940.

### Example: Integrate IO-Link master in a CODESYS project

34474



Familiarise yourself with the following CODESYS functions!

- Modbus master:  
→ Online help > Fieldbus support >Modbus configurator >Modbus master
- Modbus slave device:  
→ Online help > Fieldbus support > Modbus configurator > Modbus slave device

#### Task: Integrate IO-Link master in a CODESYS project

Hardware:

- AC14 DL as Modbus-TCP master
- AL1940 as Modbus-TCP slave

#### Solution:

**Preparation:**

- Create CODESYS project with AC14 DL.

#### 1 Create Modbus-TCP master

- In the device tree: Right-click on [X8] node
- > Context menu appears.
- In the context menu: Select [Add Device...].
- > Dialogue window appears.
- Select the following settings:
  1. [Vendor]: Select [ifm electronic].
  2. [Device]: Select [Modbus\_TCP\_Master].
  3. [Name]: Enter a unique name.

- ▶ Click on [Add Device].
- > Device tree shows Modbus-TCP master as sub-node of the interface X8.

**2 Create Modbus-TCP slave (AL1940)**

- ▶ In the device tree: Right-click on the node of the added Modbus-TCP master
- ▶ In the context menu: Select [Add Device...].
- > Dialogue window appears.
- ▶ Select the following settings:
  1. [Vendor]: Select [ifm electronic].
  2. [Device]: Select [Modbus\_TCP\_Slave].
  3. [Name]: Enter a unique name
- ▶ Click on [Add Device].
- > Device tree shows AL1940 as sub-node of the Modbus-TCP master.

**3 Configure Modbus-TCP slave**

- ▶ In the following tabs, set the parameters as required:
  1. [General]: Set IP address and Unit ID
  2. [Modbus Slave Channel]: Add Modbus register
  2. [ModbusTCPSlave I/O Mapping]: Map Modbus register values to variables

### 9.3.2 Set IO-Link master

Register area for the access to the configuration of the IO-Link master: →**Configuration Area**  
(→ p. [102](#))

The area contains the following data:

- Access rights to the IO-Link master
- Data length of the IO-Link input and output data of all IO-Link ports
- Alignment of the bytes in a data word



- ▶ Observe the general rules for access to the Modbus registers (→**Rules for accessing the Modbus registers** (→ p. [89](#)))!
- ▶ When writing several registers at once, ensure that the transferred parameter data has the correct length!

| Register | Content                            | Access |
|----------|------------------------------------|--------|
| 8998     | Access Rights; Process Data Length | r/w    |
| 8999     | Byte Swap                          | r/w    |

r/w ... read and write

### 9.3.3 Set IO-Link ports

Register area for the access to the configuration of the IO-Link ports: →**Configuration Area**  
 (→ p. [102](#))

The area contains the following data:

- Operating mode of the IO-Link ports
- Device validation and Data storage settings
- Failsafe values of outputs



- ▶ Observe the general rules for access to the Modbus registers (→**Rules for accessing the Modbus registers** (→ p. [89](#)))!
- ▶ When writing several registers at once, ensure that the transferred parameter data has the correct length!

| Register | Contents                     | Access |
|----------|------------------------------|--------|
| 9000     | Port X01: Port Configuration | r/w    |
| 9006     | Port X02: Port Configuration | r/w    |
| 9012     | Port X03: Port Configuration | r/w    |
| 9018     | Port X04: Port Configuration | r/w    |
| 9024     | Port X05: Port Configuration | r/w    |
| 9030     | Port X06: Port Configuration | r/w    |
| 9036     | Port X07: Port Configuration | r/w    |
| 9042     | Port X08: Port Configuration | r/w    |

r/w ... read and write

In addition, the user can set the IO-Link ports of the AL1940 via the following acyclic commands:

- "Set Mode": →**Command 0x10 – Set mode** (→ p. [121](#))
- "Set Validation ID / Data Storage": →**Command 0x20 – Set validation ID / data storage**  
 (→ p. [123](#))
- "Set Fail-safe Data Pattern": →**Command 0x30 – Set fail-safe data pattern** (→ p. [125](#))

The commands use the process mechanisms of the acyclic command channel (→**Use acyclic services** (→ p. [90](#))).

### 9.3.4 Read input data of several IO-Link ports

Register area for compact access to the input data of the IO-Link ports X01...X04 and X05...X08:

→**Input Data** (→ p. [107](#))

The area contains the following data:

- Combined digital inputs - clamp 2 / clamp 4 (DI)
- Status information of the IO-Link ports
- Status information of the IO-Link devices
- Combined IO-Link input data of the IO-Link ports



Observe the general rules for access to the Modbus registers (→**Rules for accessing the Modbus registers** (→ p. [89](#)))!

The parameter "Invalid Data" indicates whether the read IO-Link input data is valid.

- ▶ Together with the input data, also read and evaluate the corresponding status information of the IO-Link devices!

| Register | Contents                                                | Access |
|----------|---------------------------------------------------------|--------|
| 197      | Port X01...X04: Digital Input - clamp 2 / clamp 4 (DI)  | r      |
| 198      | Port X01...X04: Status Information IO-Link Ports        | r      |
| 199      | Port X01...X04: Status Information IO-Link Devices      | r      |
| 200      | Port X01...X04: Compact Input Data - IO-Link (4n bytes) | r      |
| 297      | Port X05...X08: Digital Input - clamp 2 / clamp 4 (DI)  | r      |
| 298      | Port X05...X08: Status Information IO-Link Ports        | r      |
| 299      | Port X05...X08: Status Information IO-Link Devices      | r      |
| 300      | Port X05...X08: Compact Input Data - IO-Link (4n bytes) | r      |

r ... read only

n = [2,4,8,16,32]; is determined by parameters [Process Data Length] (→**Configuration Area** (→ p. [102](#)))

### 9.3.5 Read input data of individual IO-Link ports

Register area for separate access to input data of the individual IO-Link ports: →**Single Port Access** (→ p. [113](#))

The area contains the following data for each IO-Link port X01...X08:

- Digital input data at clamp 2 / clamp 4 (DI)
- Status information of IO-Link port
- Diagnostic and status information of the connected IO-Link device
- IO-Link input data

 Observe the general rules for access to the Modbus registers (→**Rules for accessing the Modbus registers** (→ p. [89](#)))!

The parameter "Invalid Data" indicates whether the read IO-Link input data is valid.

- ▶ Also read and evaluate the corresponding diagnostic information!

| Register | Contents                                     | Access |
|----------|----------------------------------------------|--------|
| 1000     | Port X01: Digital Input - Pin 2 / Pin 4 (DI) | r      |
| 1001     | Port X01: Diagnostic + Status Data           | r      |
| 1002     | Port X01: Input Data - IO-Link (n bytes)     | r      |
| 2000     | Port X02: Digital Input - Pin 2 / Pin 4 (DI) | r      |
| 2001     | Port X02: Diagnostic + Status Data           | r      |
| 2002     | Port X02: Input Data - IO-Link (n bytes)     | r      |
| 3000     | Port X03: Digital Input - Pin 2 / Pin 4 (DI) | r      |
| 3001     | Port X03: Diagnostic + Status Data           | r      |
| 3002     | Port X03: Input Data - IO-Link (n bytes)     | r      |
| 4000     | Port X04: Digital Input - Pin 2 / Pin 4 (DI) | r      |
| 4001     | Port X04: Diagnostic + Status Data           | r      |
| 4002     | Port X04: Input Data - IO-Link (n bytes)     | r      |
| 5000     | Port X05: Digital Input - Pin 2 / Pin 4 (DI) | r      |
| 5001     | Port X05: Diagnostic + Status Data           | r      |
| 5002     | Port X05: Input Data - IO-Link (n bytes)     | r      |
| 6000     | Port X06: Digital Input - Pin 2 / Pin 4 (DI) | r      |
| 6001     | Port X06: Diagnostic + Status Data           | r      |
| 6002     | Port X06: Input Data - IO-Link (n bytes)     | r      |
| 7000     | Port X07: Digital Input - Pin 2 / Pin 4 (DI) | r      |
| 7001     | Port X07: Diagnostic + Status Data           | r      |
| 7002     | Port X07: Input Data - IO-Link (n bytes)     | r      |
| 8000     | Port X08: Digital Input - Pin 2 / Pin 4 (DI) | r      |
| 8001     | Port X08: Diagnostic + Status Data           | r      |
| 8002     | Port X08: Input Data - IO-Link (n bytes)     | r      |

r .. read only

n = [2,4,8,16,32]; is determined by parameters [Process Data Length] (→**Configuration Area** (→ p. [102](#)))

### 9.3.6 Write output data of several IO-Link ports

Register area for compact access to the output data of the IO-Link ports X01...X04 and X05...X08:

→ **Output Data** (→ p. [111](#))

The area contains the following data:

- Digital output data at clamp 4 (DO)
- IO-Link output data of the IO-Link ports



- Observe the general rules for access to the Modbus registers (→ **Rules for accessing the Modbus registers** (→ p. [89](#)))!

Several connected register areas can be written with one write command.

The IO-Link master writes only the outputs in "Compact Output Data" that are completely covered by the transferred output data.

Example: The configured process data length is 4 bytes. If all in all 5 words have been transferred to register 600, the IO-Link master writes the outputs X01 (words 1+2) and X02 (words 3+4). Output X03 is not written.

- When writing the IO-Link outputs, ensure that the output data has the correct length!

The output data is invalid in the following situations:

- no Ethernet cable connected
- PLC has terminated the connection
- connection to the PLC has a timeout

| Register | Contents                                               | Access |
|----------|--------------------------------------------------------|--------|
| 599      | Port X01...X04: Digital Output - Pin 4 (DO)            | r/w    |
| 600      | Port X01...X04: Compact Output Data IO-Link (4n bytes) | r/w    |
| 699      | Port X05...X08: Digital Output - clamp 4 (DO)          | r/w    |
| 700      | Port X05...X08: Compact Output Data IO-Link (4n bytes) | r/w    |

r/w = read and write

n = [2,4,8,16,32]; is determined by parameters [Process Data Length] (→ **Configuration Area** (→ p. [102](#)))

### 9.3.7 Write output data of individual IO-Link ports

Register area for separate access to output data of individual IO-Link ports: →**Single Port Access**  
 (→ p. [113](#))

The area contains the following data for each IO-Link port X01...X08:

- Digital output data at clamp 4 (DO)
- IO-Link output data

-  ► Observe the general rules for access to the Modbus registers (→**Rules for accessing the Modbus registers** (→ p. [89](#))!).

If the user tries to write more than 34 bytes of output data to a single port, the IO-Link master cancels the execution of the command and returns the error code "2 ILLIGEAL ADDRESS".

- When writing outputs, ensure that the length of the transferred output data corresponds with the configured process data length.

The output data is invalid in the following situations:

- no Ethernet cable connected
- PLC has terminated the connection
- Connection to the PLC has a timeout

| Register | Contents                                | Access |
|----------|-----------------------------------------|--------|
| 1100     | Port X01: Digital Output - Pin 4 (DO)   | r/w    |
| 1101     | Port X01: Output Data IO-Link (n bytes) | r/w    |
| 2100     | Port X02: Digital Output - Pin 4 (DO)   | r/w    |
| 2101     | Port X02: Output Data IO-Link (n bytes) | r/w    |
| 3100     | Port X03: Digital Output - Pin 4 (DO)   | r/w    |
| 3101     | Port X03: Output Data IO-Link (n bytes) | r/w    |
| 4100     | Port X04: Digital Output - Pin 4 (DO)   | r/w    |
| 4101     | Port X04: Output Data IO-Link (n bytes) | r/w    |
| 5100     | Port X05: Digital Output - Pin 4 (DO)   | r/w    |
| 5101     | Port X05: Output Data IO-Link (n bytes) | r/w    |
| 6100     | Port X06: Digital Output - Pin 4 (DO)   | r/w    |
| 6101     | Port X06: Output Data IO-Link (n bytes) | r/w    |
| 7100     | Port X07: Digital Output - Pin 4 (DO)   | r/w    |
| 7101     | Port X07: Output Data IO-Link (n bytes) | r/w    |
| 8100     | Port X08: Digital Output - Pin 4 (DO)   | r/w    |
| 8101     | Port X08: Output Data IO-Link (n bytes) | r/w    |

r/w = read and write

n = [2,4,8,16,32]; is determined by parameters [Process Data Length] (→**Configuration Area** (→ p. [102](#)))

### 9.3.8 Read diagnostic information and events

Register area for the access to diagnostic information of the IO-Link ports X01...X08: → **Diagnostic data** (→ p. [104](#))

The area contains the following data:

- Status/error flags for port configuration
- Vendor ID / device ID of the connected IO-Link devices
- Events and corresponding event codes

 ► Observe the general rules for access to the Modbus registers (→ **Rules for accessing the Modbus registers** (→ p. [89](#))!).



A maximum of 3 events per IO-Link port are displayed.

One-time events will be deleted after a minimum of 10 s (Event Single Shot).

Occurring events indicate the time of the error occurrence (event appears). If the error cause disappears, this is indicated by a further event (event disappears). Both event type always occur in pairs.

| Register | Contents                  | Access |
|----------|---------------------------|--------|
| 30       | Port X01: Diagnostic Data | r      |
| 40       | Port X02: Diagnostic Data | r      |
| 50       | Port X03: Diagnostic Data | r      |
| 60       | Port X04: Diagnostic Data | r      |
| 70       | Port X05: Diagnostic Data | r      |
| 80       | Port X06: Diagnostic Data | r      |
| 90       | Port X07: Diagnostic Data | r      |
| 100      | Port X08: Diagnostic Data | r      |

r ... read only

Additional diagnostic and status details are provided in the following register areas:

- "Input Data" area: → **Read input data of several IO-Link ports** (→ p. [83](#))
- "Single Port Access" area: → **Read input data of several IO-Link ports** (→ p. [83](#))

### 9.3.9 Read device information

The user can read device information using the FC43.

The AL1940 supports the following data records ("Read Device ID code"):

- Basic Device Identification (0x01): contained data objects: → Modbus TCP specification
- Regular Device Identification (0x02): contained data objects: → Modbus TCP specification
- Specific Device Identification (0x04): contained data objects:

| Object ID | Object name / description | Data type    | Possible values               |
|-----------|---------------------------|--------------|-------------------------------|
| 0x00      | VendorName                | ASCII string | ifm electronic                |
| 0x01      | ProductCode               | ASCII string | 1940                          |
| 0x02      | MajorMinorRevision        | ASCII string | e.g. V1.001                   |
| 0x03      | VendorURL                 | ASCII string | www.ifm.com                   |
| 0x04      | ProductName               | ASCII string | IO-Link Master CL MOD 8P IP20 |
| 0x05      | ModelName                 | ASCII string | 1940                          |
| 0x06      | UserApplicationName       | ASCII string | MODBUS IO-Link master         |

### 9.3.10 Control IO-Link master

The user can control the IO-Link master using the following acyclic commands:

- "Reboot": → **Command 0x40 – Reboot** (→ p. [127](#))
- "Factory Reset": → **Command 0x50 – Factory Reset** (→ p. [128](#))

The commands use the process mechanisms of the acyclic command channel (→ **Use acyclic services** (→ p. [90](#))).

### 9.3.11 Configure IO-Link devices

The IO-Link master supports the configuration of the connected IO-Link devices from the Modbus TCP projection software. The parameters of an IO-Link device are set via IO-Link index and subindex. The number of the configurable parameters depends on the connected IO-Link device.



Available parameters of the IO-Link devices: → IO Device Description (IODD) of the IO-Link device

The user can read and write IO-Link index and subindex using the following methods:

- Acyclic communication: → **Use acyclic services** (→ p. [90](#))

### 9.3.12 Modbus TCP: Programmers' notes

#### Content

|                                                |    |
|------------------------------------------------|----|
| Rules for accessing the Modbus registers ..... | 89 |
| Supported function codes.....                  | 89 |
| Note: Exception Codes.....                     | 89 |
| Use acyclic services .....                     | 90 |

33665

#### Rules for accessing the Modbus registers

54703

The following general rules apply for access to the Modbus registers:

- ▶ Only use the valid function codes to read or write Modbus registers (→ **Supported function codes** (→ p. [89](#))).
- ▶ After every read or write access check the validity of the transmitted data (→ **Mapping: PQI** (→ p. [115](#))).

#### Supported function codes

34440

The AL1940 supports the following function codes for read and/or write access to the Modbus register:

| Function code | Function name / description   |
|---------------|-------------------------------|
| 03 (0x03)     | Read Multiple Registers       |
| 04 (0x04)     | Read Input Register           |
| 06 (0x06)     | Write Single Register         |
| 16 (0x10)     | Write Multiple Registers      |
| 23 (0x17)     | Read/Write Multiple Registers |
| 43 (0x2B)     | Read Device Identification    |



Detailed information about the function codes: → MODBUS-TCP specification

#### Note: Exception Codes

54689

If processing the function code request was without error, the response message will have the following content:

- Response Function Code: Request Function Code
- Response Data: Requested data

If an error occurs while accessing the registers, the AL1940 replies with an error code instead of the function code. The response message has the following content:

- Response Function Code: Error Code (= Request Function Code + 0x80)
- Response Data: Exception Code

The following exception codes are available:

| Exception Code | Name             | Description                                             |
|----------------|------------------|---------------------------------------------------------|
| 0x1            | ILLEGAL FUNCTION | Invalid function code (Modbus function not implemented) |

|     |                       |                                                                  |
|-----|-----------------------|------------------------------------------------------------------|
| 0x2 | ILLEGAL DATA ADDRESS  | Invalid data address (wrong address or length)                   |
| 0x3 | ILLEGAL DATA VALUE    | Invalid data value (invalid parameter; wrong number of register) |
| 0x4 | SERVER DEVICE FAILURE | Unrecoverable error in Modbus server while processing            |

## Use acyclic services

34471

The AL1940 has a command interface to execute acyclic commands. A cyclic command consists of a request and a response.

| Register | Contents                                                   | Access |
|----------|------------------------------------------------------------|--------|
| 500      | Command Request Channel (Fieldbus PLC >>> IO-Link Master)  | r/w    |
| 0        | Command Response Channel (IO-Link Master >>> Fieldbus PLC) | r      |

Structure of the acyclic command channel: →**Acyclic Command Channel** (→ p. [116](#))

General procedure of the acyclic communication:

### 1 Write Command Request

- In the request channel: Write required data (except for [User ID]).
- > Write required [User ID].
- > Changed [User ID] signals a new command.
- > In the response channel: registers are reset to 0.
- > Acyclic command channel is blocked.
- > Processing of the command is started.

### 2 Check status

- In the response channel: Check [Command Status] register.
- > If [Command Status] <> 0: continue with step 3
- > If [Command Status] == 0: repeat step 2.

### 3 Read Command Response

- In the response channel: read returned user data.
- > Acyclic command channel is released.

# 10 Operation

## Content

|                                 |       |
|---------------------------------|-------|
| Using web-based management..... | 91    |
|                                 | 34061 |

## 10.1 Using web-based management

61181

The device has an integrated web server. The web server generates a website with the following data:

- Status information of the ports
- Access to product page of connected IO-Link devices (only ifm devices)
- Diagnostic information of the device
- Version information of the installed firmware components

To access the web interface of the IO-Link master:

- ▶ Connect the IO-Link master to the laptop / PC via the IoT port.
- ▶ Optional: Check the IP settings of the IoT interface.
- ▶ Start web browser.
- ▶ In the address field of the web browser, enter the IP address of the IoT interface and confirm with [ENTER].
- > The web browser shows the website with the status and diagnostic information of the device.

## 11 Maintenance, repair and disposal

### Content

|                               |    |
|-------------------------------|----|
| Cleaning process.....         | 92 |
| Updating the firmware .....   | 92 |
| Replacing IO-Link device..... | 92 |

51990

The operation of the unit is maintenance-free.

- Dispose of the unit in an environmentally friendly way in accordance with the applicable national regulations when it is no longer used.

### 11.1 Cleaning process

51991

- Clean the surface of the unit when necessary.
- Do not use any caustic cleaning agents for this!
- In case of severe soiling, use a damp cloth.
- Do not use any caustic cleaning agents for this!

### 11.2 Updating the firmware

61183

The firmware of the IO-Link master can be updated via the IoT Core Visualizer → **Updating the firmware** (→ p. [78](#), → p. [92](#)).

### 11.3 Replacing IO-Link device

34182

To replace an IO-Link device:

#### Requirement:

- > New IO-Link device is with factory settings.
- > New IO-Link device supports IO-Link standard 1.1 or higher.

#### 1 Set data storage

- Set the following parameters of the IO-Link port
  - Set Validation and Data Storage to [Type compatible V1.1 device with Restore] or [Type compatible V1.1. device with Backup + Restore]
  - Set correct values to [Vendor ID] and [Device ID] according to properties of the IO-Link device.
- Save changes.

#### 2 Replace IO-Link device

- Disconnect old IO-Link device from IO-Link master.
- Connect new IO-Link device with the same IO-Link port of the AL1940.
- > IO-Link master copies parameter values from the data memory to the new IO-Link device.

## 12 Factory settings

In the factory settings, the device has the following parameter settings:

| Parameter                            | Factory setting |
|--------------------------------------|-----------------|
| [IP address] (Modbus TCP)            | 192.168.1.250   |
| [Subnet mask] (Modbus TCP)           | 255.255.255.0   |
| [IP gateway address] (Modbus TCP)    | 0.0.0.0         |
| [IP address] (IoT interface)         | 169.254.X.X     |
| [Subnet mask] (IoT interface)        | 255.255.0.0     |
| [IP gateway address] (IoT interface) | 0.0.0.0         |
| [Modbus TCP name]                    | blank           |
| Data memory (Data Storage)           | empty           |

## 13 Accessories

33870

List of accessories of AL1940: → [www.ifm.com](http://www.ifm.com)) > Product page > Accessories

## 14 Appendix

### Content

|                      |       |
|----------------------|-------|
| Technical data ..... | 96    |
| Modbus TCP .....     | 100   |
| ifm IoT Core .....   | 129   |
|                      | 33879 |

## 14.1 Technical data

### Content

|                                |    |
|--------------------------------|----|
| Application .....              | 96 |
| Electrical data .....          | 96 |
| Inputs / outputs .....         | 96 |
| Inputs .....                   | 97 |
| Outputs .....                  | 97 |
| Interfaces .....               | 97 |
| Environmental conditions ..... | 98 |
| Approvals / tests .....        | 98 |
| Mechanical data .....          | 98 |
| Electrical connection .....    | 99 |

34188

### 14.1.1 Application

33878

| Application          |                                 |
|----------------------|---------------------------------|
| Application          | I/O modules for control cabinet |
| Daisy-chain function | Fieldbus interface              |

### 14.1.2 Electrical data

33808

| Electrical data             |                                |
|-----------------------------|--------------------------------|
| Operating voltage [V]       | 20...30 DC; (US; to SELV/PELV) |
| Current Consumption [mA]    | 300...3900; (US)               |
| Protection class            | III                            |
| Sensor supply US            |                                |
| Max. current load total [A] | 3.6                            |

### 14.1.3 Inputs / outputs

34068

| Inputs / outputs                   |                                                            |
|------------------------------------|------------------------------------------------------------|
| Total number of inputs and outputs | 16; (configurable)                                         |
| Number of Inputs and Outputs       | Number of digital inputs: 16; Number of digital outputs: 8 |

#### 14.1.4 Inputs

34069

| Inputs                                          |                            |
|-------------------------------------------------|----------------------------|
| Number of digital inputs                        | 16; (IO-Link Port Class A) |
| Switching level high [V]                        | 11...30                    |
| Switching level low [V]                         | 0...5                      |
| Digital inputs protected against short circuits | yes                        |

#### 14.1.5 Outputs

34053

| Outputs                           |                           |
|-----------------------------------|---------------------------|
| Number of digital outputs         | 8; (IO-Link Port Class A) |
| Max. current load per output [mA] | 300                       |
| Short-circuit protection          | yes                       |

#### 14.1.6 Interfaces

34389

| Interfaces                 |                                                                                                                                                                                                   |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Communication interface    | Ethernet; IO-Link                                                                                                                                                                                 |
| Communication interface    | IO-Link; TCP/IP; Modbus TCP                                                                                                                                                                       |
| Ethernet                   |                                                                                                                                                                                                   |
| Transmission standard      | 10Base-T; 100Base-TX                                                                                                                                                                              |
| Transmission rate [MBit/s] | 10; 100                                                                                                                                                                                           |
| Protocol                   | TCP/IP; Modbus TCP                                                                                                                                                                                |
| Factory settings           | <ul style="list-style-type: none"> <li>▪ IP address: 192.168.1.250</li> <li>▪ Subnet mask: 255.255.255.0</li> <li>▪ Gateway IP address: 0.0.0.0</li> <li>▪ MAC address: see type label</li> </ul> |
| IO-Link master             |                                                                                                                                                                                                   |
| Type of transmission       | COM 1 / COM 2 / COM 3                                                                                                                                                                             |
| IO-Link revision           | V1.1                                                                                                                                                                                              |
| Number of ports Class A    | 8                                                                                                                                                                                                 |
| IoT interface              |                                                                                                                                                                                                   |
| Transmission standard      | 10Base-T; 100Base-TX                                                                                                                                                                              |
| Transmission rate [Mbit/s] | 10; 100                                                                                                                                                                                           |
| Protocol                   | DCP, DCHP, Auto IP                                                                                                                                                                                |
| Factory settings           | <ul style="list-style-type: none"> <li>▪ IP address: 169.254.X.X</li> <li>▪ Subnet mask: 255.255.0.0</li> <li>▪ Gateway IP address: 0.0.0.0</li> <li>▪ MAC address: see type label</li> </ul>     |

### 14.1.7 Environmental conditions

33811

| Environmental conditions             |                                         |
|--------------------------------------|-----------------------------------------|
| Applications                         | Control cabinet                         |
| Ambient temperature [°C]             | -25...65                                |
| Storage temperature [°C]             | -25...85                                |
| Max. perm. relative air humidity [%] | 90, linearly decreasing to 50 % (40 °C) |
| Max. height above sea level [m]      | 2000                                    |
| Protection                           | IP 20                                   |
| Degree of soiling                    | 2                                       |

### 14.1.8 Approvals / tests

33877

| Approval / tests |                                                                                          |
|------------------|------------------------------------------------------------------------------------------|
| EMC              | <ul style="list-style-type: none"> <li>▪ EN 61000-6-2</li> <li>▪ EN 61000-6-4</li> </ul> |
| MTTF [Years]     | 90                                                                                       |

### 14.1.9 Mechanical data

34050

| Mechanical data |             |
|-----------------|-------------|
| Weight [g]      | 329,5       |
| Materials       | Housing: PA |

### 14.1.10 Electrical connection

| <b>Voltage supply IN X31</b>                              |                                                                                 |
|-----------------------------------------------------------|---------------------------------------------------------------------------------|
| Plug and socket connection                                | COMBICON                                                                        |
| Wiring                                                    | 1: GND (US)<br>2: GND (US)<br>3: + 24 V DC (US)<br>4: + 24 V DC (US)            |
| <b>Process connection IO-Link ports Class A X01...X08</b> |                                                                                 |
| Plug and socket connection                                | COMBICON                                                                        |
| Wiring                                                    | 1: Sensor supply (US) L+<br>2: DI<br>3: Sensor supply (US) L-<br>4: C/Q IO-Link |
| <b>Ethernet IN / OUT X21, X22</b>                         |                                                                                 |
| Plug and socket connection                                | RJ-45                                                                           |
| <b>IoT X32</b>                                            |                                                                                 |
| Plug and socket connection                                | RJ-45                                                                           |

## 14.2 Modbus TCP

### Content

|                        |     |
|------------------------|-----|
| Register .....         | 101 |
| Acyclic commands ..... | 120 |

33674

## 14.2.1 Register

### Content

|                               |     |
|-------------------------------|-----|
| Configuration Area.....       | 102 |
| Diagnostic data .....         | 104 |
| Input Data .....              | 107 |
| Output Data .....             | 111 |
| Single Port Access .....      | 113 |
| Acyclic Command Channel ..... | 116 |

34442

The AL1940 saves the configuration data, process data and status/diagnostic data in Modbus registers.

## Configuration Area

| Register | Content                                                                                                  |                     |
|----------|----------------------------------------------------------------------------------------------------------|---------------------|
|          | Bits 8-15                                                                                                | Bits 0-7            |
| 8998     | Access Rights                                                                                            | Process Data Length |
| 8999     | reserved                                                                                                 | Byte Swap           |
| 9000     | Port X01: Port Configuration (→ <a href="#">Mapping: port configuration</a> (→ p. <a href="#">103</a> )) |                     |
| 9006     | Port X02: Port Configuration (→ <a href="#">Mapping: port configuration</a> (→ p. <a href="#">103</a> )) |                     |
| 9012     | Port X03: Port Configuration (→ <a href="#">Mapping: port configuration</a> (→ p. <a href="#">103</a> )) |                     |
| 9018     | Port X04: Port Configuration (→ <a href="#">Mapping: port configuration</a> (→ p. <a href="#">103</a> )) |                     |
| 9024     | Port X05: Port Configuration (→ <a href="#">Mapping: port configuration</a> (→ p. <a href="#">103</a> )) |                     |
| 9030     | Port X06: Port Configuration (→ <a href="#">Mapping: port configuration</a> (→ p. <a href="#">103</a> )) |                     |
| 9036     | Port X07: Port Configuration (→ <a href="#">Mapping: port configuration</a> (→ p. <a href="#">103</a> )) |                     |
| 9042     | Port X08: Port Configuration (→ <a href="#">Mapping: port configuration</a> (→ p. <a href="#">103</a> )) |                     |

Legend:

- [Access Rights] The access rights to the parameter data, process data and the events/diagnostic messages of the IO-Link master as well as the connected IO-Link devices.
 

|        |      |                        |
|--------|------|------------------------|
| 1 byte | 0x00 | Modbus TCP + IoT       |
|        | 0x01 | Modbus TCP + IoT (ro)  |
|        | 0x02 | Modbus TCP only        |
|        | 0x03 | Keep setting (default) |
- [Process Data Length] Length of the process input data and process output data
 

|        |      |                                                                                                                                                   |
|--------|------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 byte | 0x00 | 2 bytes input / 2 bytes output data <ul style="list-style-type: none"> <li>▪ Input Data: 14 Words</li> <li>▪ Output Data: 10 Words</li> </ul>     |
|        | 0x01 | 4 bytes input / 4 bytes output data <ul style="list-style-type: none"> <li>▪ Input Data: 22 Words</li> <li>▪ Output Data: 18 Words</li> </ul>     |
|        | 0x02 | 8 bytes input / 8 bytes output data <ul style="list-style-type: none"> <li>▪ Input Data: 38 Words</li> <li>▪ Output Data: 34 Words</li> </ul>     |
|        | 0x03 | 16 bytes input / 16 bytes output data <ul style="list-style-type: none"> <li>▪ Input Data: 70 Words</li> <li>▪ Output Data: 66 Words</li> </ul>   |
|        | 0x04 | 32 bytes input / 32 bytes output data <ul style="list-style-type: none"> <li>▪ Input Data: 134 Words</li> <li>▪ Output Data: 130 Words</li> </ul> |
- [Byte Swap] Sequence of bytes in the data word
 

|        |      |                                                                                                        |
|--------|------|--------------------------------------------------------------------------------------------------------|
| 1 byte | 0x00 | as Array of Bytes                                                                                      |
|        | 0x01 | as integer16 value; when process data is updated, bytes will be exchanged (input data and output data) |
- [Port Configuration] Configuration of the IO-Link port
 

|          |                                                                           |
|----------|---------------------------------------------------------------------------|
| 12 bytes | → <a href="#">Mapping: port configuration</a> (→ p. <a href="#">103</a> ) |
|----------|---------------------------------------------------------------------------|

## Mapping: port configuration

34478

| <b>Bits 8-15</b>         | <b>Bits 0-7</b>             |
|--------------------------|-----------------------------|
| Port Mode                | Master Cycle Time           |
| reserved                 | Validation ID               |
| Vendor ID                |                             |
| reserved                 | Device ID (MSB)             |
| Device ID                | Device ID (LSB)             |
| Failsafe Mode -- IO-Link | Failsafe Mode -- Pin 4 (DO) |

**Legend:**

- |                                 |                                                                                                                                                                                                                  |         |                       |                                   |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|-----------------------|-----------------------------------|
| ▪ [Port Mode]                   | Operating mode of the IO-Link port                                                                                                                                                                               | 1 byte  | 0x00                  | deactivated                       |
|                                 |                                                                                                                                                                                                                  |         | 0x01                  | Digital input (DI)                |
|                                 |                                                                                                                                                                                                                  |         | 0x02                  | Digital output (DO)               |
|                                 |                                                                                                                                                                                                                  |         | 0x03                  | IO-Link                           |
| ▪ [Master Cycle Time]           | Cycle time of the data transmission between the IO-Link master and the IO-Link device                                                                                                                            | 1 byte  | 0x00                  | As fast as possible               |
|                                 |                                                                                                                                                                                                                  |         | 0x01                  | 2 milliseconds                    |
|                                 |                                                                                                                                                                                                                  |         | 0x02                  | 4 milliseconds                    |
|                                 |                                                                                                                                                                                                                  |         | 0x03                  | 8 milliseconds                    |
|                                 |                                                                                                                                                                                                                  |         | 0x04                  | 16 milliseconds                   |
|                                 |                                                                                                                                                                                                                  |         | 0x05                  | 32 milliseconds                   |
|                                 |                                                                                                                                                                                                                  |         | 0x06                  | 64 milliseconds                   |
|                                 |                                                                                                                                                                                                                  |         | 0x07                  | 128 milliseconds                  |
| ▪ [Validation ID]               | Supported IO-Link standard and behaviour of the IO-Link master when connecting new IO-Link devices to the IO-Link port                                                                                           | 1 byte  | 0x00                  | No validation                     |
|                                 |                                                                                                                                                                                                                  |         | 0x01                  | V1.0 device                       |
|                                 |                                                                                                                                                                                                                  |         | 0x02                  | V1.1 device                       |
|                                 |                                                                                                                                                                                                                  |         | 0x03                  | V1.1 device with Backup + Restore |
|                                 |                                                                                                                                                                                                                  |         | 0x04                  | V1.1 device with Backup           |
| ▪ [Vendor ID]                   | Vendor ID of the manufacturer of the device on the IO-Link port                                                                                                                                                  | 2 bytes | 0x0000...0xFFFF       |                                   |
| ▪ [Device ID]                   | Device ID of the device on the IO-Link port<br><br>Device ID = 0x123456 <ul style="list-style-type: none"> <li>▪ Device ID (MSB) = 0x12</li> <li>▪ Device ID = 0x34</li> <li>▪ Device ID (LSB) = 0x56</li> </ul> | 3 bytes | pro Byte: 0x00...0xFF |                                   |
| ▪ [Failsafe Mode -- IO-Link]    | Fail-safe mode for output data when the Modbus TCP connection is interrupted                                                                                                                                     | 1 byte  | 0x00                  | No Failsafe                       |
|                                 |                                                                                                                                                                                                                  |         | 0x01                  | Failsafe Reset Value              |
|                                 |                                                                                                                                                                                                                  |         | 0x02                  | Failsafe Old Value                |
|                                 |                                                                                                                                                                                                                  |         | 0x03                  | Failsafe with Pattern             |
| ▪ [Failsafe Mode -- Pin 4 (DO)] | Fail-safe value for the operating mode "digital output (DO)"                                                                                                                                                     | 1 byte  | 0x00                  | Failsafe Reset Value              |
|                                 |                                                                                                                                                                                                                  |         | 0x01                  | Failsafe Old Value                |
|                                 |                                                                                                                                                                                                                  |         | 0x02                  | Failsafe Set Value                |

## Diagnostic data

| Register | Contents                                                                |                                                                     |
|----------|-------------------------------------------------------------------------|---------------------------------------------------------------------|
|          | Bits 8-15                                                               | Bits 0-7                                                            |
| 30       | reserved                                                                | Port X01: → <b>Mapping: Diagnostics</b> (→ p. <a href="#">105</a> ) |
| 31       | Port X01: Vendor ID                                                     |                                                                     |
| 32       | reserved                                                                | Port X01: Device ID (MSB)                                           |
| 33       | Port X01: Device ID                                                     | Port X01: Device ID (LSB)                                           |
| 34...39  | Port X01: Events (→ <b>Mapping: events</b> (→ p. <a href="#">106</a> )) |                                                                     |
| 40       | Port X02: Diagnostic data (Mapping: → Port X01 - register 30...39)      |                                                                     |
| 50       | Port X03: Diagnostic data (Mapping: → Port X01 - register 30...39)      |                                                                     |
| 60       | Port X04: Diagnostic data (Mapping: → Port X01 - register 30...39)      |                                                                     |
| 70       | Port X05: Diagnostic data (Mapping: → Port X01 - register 30...39)      |                                                                     |
| 80       | Port X06: Diagnostic data (Mapping: → Port X01 - register 30...39)      |                                                                     |
| 90       | Port X07: Diagnostic data (Mapping: → Port X01 - register 30...39)      |                                                                     |
| 100      | Port X08: Diagnostic data (Mapping: → Port X01 - register 30...39)      |                                                                     |

Legend:

- [Vendor ID] Vendor ID of the manufacturer of the device on the IO-Link port 2 bytes 0x0000...0xFFFF
- [Device ID] Device ID of the device on the IO-Link port 3 bytes per byte: 0x00...0xFF
  - Device ID = 0x123456
    - Device ID (MSB) = 0x12
    - Device ID = 0x34
    - Device ID (LSB) = 0x56

## Mapping: Diagnostics

34504

| <b>Bit 7</b> | <b>Bit 6</b>           | <b>Bit 5</b>          | <b>Bit 4</b> | <b>Bit 3</b>                     | <b>Bit 2</b> | <b>Bit 1</b> | <b>Bit 0</b> |
|--------------|------------------------|-----------------------|--------------|----------------------------------|--------------|--------------|--------------|
| reserved     | Wrong Length<br>PD OUT | Wrong Length<br>PD IN | Cycle time   | Wrong<br>Vendor ID/<br>Device ID | reserved     | reserved     | IOL mode     |

**Legend:**

- |                                   |                                                                                                            |       |     |                           |
|-----------------------------------|------------------------------------------------------------------------------------------------------------|-------|-----|---------------------------|
| ▪ [IOL Mode]                      | Operating type of the IO-Link port                                                                         | 1 bit | 0x0 | Other                     |
|                                   |                                                                                                            |       | 0x1 | IO-Link                   |
| ▪ [Wrong Vendor ID/<br>Device ID] | Verification if the current and configured vendor ID and device ID are identical                           | 1 bit | 0x0 | OK                        |
|                                   |                                                                                                            |       | 0x1 | No match                  |
| ▪ [Wrong Cycle Time]              | Verification if the current and configured cycle time are identical                                        | 1 bit | 0x0 | OK                        |
|                                   |                                                                                                            |       | 0x1 | No match                  |
| ▪ [Wrong Length PD IN]            | Verification if the size of the received input data are identical with the configured size                 | 1 bit | 0x0 | OK                        |
|                                   |                                                                                                            |       | 0x1 | Configured size too small |
| ▪ [Wrong Length PD OUT]           | Verification if the size of the sent output data is identical with the size expected by the IO-Link device | 1 bit | 0x0 | OK                        |
|                                   |                                                                                                            |       | 0x1 | Configured size too small |

## Mapping: events

34481

### Legend:

- |                       |                                         |         |                                          |                       |
|-----------------------|-----------------------------------------|---------|------------------------------------------|-----------------------|
| ▪ [Event m: Mode]     | Mode: mode of the event                 | 2 bits  | 0x0                                      | reserved              |
|                       |                                         |         | 0x1                                      | One-time event        |
|                       |                                         |         | 0x2                                      | Event has disappeared |
|                       |                                         |         | 0x3                                      | Event has appeared    |
| ▪ [Event m: Type]     | Type: category of the event             | 2 bits  | 0x0                                      | reserved              |
|                       |                                         |         | 0x1                                      | Notification          |
|                       |                                         |         | 0x2                                      | Warning               |
|                       |                                         |         | 0x3                                      | Error                 |
| ▪ [Event m: Src]      | Source: source of the event             | 1 bit   | 0x0                                      | IO-Link Device        |
|                       |                                         |         | 0x1                                      | IO-Link Master        |
| ▪ [Event m: Instance] | Type: trigger of the event              | 2 bits  | 0x0                                      | unknown               |
|                       |                                         |         | 0x1...0x3                                | reserved              |
|                       |                                         |         | 0x4                                      | Application           |
|                       |                                         |         | 0x5...0x7                                | reserved              |
| ▪ [Event m: Code]     | Code: event code; depends on the device | 2 bytes | → IODD description of the IO-Link device |                       |

## Input Data

| Register | Contents                                                                                                                          |          |
|----------|-----------------------------------------------------------------------------------------------------------------------------------|----------|
|          | Bits 8-15                                                                                                                         | Bits 0-7 |
| 197      | Port X01...X04: Digital Input - Pin 2 / Pin 4 (DI) (→ <b>Mapping: digital input data</b> (→ p. <a href="#">108</a> ))             |          |
| 198      | Port X01...X04: Diagnostic Information (→ <b>Mapping: diagnostic information</b> (→ p. <a href="#">109</a> ))                     |          |
| 199      | Port X01...X04: Status Information IO-Link Ports (→ <b>Mapping: Status information IO-Link ports</b> (→ p. <a href="#">110</a> )) |          |
| 200      | Port X01...X04: Compact Input Block (4n bytes) (→ <b>Mapping: Compact Input Block</b> (→ p. <a href="#">110</a> ))                |          |
| 297      | Port X05...X08: Digital Input - Pin 2 / Pin 4 (DI) (→ <b>Mapping: digital input data</b> (→ p. <a href="#">108</a> ))             |          |
| 298      | Port X05...X08: Diagnostic Information (→ <b>Mapping: diagnostic information</b> (→ p. <a href="#">109</a> ))                     |          |
| 299      | Port X05...X08: Status Information IO-Link Ports (→ <b>Mapping: Status information IO-Link ports</b> (→ p. <a href="#">110</a> )) |          |
| 300      | Port X05...X08: Compact Input Block (4n bytes) (→ <b>Mapping: Compact Input Block</b> (→ p. <a href="#">110</a> ))                |          |

Legend:

- [Digital Input - Pin 2 / Pin 4 (DI)]      Digital input data Pin 2 / Pin 4 (operating mode DI) of 4 IO-Link ports      2 bytes
- [Diagnostic Information]      Diagnostic information      2 bytes
- [Status Information IO-Link Ports]      Status information of the IO-Link ports      2 bytes
- [Compact Input Block (4n Bytes)]      Input data (operating mode IO-Link) of 4 IO-Link ports      4n byte      per byte:  
n = [2,4,8,16,32]; is determined by parameter [Process Data Length]  
(→ **Configuration Area** (→ p. [102](#)))

## Mapping: digital input data

34483

Register 197:

| Bit  |      |      |      |                    |                    |                    |                    |      |      |      |      |                    |                    |                    |                    |  |
|------|------|------|------|--------------------|--------------------|--------------------|--------------------|------|------|------|------|--------------------|--------------------|--------------------|--------------------|--|
| 15   | 14   | 13   | 12   | 11                 | 10                 | 9                  | 8                  | 7    | 6    | 5    | 4    | 3                  | 2                  | 1                  | 0                  |  |
| res. | res. | res. | res. | X04:<br>clamp<br>2 | X03:<br>clamp<br>2 | X02:<br>clamp<br>2 | X01:<br>clamp<br>2 | res. | res. | res. | res. | X04:<br>clamp<br>4 | X03:<br>clamp<br>4 | X02:<br>clamp<br>4 | X01:<br>clamp<br>4 |  |

## Register 297:

| Bit  |      |      |      |                    |                    |                    |                    |      |      |      |      |                    |                    |                    |                    |  |
|------|------|------|------|--------------------|--------------------|--------------------|--------------------|------|------|------|------|--------------------|--------------------|--------------------|--------------------|--|
| 15   | 14   | 13   | 12   | 11                 | 10                 | 9                  | 8                  | 7    | 6    | 5    | 4    | 3                  | 2                  | 1                  | 0                  |  |
| res. | res. | res. | res. | X08:<br>clamp<br>2 | X07:<br>clamp<br>2 | X06:<br>clamp<br>2 | X05:<br>clamp<br>2 | res. | res. | res. | res. | X08:<br>clamp<br>4 | X07:<br>clamp<br>4 | X06:<br>clamp<br>4 | X05:<br>clamp<br>4 |  |

---

**Legend:**

- |             |                                                        |       |     |      |
|-------------|--------------------------------------------------------|-------|-----|------|
| ▪ [clamp 4] | Signal level on clamp 4 of the IO-Link port (DI)       | 1 bit | 0x0 | LOW  |
|             |                                                        |       | 0x1 | HIGH |
| ▪ [clamp 2] | Signal level on clamp 2 of the IO-Link ports (if used) | 1 bit | 0x0 | LOW  |
|             |                                                        |       | 0x1 | HIGH |

## Mapping: diagnostic information

Register 198:

| Bit  |      |      |      |                   |                   |                   |                   |      |      |      |      |      |      |             |            |  |
|------|------|------|------|-------------------|-------------------|-------------------|-------------------|------|------|------|------|------|------|-------------|------------|--|
| 15   | 14   | 13   | 12   | 11                | 10                | 9                 | 8                 | 7    | 6    | 5    | 4    | 3    | 2    | 1           | 0          |  |
| res. | res. | res. | res. | X04:<br>SC/<br>OL | X03:<br>SC/<br>OL | X02:<br>SC/<br>OL | X01:<br>SC/<br>OL | res. | res. | res. | res. | res. | res. | SENS<br>PWR | AUX<br>PWR |  |

Register 298:

| Bit  |      |      |      |                   |                   |                   |                   |      |      |      |      |      |      |             |            |  |
|------|------|------|------|-------------------|-------------------|-------------------|-------------------|------|------|------|------|------|------|-------------|------------|--|
| 15   | 14   | 13   | 12   | 11                | 10                | 9                 | 8                 | 7    | 6    | 5    | 4    | 3    | 2    | 1           | 0          |  |
| res. | res. | res. | res. | X08:<br>SC/<br>OL | X07:<br>SC/<br>OL | X06:<br>SC/<br>OL | X05:<br>SC/<br>OL | res. | res. | res. | res. | res. | res. | SENS<br>PWR | AUX<br>PWR |  |

Legend:

- [SC/OL] Short Circuit / Overload: indicates the occurrence of a short-circuit or overvoltage on the IO-Link port
 

|       |                              |            |
|-------|------------------------------|------------|
| 1 bit | 0x0                          | error-free |
| 0x1   | Short-circuit or overvoltage |            |
- [SENS PWR] Sensor Power: indicates the status of the supply voltage US
 

|       |              |                  |
|-------|--------------|------------------|
| 1 bit | 0x0          | US not available |
| 0x1   | US available |                  |
- [AUX PWR] Auxiliary Power: indicates the supply voltage UA
 

|       |              |                  |
|-------|--------------|------------------|
| 1 bit | 0x0          | UA not available |
| 0x1   | UA available |                  |

## Mapping: Status information IO-Link ports

34490

Register 199:

| Bit  |      |      |      |                         |                         |                         |                         |      |      |      |      |                            |                            |                            |                            |  |
|------|------|------|------|-------------------------|-------------------------|-------------------------|-------------------------|------|------|------|------|----------------------------|----------------------------|----------------------------|----------------------------|--|
| 15   | 14   | 13   | 12   | 11                      | 10                      | 9                       | 8                       | 7    | 6    | 5    | 4    | 3                          | 2                          | 1                          | 0                          |  |
| res. | res. | res. | res. | X04:<br>Data<br>invalid | X03:<br>Data<br>invalid | X02:<br>Data<br>invalid | X01:<br>Data<br>invalid | res. | res. | res. | res. | X04:<br>Dev<br>Not<br>Conn | X03:<br>Dev<br>Not<br>Conn | X02:<br>Dev<br>Not<br>Conn | X01:<br>Dev<br>Not<br>Conn |  |

## Register 299:

| Bit  |      |      |      |                         |                         |                         |                         |      |      |      |       |                            |                            |                            |                            |  |
|------|------|------|------|-------------------------|-------------------------|-------------------------|-------------------------|------|------|------|-------|----------------------------|----------------------------|----------------------------|----------------------------|--|
| 15   | 14   | 13   | 12   | 11                      | 10                      | 9                       | 8                       | 7    | 6    | 5    | 4     | 3                          | 2                          | 1                          | 0                          |  |
| res. | res. | res. | res. | X08:<br>Data<br>invalid | X07:<br>Data<br>invalid | X06:<br>Data<br>Invalid | X05:<br>Data<br>invalid | res. | res. | res. | sres. | X08:<br>Dev<br>Not<br>Conn | X07:<br>Dev<br>Not<br>Conn | X06:<br>Dev<br>Not<br>Conn | X05:<br>Dev<br>Not<br>Conn |  |

---

**Legend:**

- |                  |                                                                              |       |     |               |
|------------------|------------------------------------------------------------------------------|-------|-----|---------------|
| ▪ [Data invalid] | indicates the status of the process input data on the IO-Link port           | 1 bit | 0x0 | data valid    |
|                  |                                                                              |       | 0x1 | data invalid  |
| ▪ [Dev Not Conn] | Device Connected: indicates the connection to the device on the IO-Link port | 1 bit | 0x0 | available     |
|                  |                                                                              |       | 0x1 | not available |

## Mapping: Compact Input Block

54566

| IO-Link port | Register area           |                         |                         |                           |                           |
|--------------|-------------------------|-------------------------|-------------------------|---------------------------|---------------------------|
|              | 2 bytes/port<br>(n = 2) | 4 bytes/port<br>(n = 4) | 8 bytes/port<br>(n = 8) | 16 bytes/port<br>(n = 16) | 32 bytes/port<br>(n = 32) |
| Port X01     | 200                     | 200...201               | 200...203               | 200...207                 | 200...215                 |
| Port X02     | 201                     | 202...203               | 204...207               | 208...215                 | 216...231                 |
| Port X03     | 202                     | 204...205               | 208...211               | 216...223                 | 232...247                 |
| Port X04     | 203                     | 206...207               | 212...215               | 224...231                 | 248...263                 |
| Port X05     | 300                     | 300...301               | 300...303               | 300...307                 | 300...315                 |
| Port X06     | 301                     | 302...303               | 304...307               | 308...315                 | 316...331                 |
| Port X07     | 302                     | 304...305               | 308...311               | 316...323                 | 332...347                 |
| Port X08     | 303                     | 306...307               | 312...315               | 324...331                 | 348...363                 |

## Output Data

34446

| Register | Contents                                                                                                             |          |
|----------|----------------------------------------------------------------------------------------------------------------------|----------|
|          | Bits 8-15                                                                                                            | Bits 0-7 |
| 599      | Port X01...X04: Digital Output - clamp 4 (DO) (→ <b>Mapping: Digital output data</b> (→ p. <a href="#">111</a> ))    |          |
| 600      | Port X01...X04: Compact Output Block (4n bytes) (→ <b>Mapping: Compact Output Block</b> (→ p. <a href="#">112</a> )) |          |
| 699      | Port X05...X08: Digital Output - clamp 4 (DO) (→ <b>Mapping: Digital output data</b> (→ p. <a href="#">111</a> ))    |          |
| 700      | Port X05...X08: Compact Output Block (4n bytes) (→ <b>Mapping: Compact Output Block</b> (→ p. <a href="#">112</a> )) |          |

**Legend:**

- |                                     |                                                                                                                                                                                                |          |                          |
|-------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|--------------------------|
| ▪ [Digital Output - clamp 4 (DO)]   | Digital output data - clamp 4 (operating mode DO) of 4 IO-Link ports                                                                                                                           | 2 bytes  |                          |
| ▪ [Compact Output Block (4n Bytes)] | Output data (operating mode IO-Link) of 4 IO-Link ports<br>$n = [2,4,8,16,32]$ ; is determined by parameters [Process Data Length] ( $\rightarrow$ Configuration Area ( $\rightarrow$ p. 102)) | 4n bytes | per byte:<br>0x00...0xFF |

## Mapping: Digital output data

34482

## Register 599:

| Bit  |      |      |      |      |      |      |      |      |      |      |      |                    |                    |                    |                    |
|------|------|------|------|------|------|------|------|------|------|------|------|--------------------|--------------------|--------------------|--------------------|
| 15   | 14   | 13   | 12   | 11   | 10   | 9    | 8    | 7    | 6    | 5    | 4    | 3                  | 2                  | 1                  | 0                  |
| res. | X04:<br>clamp<br>4 | X03:<br>clamp<br>4 | X02:<br>clamp<br>4 | X01:<br>clamp<br>4 |

## Register 699:

| Bit  |      |      |      |      |      |      |      |      |      |      |      |                    |                    |                    |                    |
|------|------|------|------|------|------|------|------|------|------|------|------|--------------------|--------------------|--------------------|--------------------|
| 15   | 14   | 13   | 12   | 11   | 10   | 9    | 8    | 7    | 6    | 5    | 4    | 3                  | 2                  | 1                  | 0                  |
| res. | X08:<br>clamp<br>4 | X07:<br>clamp<br>4 | X06:<br>clamp<br>4 | X05:<br>clamp<br>4 |

---

**Legend:**

- |             |                                                  |       |     |      |
|-------------|--------------------------------------------------|-------|-----|------|
| ▪ [clamp 4] | Signal level on clamp 4 of the IO-Link port (DO) | 1 bit | 0x0 | LOW  |
|             |                                                  |       | 0x1 | HIGH |

**Mapping: Compact Output Block**

| IO-Link port | Register area           |                         |                         |                           |                           |
|--------------|-------------------------|-------------------------|-------------------------|---------------------------|---------------------------|
|              | 2 bytes/port<br>(n = 2) | 4 bytes/port<br>(n = 4) | 8 bytes/port<br>(n = 8) | 16 bytes/port<br>(n = 16) | 32 bytes/port<br>(n = 32) |
| Port X01     | 600                     | 600...601               | 600...603               | 600...607                 | 600...615                 |
| Port X02     | 601                     | 602...603               | 604...607               | 608...615                 | 616...631                 |
| Port X03     | 602                     | 604...605               | 608...611               | 616...623                 | 632...647                 |
| Port X04     | 603                     | 606...607               | 612...615               | 624...631                 | 648...663                 |
| Port X05     | 700                     | 700...701               | 700...703               | 700...707                 | 700...715                 |
| Port X06     | 701                     | 702...703               | 704...707               | 708...715                 | 716...731                 |
| Port X07     | 702                     | 704...705               | 708...711               | 716...723                 | 732...747                 |
| Port X08     | 703                     | 706...707               | 712...715               | 724...731                 | 748...763                 |

## Single Port Access

| Register | Contents                                                                   |                                                                           |
|----------|----------------------------------------------------------------------------|---------------------------------------------------------------------------|
|          | Bits 8-15                                                                  | Bits 0-7                                                                  |
| 1000     | Port X01: Digital Data - clamp 2                                           | Port X01: Digital Input - clamp 4 (DI)                                    |
| 1001     | Port X01: → <b>Mapping: Status information</b> (→ p. <a href="#">114</a> ) | Port X01: → <b>Mapping: PQI</b> (→ p. <a href="#">115</a> )               |
| 1002     |                                                                            | Port X01: Input Data IO-Link (n Bytes)                                    |
| 1100     | reserved                                                                   | Port X01: Digital Output - clamp 4 (DO)                                   |
| 1101     |                                                                            | Port X01: Output Data IO-Link (n Bytes)                                   |
| 2000     |                                                                            | Port X02: Single Port Access (Mapping: → Port X01 - Register 1000...1101) |
| 3000     |                                                                            | Port X03: Single Port Access (Mapping: → Port X01 - Register 1000...1101) |
| 4000     |                                                                            | Port X04: Single Port Access (Mapping: → Port X01 - Register 1000...1101) |
| 5000     |                                                                            | Port X05: Single Port Access (Mapping: → Port X01 - Register 1000...1101) |
| 6000     |                                                                            | Port X06: Single Port Access (Mapping: → Port X01 - Register 1000...1101) |
| 7000     |                                                                            | Port X07: Single Port Access (Mapping: → Port X01 - Register 1000...1101) |
| 8000     |                                                                            | Port X08: Single Port Access (Mapping: → Port X01 - Register 1000...1101) |

Legend:

- [Digital Input - clamp 2] Signal level clamp 2 1 byte 0x00 LOW  
0x01 HIGH
- [Digital Input - clamp 4 (DI)] Signal level clamp 4 (operating mode DI) 1 byte 0x00 LOW  
0x01 HIGH
- [Input Data IO-Link (n Bytes)] Input data (operating mode IO-Link) (n bytes) n bytes per byte: 0x00...0xFF  
n = [2,4,8,16,32]; is determined by the parameter [Process Data Length] (→ **Configuration Area** (→ p. [102](#)))
- [Digital Output - clamp 4(DO)] Signal level clamp4 (operating mode DO) 1 byte 0x00 LOW  
0x01 HIGH
- [Output Data IO-Link (n Bytes)] Output data (operating mode IO-Link) (n bytes) n bytes per byte: 0x00...0xFF  
n = [2,4,8,16,32]; is determined by the parameter [Process Data Length] (→ **Configuration Area** (→ p. [102](#)))

## Mapping: Status information

34480

| Bit 7    | Bit 6    | Bit 5    | Bit 4    | Bit 3    | Bit 2   | Bit 1    | Bit 0   |
|----------|----------|----------|----------|----------|---------|----------|---------|
| reserved | reserved | reserved | reserved | reserved | SC / OL | SENS PWR | AUX PWR |

Legend:

- [SC / OL] Short Circuit / Overload: indicates the occurrence of a short-circuit or overvoltage on the IO-Link port
 

|       |     |                              |
|-------|-----|------------------------------|
| 1 bit | 0x0 | No error                     |
|       | 0x1 | Short-circuit or overvoltage |
- [SENS PWR] Sensor Power: indicates the status of the supply voltage US
 

|       |     |          |
|-------|-----|----------|
| 1 bit | 0x0 | No error |
|       | 0x1 | Error    |
- [AUX PWR] Auxiliary Power: indicates the supply voltage UA
 

|       |     |                         |
|-------|-----|-------------------------|
| 1 bit | 0x0 | UA present and no error |
|       | 0x1 | Error                   |

34479

**Mapping: PQI**

| Bit 7    | Bit 6               | Bit 5              | Bit 4            | Bit 3         | Bit 2        | Bit 1        | Bit 0    |
|----------|---------------------|--------------------|------------------|---------------|--------------|--------------|----------|
| reserved | Wrong Length PD OUT | Wrong Length PD IN | Wrong Cycle Time | Wrong VID/DID | Invalid Data | Dev Not Conn | IOL Mode |

Legend:

- [IOL Mode] Operating type of the IO-Link port 1 bit 0x0 Other  
0x1 IO-Link
- [Dev Not Conn] Connection between IO-Link Device and IO-Link port 1 bit 0x0 connected.  
0x1 not connected
- [Invalid Data] Status of the process input data on the IO-Link port 1 bit 0x0 valid data  
0x1 invalid data
- [Wrong VID/DID] Verification whether the current and configured vendor ID and device ID are identical 1 bit 0x0 OK  
0x1 no match
- [Wrong Cycle Time] Verification whether the current and configured cycle time are identical 1 bit 0x0 OK  
0x1 no match
- [Wrong Length PD IN] Verification whether the size of the received input data are identical with the configured size 1 bit 0x0 OK  
0x1 Configured size too small
- [Wrong Length PD OUT] Verification whether the size of the sent output data is identical with the size expected by the IO-Link device 1 bit 0x0 OK  
0x1 Configured size too small

## Acyclic Command Channel

The following Modbus registers are available for acyclic data transmission:

| Register | Contents  |                                                                                  |
|----------|-----------|----------------------------------------------------------------------------------|
|          | Bits 8-15 | Bits 0-7                                                                         |
| 500      |           | Command Request Channel (→ <b>Request channel</b> (→ p. <a href="#">117</a> ))   |
| 0        |           | Command Response Channel (→ <b>Response channel</b> (→ p. <a href="#">118</a> )) |

Legend:

- [Command Request Channel] Area for transmission of command request (fieldbus PLC >>> IO-Link master) 44 bytes
- [Command Response Channel] Area for transmission of command response (IO-Link master >>> fieldbus PLC) 44 bytes

## Request channel

| Register | Contents                      |                |
|----------|-------------------------------|----------------|
|          | Bits 8-15                     | Bits 0-7       |
| 500      | Port No.                      |                |
| 501      | Index                         |                |
| 502      | Subindex                      |                |
| 503      | Command                       | User ID        |
| 504      | Data Length (Number of Bytes) |                |
| 505      | Data (byte 0)                 | Data (byte 1)  |
| ...      | ...                           | ...            |
| 521      | Data (byte 32)                | Data (byte 33) |

Legend:

- [Port No.] Number of the IO-Link port      1 Word      0x0001      Port X01  
                                                          0x0002      Port X02  
                                                          ...      ...  
                                                          0x0008      Port X08
- [Index] Index of the IO-Link object      1 Word      0x0000...0xFFFF
- [Subindex] Subindex of the IO-Link object      1 Word      0x0000...0xFFFF
- [Command] Command number      1 byte      0x01      Read  
                                                          0x02      Write
- [User ID] ID to identify the command      1 byte      0x00...0xFF
- [Data Length (Number of Bytes)] Number of bytes that contain relevant user data (is only evaluated for Command = 0x02)      1 Word      0x0000      0 bytes  
                                                          ...      ...  
                                                          0x0022      34 bytes
- [Data (Byte n)] user data      n bytes      per byte: 0x00 ... 0xFF

## Response channel

| Register | Contents                      |                                 |
|----------|-------------------------------|---------------------------------|
|          | Bits 8-15                     | Bits 0-7                        |
| 0        | Port No.                      |                                 |
| 1        | Index                         |                                 |
| 2        | Subindex                      |                                 |
| 3        | Command                       | User ID                         |
| 4        | Result                        |                                 |
| 5        | Data Length (Number of Bytes) |                                 |
| 6        | Data (byte 0) / Error Code    | Data (byte 1) / Additional Code |
| ...      | ...                           | ...                             |
| 21       | Data (byte 30)                | Data (byte 31)                  |

Legend:

- [Port No.] Number of the IO-Link port
 

|        |        |          |
|--------|--------|----------|
| 1 Word | 0x0001 | Port X01 |
|        | 0x0002 | Port X02 |
| ...    | ...    |          |
|        | 0x0008 | Port X08 |
- [Index] Index of the IO-Link object
 

|        |                 |  |
|--------|-----------------|--|
| 1 Word | 0x0000...0xFFFF |  |
|--------|-----------------|--|
- [Subindex] Subindex of the IO-Link object
 

|        |                 |  |
|--------|-----------------|--|
| 1 Word | 0x0000...0xFFFF |  |
|--------|-----------------|--|
- [Command] Command number
 

|        |      |       |
|--------|------|-------|
| 1 byte | 0x01 | Read  |
|        | 0x02 | Write |
- [User ID] reflected User ID from request channel
 

|        |             |  |
|--------|-------------|--|
| 1 byte | 0x00...0xFF |  |
|--------|-------------|--|
- [Result] Status of the command processing
 

|        |        |                                                           |
|--------|--------|-----------------------------------------------------------|
| 1 Word | 0x0000 | OK                                                        |
|        | 0x000F | OK, but data length too long (only with [Command] = 0x02) |
|        | 0x00FF | Error                                                     |
- [Data Length (Number of Bytes)] Number of bytes that contain relevant user data
 

|        |        |          |
|--------|--------|----------|
| 1 Word | 0x0000 | 0 bytes  |
| ...    | ...    |          |
|        | 0x0020 | 32 bytes |
- [Error Code] Error Code
 

|        |                                                  |  |
|--------|--------------------------------------------------|--|
| 1 byte | → <b>Error codes</b> (→ p. <a href="#">119</a> ) |  |
|--------|--------------------------------------------------|--|
- [Additional Code] Additional error codes
 

|        |                                                       |  |
|--------|-------------------------------------------------------|--|
| 1 byte | → <b>Additional Codes</b> (→ p. <a href="#">119</a> ) |  |
|--------|-------------------------------------------------------|--|
- [Data (Byte n)] User data (byte n)
 

|         |                       |  |
|---------|-----------------------|--|
| n bytes | per byte: 0x00...0xFF |  |
|---------|-----------------------|--|

## Error codes

34342

| Error code | Description                                                                                                      |
|------------|------------------------------------------------------------------------------------------------------------------|
| 0x71       | Service not available (unknown command has been sent to the IO-Link port)                                        |
| 0x72       | Port blocked (another cyclic process accesses the IO-Link port)                                                  |
| 0x73       | Forbidden (access rights don't allow command processing)                                                         |
| 0x74       | Invalid data (wrong parameter has been sent in the command)                                                      |
| 0x76       | Wrong port (wrong port number)                                                                                   |
| 0x77       | Wrong port function (wrong port function or wrong parameter has been sent to the device)                         |
| 0x78       | Invalid length (set length is > 0x20)                                                                            |
| 0x80       | Error in the device application; observe additional code (→ <b>Additional Codes</b> (→ p. <a href="#">119</a> )) |

## Additional Codes

54584

| Code | Name                  | Description                                        |
|------|-----------------------|----------------------------------------------------|
| 0x00 | APP_DEV               | Device application error - no details              |
| 0x11 | IDX_NOTAVAIL          | Index not available                                |
| 0x12 | SUBIDX_NOTAVAIL       | Subindex not available                             |
| 0x20 | SERV_NOTAVAIL         | Service temporarily not available                  |
| 0x21 | SERV_NOTAVAIL_LOCCTRL | Service temporarily not available - local control  |
| 0x22 | SERV_NOTAVAIL_DEVCTRL | Service temporarily not available - device control |
| 0x23 | IDX_NOT_WRITEABLE     | Access denied                                      |
| 0x30 | PAR_VALOUTOFRNG       | Parameter value out of range                       |
| 0x31 | PAR_VALGTLIM          | Parameter value above limit                        |
| 0x32 | PAR_VALLTLIM          | Parameter value below limit                        |
| 0x33 | VAL_LENODRRUN         | Parameter length overrun                           |
| 0x34 | VAL_LENUNDRUN         | Parameter length underrun                          |
| 0x35 | FUNC_NOTAVAIL         | Function not available                             |
| 0x36 | FUNC_UNAVAILTEMP      | Function temporarily not available                 |
| 0x40 | PAR_SETINVALID        | Invalid parameter set                              |
| 0x41 | PAR_SETINCONSIST      | Inconsistent parameter set                         |
| 0x82 | APP_DEVNOTRDY         | Application not ready                              |



Additional Codes are only available, if Error Code = 0x80 (→ **Error codes** (→ p. [119](#)))

## 14.2.2 Acyclic commands

### Content

|                                                      |     |
|------------------------------------------------------|-----|
| Command 0x10 – Set mode.....                         | 121 |
| Command 0x20 – Set validation ID / data storage..... | 123 |
| Command 0x30 – Set fail-safe data pattern.....       | 125 |
| Command 0x40 – Reboot.....                           | 127 |
| Command 0x50 – Factory Reset.....                    | 128 |

34331

## Command 0x10 – Set mode

34322

The command changes the operating mode of an IO-Link port of the AL1940.



Corresponding parameter: [Port Mode] (→ **Mapping: port configuration** (→ p. [103](#)))

### Command request

34500

| Register    | Contents    |          |
|-------------|-------------|----------|
|             | Bits 8-15   | Bits 0-7 |
| 500         | Port No.    |          |
| 501         | reserved    |          |
| 502         | reserved    |          |
| 503         | 0x10        | User ID  |
| 504         | reserved    |          |
| 505         | Target Mode |          |
| 506 ... 521 | reserved    |          |

Legend:

- [Port No.] Number of the IO-Link port      1 word      0x0001      Port X01  
                                                        0x0002      Port X02  
                                                        ...      ...  
                                                        0x0008      Port X08
- [User ID] ID to identify the command      1 byte      0x00 .. 0xFF
- [Target Mode] Operating type of the IO-Link port      1 word      0x0000      deactivated  
                                                        0x0001      digital input (DI)  
                                                        0x0002      digital output (DO)  
                                                        0x0003      IO-Link

## Command response

| Register | Contents              |                               |
|----------|-----------------------|-------------------------------|
|          | Bits 8-15             | Bits 0-7                      |
| 0        |                       | Port No.                      |
| 1        |                       | reserved                      |
| 2        |                       | reserved                      |
| 3        | 0x10                  | User ID                       |
| 4        |                       | Result                        |
| 5        |                       | Data Length (Number of Bytes) |
| 6        | reserved / Error Code | Target Mode / Additional Code |
| 7 ... 21 |                       | reserved                      |

Legend:

- [Port No.] Number of the IO-Link port      1 word      0x0001      Port X01  
                                                        0x0002      Port X02  
                                                        ...      ...  
                                                        0x0008      Port X08
- [User ID] reflected User ID from request channel      1 byte      0x00 .. 0xFF
- [Result] Status of the command processing      1 byte      0x00      OK  
                                                        0xFF      Error
- [Data Length (Number of Bytes)] Number of bytes that contain relevant user data      1 word      0x0001      1 byte  
                                                        0x0002      2 bytes
- [Target Mode] Operating type of the IO-Link port      1 byte      0x00      deactivated  
                                                        0x01      digital input (DI)  
                                                        0x02      digital output (DO)  
                                                        0x03      IO-Link
- [Error Code] Error ID      1 byte      → **Error codes** (→ p. [119](#))
- [Additional Code] Additional error codes      1 byte      → **Additional Codes** (→ p. [119](#))

## Command 0x20 – Set validation ID / data storage

34321

The command sets the behaviour of the IO-Link master when connecting a new IO-Link device to an IO-Linkport of the device.



Corresponding parameter: [Validation ID] (→ **Mapping: port configuration** (→ p. [103](#)))

### Command request

34495

| Register    | Contents      |          |
|-------------|---------------|----------|
|             | Bits 8-15     | Bits 0-7 |
| 500         | Port No.      |          |
| 501         | reserved      |          |
| 502         | reserved      |          |
| 503         | 0x20          | User ID  |
| 504         | reserved      |          |
| 505         | Validation ID |          |
| 506 ... 521 | reserved      |          |

Legend:

- [Port No.] Number of the IO-Link port
 

|        |          |          |
|--------|----------|----------|
| 1 word | 0x0001   | Port X01 |
| 0x0002 | Port X02 |          |
| ...    | ...      |          |
| 0x0008 | Port X08 |          |
- [User ID] ID to identify the command
 

|        |              |  |
|--------|--------------|--|
| 1 byte | 0x00 .. 0xFF |  |
|--------|--------------|--|
- [Validation ID] Supported IO-Link standard and behaviour of the IO-Link master when connecting new IO-Link devices to the IO-Link port
 

|        |                               |               |
|--------|-------------------------------|---------------|
| 1 word | 0x0000                        | no validation |
| 0x0001 | V1.0 device                   |               |
| 0x0002 | V1.1 device                   |               |
| 0x0003 | V1.1 device, backup + restore |               |
| 0x0004 | V1.1 device, backup           |               |

## Command response

| Register | Contents              |                                 |
|----------|-----------------------|---------------------------------|
|          | Bits 8-15             | Bits 0-7                        |
| 0        |                       | Port No.                        |
| 1        |                       | reserved                        |
| 2        |                       | reserved                        |
| 3        | 0x10                  | User ID                         |
| 4        |                       | Result                          |
| 5        |                       | Data Length (Number of Bytes)   |
| 6        | reserved / Error Code | Validation ID / Additional Code |
| 7 ... 21 |                       | reserved                        |

Legend:

- [Port No.] Number of the IO-Link port      1 word      0x0001      Port X01  
                                                        0x0002      Port X02  
                                                        ...      ...  
                                                        0x0008      Port X08
- [User ID] reflected user ID from request channel      1 byte      0x00 .. 0xFF
- [Result] Status of the command processing      1 byte      0x00      OK  
                                                        0xFF      Error
- [Data Length (Number of Bytes)] Number of bytes that contain relevant user data      1 word      0x0001      1 byte  
                                                        0x0002      2 bytes
- [Validation ID] Supported IO-Link standard and behaviour of the IO-Link master when connecting new IO-Link devices to the IO-Link port      1 byte      0x00      no validation  
                                                        0x01      V1.0 device  
                                                        0x02      V1.1 device  
                                                        0x03      V1.1 device, backup + restore  
                                                        0x04      V1.1 device, backup
- [Error Code] Error ID      1 byte      → **Error codes** (→ p. [119](#))
- [Additional Code] additional error codes      1 byte      → **Additional Codes** (→ p. [119](#))

## Command 0x30 – Set fail-safe data pattern

34379

The command sets the behaviour of the outputs when the Modbus TCP connection and the corresponding fail-safe values are interrupted.



Corresponding parameter: [Fail-safe Mode] (→ **Mapping: port configuration** (→ p. [103](#))

The number of the required fail-safe values results from the size of the output data  
(→ **Configuration Area** (→ p. [102](#))).

## Command request

34498

| Register | Contents                           |                                    |
|----------|------------------------------------|------------------------------------|
|          | Bits 8-15                          | Bits 0-7                           |
| 500      |                                    | Port No.                           |
| 501      |                                    | reserved                           |
| 502      |                                    | reserved                           |
| 503      | 0x30                               | User ID                            |
| 504      |                                    | Byte Length N                      |
| 505      |                                    | Failsafe Mode                      |
| 506      | reserved / Failsafe Data (Byte 1)  | reserved / Failsafe Data (Byte 0)  |
| ...      | ...                                | ...                                |
| 521      | reserved / Failsafe Data (Byte 31) | reserved / Failsafe data (Byte 30) |

Legend:

- [Port No.] Number of the IO-Link port      1 word      0x0001 Port X01  
                                                        0x0002 Port X02  
                                                          ...      ...  
                                                          0x0008 Port X08
- [User ID] ID to identify the command      1 byte      0x00 .. 0xFF
- [Data Length (Number of Bytes)] Number of bytes that contain relevant user data (is only evaluated for Command = 0x02)      1 word      0x0002 2 bytes  
                                                          ...      ...  
                                                          0x0022 34 bytes
- [Failsafe Mode] Fail-safe mode for the outputs of the IO-Link ports in case of an interruption of the Modbus TCP connection      1 word      0x0000 No Failsafe  
                                                          0x0001 Failsafe: Reset Value  
                                                          0x0002 Failsafe: Old Value  
                                                          0x0003 Failsafe: with Pattern
- [Failsafe Data (Byte n)] Fail-safe values for the outputs (only with fail-safe mode = 0x0003)      1 byte      0x00 .. 0xFF

## Command response

34498

| Register | Contents  |          |
|----------|-----------|----------|
|          | Bits 8-15 | Bits 0-7 |

|          |                               |                                 |  |  |  |
|----------|-------------------------------|---------------------------------|--|--|--|
| 0        | Port No.                      |                                 |  |  |  |
| 1        | reserved                      |                                 |  |  |  |
| 2        | reserved                      |                                 |  |  |  |
| 3        | 0x30                          | User ID                         |  |  |  |
| 4        | Result                        |                                 |  |  |  |
| 5        | Data Length (Number of Bytes) |                                 |  |  |  |
| 6        | reserved / Error Code         | Failsafe Mode / Additional Code |  |  |  |
| 7 ... 21 | reserved                      |                                 |  |  |  |

Legend:

- [Port No.] Number of the IO-Link port      1 Word      0x0001      Port X01  
                                                          0x0002      Port X02  
                                                          ...      ...  
                                                          0x0008      Port X08
- [User ID] reflected User ID from request channel      1 byte      0x00...0xFF
- [Result] Status of the command processing      1 Word      0x0000      OK  
                                                          0x00FF      Error
- [Data Length (Number of Bytes)] Number of bytes that contain relevant user data      1 word      0x0001      1 byte  
                                                          0x0002      2 bytes
- [Failsafe Mode] Fail-safe mode for the outputs of the IO-Link ports in case of an interruption of the Modbus TCP connection      1 byte      0x00      No Failsafe  
                                                          0x01      Failsafe: Reset Value  
                                                          0x02      Failsafe: Old Value  
                                                          0x03      Failsafe: with Pattern
- [Error Code] Error ID      1 byte      → **Error codes** (→ p. [119](#))
- [Additional Code] additional error codes      1 byte      → **Additional Codes** (→ p. [119](#))

## Command 0x40 – Reboot

34457

The command reboots the AL1940.

### Command request

34494

| Register    | Contents  |          |
|-------------|-----------|----------|
|             | Bits 8-15 | Bits 0-7 |
| 500         |           | reserved |
| 501         |           | reserved |
| 502         |           | reserved |
| 503         | 0x40      | User ID  |
| 504         |           | reserved |
| 505         |           | 0x00AA   |
| 506 ... 521 |           | reserved |

Legend:

- [User ID] ID to identify the command 1 byte 0x00 .. 0xFF

### Command response

34508

| Register | Contents              |                               |
|----------|-----------------------|-------------------------------|
|          | Bits 8-15             | Bits 0-7                      |
| 0        |                       | reserved                      |
| 1        |                       | reserved                      |
| 2        |                       | reserved                      |
| 3        | 0x40                  | User ID                       |
| 4        |                       | Result                        |
| 5        |                       | Data Length (Number of Bytes) |
| 6        | reserved / Error Code | 0xAA / Additional Code        |
| 7 ... 21 |                       | reserved                      |

Legend:

- [User ID] reflected User ID from request channel 1 byte 0x00 .. 0xFF
- [Result] Status of the command processing 1 word 0x0000 OK  
0x00FF Error
- [Data Length (Number of Bytes)] Number of bytes that contain relevant user data 1 word 0x0001 1 byte  
0x0002 2 bytes
- [Error Code] Error ID 1 byte → **Error codes** (→ p. [119](#))
- [Additional Code] Additional error codes 1 byte → **Additional Codes** (→ p. [119](#))

## Command 0x50 – Factory Reset

34499

The command resets all parameters to the factory settings (→ **Factory settings** (→ p. [93](#))).

### Command request

34501

| Register    | Contents  |          |
|-------------|-----------|----------|
|             | Bits 8-15 | Bits 0-7 |
| 500         |           | reserved |
| 501         |           | reserved |
| 502         |           | reserved |
| 503         | 0x50      | User ID  |
| 504         |           | reserved |
| 505         |           | 0x0055   |
| 506 ... 520 |           | reserved |

Legend:

- [User ID] ID to identify the command 1 byte 0x00 .. 0xFF

### Command response

34507

| Register | Contents              |                               |
|----------|-----------------------|-------------------------------|
|          | Bits 8-15             | Bits 0-7                      |
| 0        |                       | reserved                      |
| 1        |                       | reserved                      |
| 2        |                       | reserved                      |
| 3        | 0x50                  | User ID                       |
| 4        |                       | Result                        |
| 5        |                       | Data Length (Number of Bytes) |
| 6        | reserved / Error Code | 0x55 / Additional Code        |
| 7 ... 21 |                       | reserved                      |

Legend:

- [User ID] reflected User ID from request channel 1 byte 0x00 .. 0xFF
- [Result] Status of the command processing 1 word 0x0000 OK  
0x00FF Error
- [Data Length (Number of Bytes)] Number of bytes that contain relevant user data 1 word 0x0001 1 byte  
0x0002 2 bytes
- [Error Code] Error ID 1 byte → **Error codes** (→ p. [119](#))
- [Additional Code] additional error codes 1 byte → **Additional Codes** (→ p. [119](#))

## 14.3 ifm IoT Core

### Content

|                              |     |
|------------------------------|-----|
| Overview: IoT profile.....   | 130 |
| Overview: IoT types.....     | 137 |
| Overview: IoT services ..... | 138 |

33803

### 14.3.1 Overview: IoT profile

#### Content

|                                            |     |
|--------------------------------------------|-----|
| Profile: blob .....                        | 130 |
| Profile: deviceinfo .....                  | 131 |
| Profile: devicetag .....                   | 131 |
| Profile: iolinkdevice_full .....           | 132 |
| Profile: iolinkmaster .....                | 132 |
| Profile: mqttCmdChannel .....              | 133 |
| Profile: mqttCmdChannelSetup .....         | 133 |
| Profile: mqttConnection .....              | 133 |
| Profile: mqttSetup .....                   | 134 |
| Profile: network .....                     | 134 |
| Profile: parameter .....                   | 135 |
| Profile: processdata .....                 | 135 |
| Profile: runcontrol .....                  | 135 |
| Profile: service .....                     | 135 |
| Profile: software .....                    | 135 |
| Profile: software/uploadablesoftware ..... | 136 |
| Profile: Timer .....                       | 136 |

34054

#### Profile: blob

52264

| Element (identifier) | Properties                                                                                 | Mandatory | Comment                              |
|----------------------|--------------------------------------------------------------------------------------------|-----------|--------------------------------------|
| blobname             | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profiles = blob</li> </ul> |           | labels element as device information |
| ../size              | type = data                                                                                | mandatory |                                      |
| ../chunksize         | type = data                                                                                | mandatory |                                      |
| ../setblobdata       | type = service                                                                             | optional  |                                      |
| ../getblobdata       | type = service                                                                             | optional  |                                      |
| ../start_stream_set  | type = service                                                                             | optional  |                                      |
| ../stream_set        | type = service                                                                             | optional  |                                      |
| ../clear             | type = service                                                                             | optional  |                                      |
| ../getcrc            | type = service                                                                             | optional  |                                      |
| ../getmd5            | type = service                                                                             | optional  |                                      |
| ../getdata           | type = service                                                                             | optional  |                                      |
| ../setdata           | type = service                                                                             | optional  |                                      |

## Profile: deviceinfo

34207

| Element (identifier)  | Properties                                                                                           | mandatory | Comments                                        |
|-----------------------|------------------------------------------------------------------------------------------------------|-----------|-------------------------------------------------|
| deviceinfo            | <ul style="list-style-type: none"> <li>▪ type = structure</li> <li>▪ profile = deviceinfo</li> </ul> |           | characterises the element as device information |
| ../devicename         | type = data                                                                                          | optional  |                                                 |
| ../devicefamily       | type = data                                                                                          | optional  |                                                 |
| ../devicevariant      | type = data                                                                                          | optional  |                                                 |
| ../devicesymbol       | type = data                                                                                          | optional  |                                                 |
| ../deviceicon         | type = data                                                                                          | optional  |                                                 |
| ../serialnumber       | type = data                                                                                          | mandatory |                                                 |
| ../productid          | type = data                                                                                          | optional  |                                                 |
| ../productname        | type = data                                                                                          | optional  |                                                 |
| ../productcode        | type = data                                                                                          | mandatory |                                                 |
| ../producttext        | type = data                                                                                          | optional  |                                                 |
| ../ordernumber        | type = data                                                                                          | optional  |                                                 |
| ../productiondate     | type = data                                                                                          | optional  |                                                 |
| ../productioncode     | type = data                                                                                          | optional  |                                                 |
| ../hwrevision         | type = data                                                                                          | mandatory |                                                 |
| ../swrevision         | type = data                                                                                          | mandatory |                                                 |
| ../bootloaderrevision | type = data                                                                                          | optional  |                                                 |
| ../vendor             | type = data                                                                                          | optional  |                                                 |
| ../vendortext         | type = data                                                                                          | optional  |                                                 |
| ../vendorurl          | type = data                                                                                          | optional  |                                                 |
| ../vendorlogo         | type = data                                                                                          | optional  |                                                 |
| ../productwebsite     | type = data                                                                                          | optional  |                                                 |
| ../supportcontact     | type = data                                                                                          | optional  |                                                 |
| ../icon               | type = data                                                                                          | optional  |                                                 |
| ../image              | type = data                                                                                          | optional  |                                                 |
| ../standards          | type = data                                                                                          | optional  |                                                 |

## Profile: devicetag

34206

| Element (identifier) | Properties                                                                                          | mandatory | Comments |
|----------------------|-----------------------------------------------------------------------------------------------------|-----------|----------|
| devicetag            | <ul style="list-style-type: none"> <li>▪ type = structure</li> <li>▪ profile = devicetag</li> </ul> |           |          |
| ../applicationtag    | type = data                                                                                         | mandatory |          |
| ../applicationgroup  | type = data                                                                                         | optional  |          |
| ../machinecode       | type = data                                                                                         | optional  |          |
| ../tenant            | type = data                                                                                         | optional  |          |

## Profile: iolinkdevice\_full

52265

| Element (identifier)      | Characteristics                                                                                             | Mandatory | Comments                       |
|---------------------------|-------------------------------------------------------------------------------------------------------------|-----------|--------------------------------|
| iolinkdevice              | <ul style="list-style-type: none"> <li>▪ type = structure</li> <li>▪ profile = iolinkdevice_full</li> </ul> |           | Structure of an IO-Link device |
| ../vendorid               | type = data                                                                                                 | mandatory |                                |
| ../deviceid               | type = data                                                                                                 | mandatory |                                |
| ../productname            | type = data                                                                                                 | mandatory |                                |
| ../serial                 | type = data                                                                                                 | mandatory |                                |
| ../applicationspecifictag | type = data                                                                                                 | mandatory |                                |
| ../pdin                   | type = data                                                                                                 | mandatory |                                |
| ../pdout                  | type = data                                                                                                 | mandatory |                                |
| ../status                 | type = data                                                                                                 | mandatory |                                |
| ../iolreadacyclic         | type = data                                                                                                 | mandatory |                                |
| ../iolwriteacyclic        | type = data                                                                                                 | mandatory |                                |
| ../iolinkevent            | type = data                                                                                                 | mandatory |                                |

## Profile: iolinkmaster

34205

| Element (identifier)           | Properties                                                                                                  | Mandatory | Comments           |
|--------------------------------|-------------------------------------------------------------------------------------------------------------|-----------|--------------------|
| masterport                     | <ul style="list-style-type: none"> <li>▪ type = structure</li> <li>▪ profile = iolinkmaster</li> </ul>      |           | Executable service |
| ../mode                        | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>              | mandatory |                    |
| ../comspeed                    | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>              | mandatory |                    |
| ../mastercycletime_actual      | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>              | mandatory |                    |
| ../mastercycletime_preset      | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>              | mandatory |                    |
| ../validation_datastorage_mode | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>              | mandatory |                    |
| ../validation_vendorid         | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>              | mandatory |                    |
| ../validation_deviceid         | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>              | mandatory |                    |
| ../additionalpins_in           | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = processdata</li> </ul>            | optional  |                    |
| ../additionalpins_out          | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = processdata</li> </ul>            | optional  |                    |
| ../portevent                   | type = data                                                                                                 | mandatory |                    |
| ../iolinkdevice                | <ul style="list-style-type: none"> <li>▪ type = structure</li> <li>▪ profile = iolinkdevice_full</li> </ul> | mandatory |                    |

## Profile: mqttCmdChannel

61186

| Element (identifier)   | Properties                                                                                            | Mandatory | Comment                                                                             |
|------------------------|-------------------------------------------------------------------------------------------------------|-----------|-------------------------------------------------------------------------------------|
| mqttCmdChannel         | <ul style="list-style-type: none"> <li>▪ type = structure</li> <li>▪ profile = commChannel</li> </ul> |           | Profile of the MQTT command channel                                                 |
| ../type                | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ data type = STRING</li> </ul>         | mandatory | Protocol type of the interface                                                      |
| ../status              | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ data type = STRING</li> </ul>         | mandatory | Status of the MQTT command channel (possible values: init, running, stopped, error) |
| ../mqttCmdChannelSetup | type = profile                                                                                        |           | Sub-profile: <b>Profile: mqttCmdChannelSetup</b> (→ p. <a href="#">133</a> )        |

## Profile: mqttCmdChannelSetup

61187

| Element (identifier) | Properties                                                                                                    | Mandatory | Comment                              |
|----------------------|---------------------------------------------------------------------------------------------------------------|-----------|--------------------------------------|
| mqttCmdChannelSetup  | <ul style="list-style-type: none"> <li>▪ type = structure</li> <li>▪ profile = mqttCmdChannelSetup</li> </ul> |           | Settings of the MQTT command channel |
| ../brokerIP          | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ data type = STRING</li> </ul>                 | optional  |                                      |
| ../brokerPort        | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ data type = STRING</li> </ul>                 | optional  |                                      |
| ../cmdTopic          | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ data type = STRING</li> </ul>                 | optional  |                                      |
| ../defaultReplyTopic | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ data type = STRING</li> </ul>                 | optional  |                                      |

## Profile: mqttConnection

61188

| Element (identifier) | Properties                                                                                              | Mandatory | Comment                                                                    |
|----------------------|---------------------------------------------------------------------------------------------------------|-----------|----------------------------------------------------------------------------|
| mqttConnection       | <ul style="list-style-type: none"> <li>▪ type = structure</li> <li>▪ profile = commInterface</li> </ul> |           | MQTT connection in the IoT Core                                            |
| ../type              | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ data type = STRING</li> </ul>           | mandatory | Protocol type of the interface                                             |
| ../status            | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ data type = STRING</li> </ul>           | mandatory | global status of the MQTT (possible values: init, running, stopped, error) |
| ../mqttSetup         | type = profile                                                                                          |           | Sub-profile: <b>Profile: mqttSetup</b> (→ p. <a href="#">134</a> )         |
| ../mqttCmdChannel    | type = profile                                                                                          |           | Sub-profile: <b>Profile: mqttCmdChannel</b> (→ p. <a href="#">133</a> )    |

## Profile: mqttSetup

61189

| Element (identifier) | Properties                                                                                          | Mandatory | Comment                                   |
|----------------------|-----------------------------------------------------------------------------------------------------|-----------|-------------------------------------------|
| mqttSetup            | <ul style="list-style-type: none"> <li>▪ type = structure</li> <li>▪ profile = mqttSetup</li> </ul> |           | Settings of the MQTT command channel      |
| ../QoS               | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ data type = Number</li> </ul>       | mandatory | Quality of Service of the MQTT connection |
| ../version           | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ data type = STRING</li> </ul>       | mandatory |                                           |

## Profile: network

52266

| Element (identifier) | Characteristics                                                                                       | Mandatory | Comments                                        |
|----------------------|-------------------------------------------------------------------------------------------------------|-----------|-------------------------------------------------|
| network              | <ul style="list-style-type: none"> <li>▪ type = structure</li> <li>▪ profiles = deviceinfo</li> </ul> |           | Characterises the element as device information |
| ../macaddress        | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>        | mandatory |                                                 |
| ../ipaddress         | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>        | optional  |                                                 |
| ../ipv6address       | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>        | mandatory |                                                 |
| ../subnetmask        | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>        | mandatory |                                                 |
| ../ipdefaultgateway  | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>        | mandatory |                                                 |
| ../dhcp              | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>        | optional  |                                                 |
| ../ipversion         | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>        | optional  |                                                 |
| ../hostname          | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>        | optional  |                                                 |
| ../autonegotiation   | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>        | optional  |                                                 |
| ../portspeed         | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>        | optional  |                                                 |
| ../enablenetwork     | type = service                                                                                        | optional  |                                                 |
| ../disablenetwork    | type = service                                                                                        | optional  |                                                 |

## Profile: parameter

34215

The profile is used to mark the elements of type data as parameters (acyclic data). The profile defines no substructure.

## Profile: processdata

34225

The profile is used to mark the elements of type data as process data (cyclic data). The profile does not define a substructure.

## Profile: runcontrol

61190

| Element (identifier) | Properties                                                                                         | Mandatory | Comment                                           |
|----------------------|----------------------------------------------------------------------------------------------------|-----------|---------------------------------------------------|
| runcontrol           | <ul style="list-style-type: none"> <li>▪ type = profile</li> <li>▪ profile = runcontrol</li> </ul> |           | Control of the MQTT command channel               |
| ../start             | type = service                                                                                     | mandatory | <b>Service: start</b> (→ p. <a href="#">149</a> ) |
| ../stop              | type = service                                                                                     | mandatory | <b>Service: stop</b> (→ p. <a href="#">149</a> )  |
| ../reset             | type = service                                                                                     | mandatory | <b>Service: Reset</b> (→ p. <a href="#">146</a> ) |

## Profile: service

34224

| Element (identifier) | Properties                                                                                      | mandatory | Comments           |
|----------------------|-------------------------------------------------------------------------------------------------|-----------|--------------------|
| service              | <ul style="list-style-type: none"> <li>▪ type = service</li> <li>▪ profile = service</li> </ul> |           | Executable service |

## Profile: software

34223

| Element (identifier) | Properties                                                                                         | mandatory | Comments                              |
|----------------------|----------------------------------------------------------------------------------------------------|-----------|---------------------------------------|
| software             | <ul style="list-style-type: none"> <li>▪ type = structure</li> <li>▪ profile = software</li> </ul> |           | characterises the element as software |
| ../version           | type = data                                                                                        | mandatory |                                       |
| ../type              | type = data                                                                                        | mandatory |                                       |
| ../status            | type = structure                                                                                   | optional  |                                       |
| ../diag              | type = structure                                                                                   | optional  |                                       |

## Profile: software/uploadedablesoftware

52267

| Element (identifier) | Characteristics                                                                                                        | Mandatory | Comments                                                   |
|----------------------|------------------------------------------------------------------------------------------------------------------------|-----------|------------------------------------------------------------|
| software             | <ul style="list-style-type: none"> <li>▪ type = structure</li> <li>▪ profiles = software/uploadablesoftware</li> </ul> |           | Software that can be loaded to the device via the IoT Core |
| ../lastinstall       | type = data                                                                                                            | optional  |                                                            |
| ../installhistory    | type = data                                                                                                            | optional  |                                                            |
| ../container         | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = blob</li> </ul>                              | mandatory |                                                            |
| ../preinstall        | type = service                                                                                                         | optional  |                                                            |
| ../install           | type = service                                                                                                         | mandatory |                                                            |
| ../postinstall       | type = service                                                                                                         | optional  |                                                            |
| ../abortinstall      | type = service                                                                                                         | optional  |                                                            |
| ../installstatus     | type = data                                                                                                            | optional  |                                                            |

## Profile: Timer

34226

| Element (identifier) | Properties                                                                                      | Mandatory | Comment |
|----------------------|-------------------------------------------------------------------------------------------------|-----------|---------|
| timer                | <ul style="list-style-type: none"> <li>▪ type = structure</li> <li>▪ profile = timer</li> </ul> |           |         |
| ../counter           | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>  | mandatory |         |
| ../interval          | <ul style="list-style-type: none"> <li>▪ type = data</li> <li>▪ profile = parameter</li> </ul>  | optional  |         |
| ../start             | type = service                                                                                  | optional  |         |
| ../stop              | type = service                                                                                  | optional  |         |

### 14.3.2 Overview: IoT types

The ifm IoT Core uses the following element types:

| Name      | Description                                                                 |
|-----------|-----------------------------------------------------------------------------|
| structure | Element is a structure element (like a folder in a file system)             |
| service   | Element is a service that can be addressed from the network                 |
| event     | Element is an event that can be started by the firmware and sends messages. |
| data      | Element is a data point                                                     |
| device    | Root element a device represents                                            |

### 14.3.3 Overview: IoT services

#### Content

|                                              |     |
|----------------------------------------------|-----|
| Service: factoryreset.....                   | 138 |
| Service: getblobdata.....                    | 139 |
| Service: getdata.....                        | 139 |
| Service: getdatamulti .....                  | 140 |
| Service: getelementinfo .....                | 140 |
| Servicet: getidentity .....                  | 141 |
| Service: getsubscriberlist.....              | 142 |
| Service: getsubscriptioninfo.....            | 143 |
| Service: gettree .....                       | 144 |
| Service: install .....                       | 145 |
| Service: iolreadacyclic .....                | 145 |
| Service: iolwriteacyclic.....                | 145 |
| Service: querytree .....                     | 146 |
| Service: reboot .....                        | 146 |
| Service: Reset .....                         | 146 |
| Service: setblock .....                      | 147 |
| Service: setdata.....                        | 148 |
| Service: signal .....                        | 148 |
| Service: start.....                          | 149 |
| Service: start_stream_set.....               | 149 |
| Service: stop.....                           | 149 |
| Service: stream_set.....                     | 150 |
| Service: subscribe .....                     | 150 |
| Service: unsubscribe .....                   | 151 |
| Service: validation_useconnecteddevice ..... | 151 |

34056

#### Service: factoryreset

34184

**Name:** factoryreset

**Description:** The service sets the parameters of the device to the factory settings.

**Request data (field "data"):** none

**Response data (field "data"):** none

Example:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/firmware/factoryreset"
}
```

**Service: getblobdata**

52345

**Name:** getblobdata**Description:** The service reads a binary large object (blob).**Applicable to:** datastorage**Request data (field "data"):**

| Data field | Required field | Data type | Default | Description                          |
|------------|----------------|-----------|---------|--------------------------------------|
| pos        | mandatory      | number    | 0       | Byte position                        |
| length     | mandatory      | number    | -       | Size of the object (number of bytes) |

**Return data (field "data"):**

| Data field | Required field | Data type  | Default | Description                             |
|------------|----------------|------------|---------|-----------------------------------------|
| data       | mandatory      | STRING     | 0       | Data to be decoded (BASE64 coded)       |
| crc        | optional       | HEX STRING |         | CRC of the data after decoding          |
| md5        | optional       | HEX STRING |         | MD5 checksum of the data after decoding |

**Service: getdata**

34183

**Name:** getdata**Description:** Service reads the value of a data point and provides it.**Request data (field "data"):** none**Return data (field "data"):**

| Data field | Required field | Data type | Description                     |
|------------|----------------|-----------|---------------------------------|
| value      | mandatory      | STRING    | Value of the element/data point |

Example:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "devicetag/applicationtag/getdata"
}
```

## Service: getdatamulti

34174

**Name:** getdatamulti

**Description:** The service sequentially reads the values of several data points and provides them. The value and the diagnostic code are provided for each data point.

**Request data (field "data"):**

| Data field | Required field | Data type        | Description                                                                                                                 |
|------------|----------------|------------------|-----------------------------------------------------------------------------------------------------------------------------|
| datatosend | mandatory      | ARRAY OF STRINGS | List of data points to be requested; data points must support the service getdata ("datatosend":["url1","url2",...,"urlx"]) |

**Response data (field "data"):** for each requested data point

| Data field | Required field | Data type | Description                    |
|------------|----------------|-----------|--------------------------------|
| url        | mandatory      | STRING    | Data point request             |
| code       | mandatory      | INT       | Diagnostic code of the request |
| data       | mandatory      | STRING    | Value of the data point        |

## Service: getelementinfo

52269

**Name:** getelementinfo

**Description:** The service reads the properties of an element of the IoT tree.

**Applicable to:** Objects of the type device

**Request data (field "data"):**

| Data field | Required field | Data type | Default | Description                                        |
|------------|----------------|-----------|---------|----------------------------------------------------|
| adr        | mandatory      | STRING    |         | URL of the element, which properties to be changed |

**Return data (field "data"):**

| Data field | Required field | Data type   | Default | Description                               |
|------------|----------------|-------------|---------|-------------------------------------------|
| identifier | mandatory      | STRING      |         | Identifier of the element                 |
| type       | mandatory      | STRING      |         | Type of the element                       |
| format     | optional       | JSON object | blank   | Format of the data or the service content |
| uid        | optional       | STRING      | blank   |                                           |
| profiles   | optional       | JSON array  | blank   |                                           |
| hash       | optional       | STRING      | --      |                                           |

## Servicet: getidentity

**Name:** getidentity

**Description:** The service reads the device information of the AL1940 and issues it.

**Request data ("data" field):** none

**Return data ("data" field):**

| Data field                | Required field | Data type        | Description                                                                                                                                                                                                                                                                                                                              |
|---------------------------|----------------|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| iot                       |                | Device           | Device description as JSON object                                                                                                                                                                                                                                                                                                        |
| iot.name                  | mandatory      | STRING           |                                                                                                                                                                                                                                                                                                                                          |
| iot.uid                   | optional       | STRING           |                                                                                                                                                                                                                                                                                                                                          |
| iot.version               | mandatory      | STRING           |                                                                                                                                                                                                                                                                                                                                          |
| iot.catalogue             | optional       | ARRAY OF OBJECTS |                                                                                                                                                                                                                                                                                                                                          |
| iot.deviceclass           | optional       | ARRAY OF STRING  |                                                                                                                                                                                                                                                                                                                                          |
| iot.serverlist            | optional       | ARRAY OF OBJECTS |                                                                                                                                                                                                                                                                                                                                          |
| device                    | optional       |                  | AL1940                                                                                                                                                                                                                                                                                                                                   |
| device.serialnumber       | optional       |                  | Serial number                                                                                                                                                                                                                                                                                                                            |
| device.hwrevision         | optional       |                  | Hardware version                                                                                                                                                                                                                                                                                                                         |
| device.swrevision         | optional       |                  | Software version                                                                                                                                                                                                                                                                                                                         |
| device.custom             | optional       |                  |                                                                                                                                                                                                                                                                                                                                          |
| Security                  | optional       |                  | Security options                                                                                                                                                                                                                                                                                                                         |
| security.securitymode     | optional       | ENUM             | shows if the security mode is activated                                                                                                                                                                                                                                                                                                  |
| security.authscheme       | optional       | ENUM             | shows the active authentication scheme                                                                                                                                                                                                                                                                                                   |
| security.ispasswordset    | optional       | BOOL             | shows whether a password has been set                                                                                                                                                                                                                                                                                                    |
| security.activeconnection | optional       | ENUM             | <p>shows the currently used communication interface</p> <ul style="list-style-type: none"> <li>▪ tcp_if unencrypted http connection at the IoT interface, port 80</li> <li>▪ tls_if encrypted https connection at the IoT interface, port 443</li> <li>▪ fb_if unencrypted http connection at the fieldbus interface, port 80</li> </ul> |

## Service: getsubscriberlist

**Name:** getsubscriberlist

**Description:** The service provides a list of all active subscriptions.

**Request data ("data" field):** none

**Return data ("data" field):** Array with the following data

| Data field  | Mandatory field | Data type        | Description                                                   |
|-------------|-----------------|------------------|---------------------------------------------------------------|
| adr         | mandatory       | STRING           | Data source                                                   |
| datatosend  | mandatory       | ARRAY OF STRINGS | List with URLs of the subscribed data points                  |
| cid         | mandatory       | NUMBER           | ID of the subscription                                        |
| callbackurl | mandatory       | STRING           | Address to which IoT Core event notifications are to be sent; |
| duration    | mandatory       | STRING           | Storage duration of the value                                 |

Example:

- **Request object:**

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/getsubscriberlist"
}
```

- **Return object:**

```
{
  "cid": 4711,
  "data": [
    {
      "adr": "/timer[1]/counter/datachanged/subscribe",
      "datatosend": ["/iolinkmaster/port[2]/iolinkdevice/pdin"],
      "cid": 1,
      "callbackurl": "http://192.168.0.45:80/temp",
      "duration": "lifetime"
    },
    {
      "adr": "/timer[1]/counter/datachanged/subscribe",
      "datatosend": ["/processdatamaster/temperature", "/processdatamaster/voltage"],
      "cid": 2,
      "callbackurl": "http://192.168.0.44:80/temp",
      "duration": "lifetime"
    }
  ],
  "code": 200
}
```

## Service: getsubscriptioninfo

**Name:** getsubscriptioninfo

**Description:** The service provides information about an existing subscription (subscribe).



The following parameters of the existing subscription are to be used for the query:

- Value of the identifier cid (e.g. 4711)
- Number of the timer (e.g. timer[1])
- Name of the callback topic (e.g. B. temp)

### Request data ("data" field):

| Data field | Mandatory field | Data type | Description                                                                                            |
|------------|-----------------|-----------|--------------------------------------------------------------------------------------------------------|
| callback   | mandatory       | STRING    | Address to which IoT Core event notifications are to be sent; complete URL: http://ipaddress:port/path |

### Return data ("data" field):

| Data field   | Mandatory field | Data type        | Description                                                                                            |
|--------------|-----------------|------------------|--------------------------------------------------------------------------------------------------------|
| subscription | mandatory       | BOOL             | Status of the transferred subscription parameter                                                       |
| datatosend   | mandatory       | ARRAY OF STRINGS | List with subscribed data points                                                                       |
| cid          | mandatory       | NUMBER           | ID of the subscribe request                                                                            |
| callbackurl  | mandatory       | STRING           | Address to which IoT Core event notifications are to be sent; complete URL: http://ipaddress:port/path |

Example:

- **Request object:**

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/timer[1]/counter/datachanged/getsubscriptioninfo",
  "data": {
    "callback": "http://192.168.0.44:80/temp"
  }
}
```

- **Return object:**

```
{
  "cid": 4711,
  "data": {
    "subscription": true,
    "datatosend": [
      "/iolinkmaster/port[2]/iolinkdevice/productname",
      "/iolinkmaster/port[2]/iolinkdevice/pdin",
      "/processdatamaster/temperature"],
    "callbackurl": "http://192.168.0.44:80/temp",
    "duration": "lifetime"
  },
  "code": 200
}
```

## Service: gettree

### Name: gettree

**Description:** The service reads the device description of the IO-Link master and outputs it as a JSON object. The output can be limited to a subtree of the device description.

#### Request data ("data" field):

| Data field | Mandatory field | Data type | Description                                                                                                                                                                                                                                                                                                                    |
|------------|-----------------|-----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| adr        | optional        | STRING    | Root element of the subtree                                                                                                                                                                                                                                                                                                    |
| level      | optional        | STRING    | max. level up to which the subtree is output<br>▪ no entry: all levels will be displayed<br>▪ 0: do not display sub-elements ("subs")<br>▪ 1: display sub-elements<br>▪ 2: display sub-elements up to the 2nd level<br>▪ 3: display sub-elements up to the 3rd level<br>...<br>▪ 20: display sub-elements up to the 20th level |

#### Return data ("data" field):

| Data field | Mandatory field | Data type   | Description                    |
|------------|-----------------|-------------|--------------------------------|
| identifier | mandatory       | STRING      | Identifier of the root element |
| type       | mandatory       | STRING      | Type of the element            |
| format     | optional        | JSON Object | Format of the data content     |
| uid        | optional        | STRING      |                                |
| profiles   | optional        | JSON-Array  |                                |
| subs       | mandatory       | JSON-Array  | Sub-elements                   |
| hash       | optional        | STRING      |                                |

#### Examples:

- output the complete device description
 

```
{
  "code": "request",
  "cid": 4,
  "adr": "/gettree"
}
```
- output the subtree counter[2] of the device description up to the 2nd level
 

```
{
  "code": "request",
  "cid": 4,
  "adr": "/gettree",
  "data": {
    "adr": "counter[2]",
    "level": 2
  }
}
```

**Service: install**

52343

**Name:** install**Description:** The service installs the firmware stored in the container area of the device.**Applicable to:** container**Request data (data):** none**Return data (data):** none**Service: iolreadacyclic**

34178

**Name:** iolreadacyclic**Description:** The service acyclically reads the parameter value of an IO-Link device. The parameter is accessed via IO-Link index and subindex.**Request data (field "data"):**

| Data field | Required field | Data type | Description                       |
|------------|----------------|-----------|-----------------------------------|
| index      | mandatory      | NUMBER    | IO-Link index of the parameter    |
| subindex   | mandatory      | NUMBER    | IO-Link subindex of the parameter |

**Response data (field "data"):**

| Data field | Required field | Data type | Description                                         |
|------------|----------------|-----------|-----------------------------------------------------|
| value      | mandatory      | STRING    | Value of the parameter; Value in hexadecimal format |

**Service: iolwriteacyclic**

34177

**Name:** iolwriteacyclic**Description:** The service acyclically writes the parameter value of an IO-Link device. The parameter is accessed via IO-Link index and subindex.**Request data (field "data"):**

| Data field | Required field | Data type | Description                                             |
|------------|----------------|-----------|---------------------------------------------------------|
| index      | mandatory      | NUMBER    | IO-Link index of the parameter                          |
| subindex   | mandatory      | NUMBER    | IO-Link subindex of the parameter                       |
| value      | mandatory      | STRING    | New value of the parameter; Value in hexadecimal format |

**Response data (field "data"):** none

## Service: querytree

61194

**Name:** querytree

**Description:** The service searches a device tree for the criteria profile, type and name and outputs a list with the URLs of the elements found. At least one of the search criteria must be specified. The service can only be executed on the root node of the machine.

**Return data ("data" field):**

| Data field | Mandatory field | Data type | Description                     |
|------------|-----------------|-----------|---------------------------------|
| profile    | optional        | STRING    | Profile of the searched element |
| type       | optional        | STRING    | Type of the searched element    |
| name       | optional        | STRING    | Type of the searched element    |

**Return ("data" field):**

| Data field | Mandatory field | Data type | Description                                                         |
|------------|-----------------|-----------|---------------------------------------------------------------------|
| urlList    | mandatory       | Array     | Array with URLs of the found elements; URLs are separated by commas |

## Service: reboot

34176

**Name:** reboot

**Description:** The service reboots the device.

**Request data (field "data"):** none

**Return data (field "data"):** none

**Example:**

```
{
  "code": "request",
  "cid": 4,
  "adr": "firmware/reboot"
}
```

## Service: Reset

61195

**Name:** Reset

**Description:** The service resets a connection to the initialisation state.

**Request data ("data" field):** none

**Return data ("data" field):** none

**Example:**

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/connections/mqttConnection/MQTTSetup/mqttCmdChannel/status/reset"
}
```

## Service: setblock

**Name:** setblock

**Description:** The service simultaneously sets the values of several data points of a structure.

**Request data (field "data"):**

| Data field | Required field | Data type        | Description                                                                            |
|------------|----------------|------------------|----------------------------------------------------------------------------------------|
| datatoset  | mandatory      | ARRAY OF OBJECTS | List of data points and their new values; data points must support the service setdata |
| consistent | optional       | BOOL             |                                                                                        |

**Response data (field "data"):** none

Example:

Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "iotsetup/network/setblock",
  "data": {
    "datatoset": {
      "ipaddress": "192.168.0.6",
      "subnetmask": "255.255.255.0",
      "ipdefaultgateway": "192.168.0.250",
      "dhcp": 0
    }
  }
}
```

Response:

```
{
  "cid": 4711,
  "code": 233
}
```

34195

## Service: setdata

**Name:** setdata

**Description:** The service sets the value of the data point.

**Request data ("data" field):**

| Data field | Mandatory field | Data type | Description                                                                                                                                                                                                                                       |
|------------|-----------------|-----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| newvalue   | mandatory       | STRING    | New value of the element/data point                                                                                                                                                                                                               |
| duration   | mandatory       | STRING    | Duration of value storage <ul style="list-style-type: none"> <li>▪ lifetime: Value is saved with IoT Core; Value remains valid even after restart of the device</li> <li>▪ uptime: Value is saved until the next restart of the device</li> </ul> |

**Return data ("data" field):** none

Example:

```
{"code": "request",
"cid":4711,
"adr": "devicetag/applicationtag/setdata",
"data":{
"newvalue": "ifm IO-Link master
"duration": "lifetime"
}}
```

## Service: signal

33819

**Name:** signal

**Description:** The service starts the flashing of the status LEDs of the AL1940.

**Request data (field "data"):** none

**Return data (field "data"):** none

Example:

```
{
"code": "request",
"cid":4711,
"adr": "firmware/signal"
}
```

**Service: start**

61196

**Name:** start**Description:** The service starts a connection.**Request data ("data" field):** none**Return data ("data" field):** none

Example:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/connections/mqttConnection/MQTTSetup/mqttCmdChannel/status/start"
}
```

**Service: start\_stream\_set**

52342

**Name:** start\_stream\_set**Description:** The service starts the sequential transfer of multiple data segments.**Applicable to:** Objects of type data**Request data (data):**

| Data field | Required field | Data type | Default | Description                                            |
|------------|----------------|-----------|---------|--------------------------------------------------------|
| size       | mandatory      | STRING    |         | Total size of data to be transferred (number of bytes) |

**Return data (data):** none**Service: stop**

61197

**Name:** stop**Description:** The service stops a connection.**Request data ("data" field):** none**Return data ("data" field):** none

Example:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/connections/mqttConnection/MQTTSetup/mqttCmdChannel/status/stop"
}
```

**Service: stream\_set**

52341

**Name:** stream\_set**Description:** The service transfers a data segment.**Applicable to:** Objects of type data**Request data (data):**

| Data field | Required field | Data type    | Default | Description                           |
|------------|----------------|--------------|---------|---------------------------------------|
| value      | mandatory      | BIN (BASE64) | *       | Segment of binary data (BASE64 coded) |

**Return data (data):** none**Service: subscribe**

61198

**Name:** subscribe**Description:** The service subscribes to the values of data points. The data points to be subscribed are transferred as a list. The IoT Core sends changes to the data sink defined in callback.

CSV formatted notifications can only be transmitted using the TCP protocol via an activated and configured MQTT channel.

**Request data ("data" field):**

| Data field | Mandatory field | Data type        | Description                                                                                                                                                                                                                                                                                                                         |
|------------|-----------------|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| callback   | mandatory       | STRING           | Address to which IoT Core event notifications are to be sent; URL format:<br><ul style="list-style-type: none"> <li>▪ JSON: http://ipaddress:port/path</li> <li>▪ JSON: ws:///path</li> <li>▪ JSON: mqtt://ipaddress:port/topic</li> <li>▪ CSV: tcp://ipaddress:port/path</li> </ul>                                                |
| datatosend | mandatory       | ARRAY OF STRINGS | List from URLs of data elements; Elements must support getdata                                                                                                                                                                                                                                                                      |
| codec      | optional        | STRING           | Format of the returned data<br><ul style="list-style-type: none"> <li>▪ json: JSON formatted</li> <li>▪ csv: CSV with standard separator (,)</li> <li>▪ csv0: CSV formatted with comma separator (,)</li> <li>▪ csv1: CSV formatted with semicolon separator (;)</li> </ul>                                                         |
| DURATION   | mandatory       | STRING           | Duration of value storage<br><ul style="list-style-type: none"> <li>▪ lifetime: Value is saved with IoT Core; Value remains valid even after restart of the device</li> <li>▪ uptime: Value is saved until the next restart of the device</li> <li>▪ once: send only one notification, user must unsubscribe immediately</li> </ul> |

**Return data ("data" field):** none**Notification:** JSON

```
{
  "code": "event",
  "cid": 4711,
  "adr": "",
  "data": {
```

```

"eventno":"EventNo",
"srcurl":"SrcURL",
"payload":{},
"eventurl": {"code":EventStatus,"data":EventData},
"datapointurl_1": {"code":DataStatus_1,"data":DataValue_1},
"datapointurl_2": {"code":DataStatus_2,"data":DataValue_2},
...}}
}

```

**Notification:** CSV

SrcURL,EventNo,EventStatus,EventData,DataStatus\_1,DataValue\_1,DataStatus\_2,DataValue\_2,...

- SrcURL: Source of the event (data point on which subscribe command was listed)
- EventNo: Event number
- EventStatus: Status code of the event
- EventData: Event data
- DataStatus\_1: Status code of the 1st element in list datatosend
- DataValue\_1: Value of the 1st element in list datatosend
- DataStatus\_2: Status code of the 2nd element in list datatosend
- DataValue\_2: Value of the 2nd element in list datatosend
- ...

**Service: unsubscribe**

34197

**Name:** unsubscribe

**Description:** The service deletes an existing subscription. The service unsubscribe is successful if cid and the callback address are registered for an active subscription (subscribe). If the STRING "DELETE" is provided in callback, the IO-Link master deletes all active subscriptions.

**Request data (field "data"):**

| Data field | Required field | Data type | Description                                                                                            |
|------------|----------------|-----------|--------------------------------------------------------------------------------------------------------|
| callback   | mandatory      | STRING    | Address to which IoT Core event notifications are to be sent; complete URL: http://ipaddress:port/path |

**Response data (field "data"):** none

**Service: validation\_useconnecteddevice**

52340

**Name:** validation\_connecteddevice

**Description:** The service checks, whether Device ID and Vendor ID of the connected IO-Link device match with the values of the datapoints ..../validation\_vendorid and ..../validation\_deviceid.

**Applicable to:** Objects of type stucture

**Request data (data):** none

**Return data (data):** none

# 15 Index

## A

|                               |     |
|-------------------------------|-----|
| Access the ifm IoT Core ..... | 38  |
| Accessories .....             | 94  |
| Acyclic Command Channel ..... | 116 |
| Acyclic commands .....        | 120 |
| Additional Codes .....        | 119 |
| Appendix .....                | 95  |
| Application .....             | 96  |
| Approvals / tests .....       | 98  |

## C

|                                                       |                         |
|-------------------------------------------------------|-------------------------|
| Change history .....                                  | 6                       |
| Cleaning process .....                                | 92                      |
| Command 0x10 – Set mode .....                         | 121                     |
| Command 0x20 – Set validation ID / data storage ..... | 123                     |
| Command 0x30 – Set fail-safe data pattern .....       | 125                     |
| Command 0x40 – Reboot .....                           | 127                     |
| Command 0x50 – Factory Reset .....                    | 128                     |
| Command request .....                                 | 121, 123, 125, 127, 128 |
| Command response .....                                | 122, 124, 125, 127, 128 |
| Communication, parameter setting, evaluation .....    | 11                      |
| Configuration .....                                   | 23                      |
| Configuration Area .....                              | 102                     |
| Configure IO-Link devices .....                       | 35, 88                  |
| Configuring IO-Link the master .....                  | 75                      |
| Configuring the MQTT command channel .....            | 68                      |
| Connect IO-Link devices for Class A operation .....   | 16                      |
| Connect IO-Link devices for Class B operation .....   | 17                      |
| Connect the device .....                              | 18                      |
| Connecting the Modbus TCP ports .....                 | 14                      |
| Control IO-Link master .....                          | 88                      |
| Creating a new notification .....                     | 73                      |

## D

|                               |     |
|-------------------------------|-----|
| Deleting a notification ..... | 74  |
| Diagnostic data .....         | 104 |
| Digital inputs .....          | 12  |

## E

|                                                       |        |
|-------------------------------------------------------|--------|
| Electrical connection .....                           | 14, 99 |
| Electrical data .....                                 | 96     |
| Environmental conditions .....                        | 98     |
| Error codes .....                                     | 119    |
| Ethernet ports .....                                  | 20     |
| Example                                               |        |
| Activate security mode .....                          | 47     |
| Browsing device description .....                     | 43     |
| Change name of the IO-Link master .....               | 61     |
| Change the parameter value of an IO-Link device ..... | 57     |
| Changing a subscription .....                         | 63     |
| Checking subscriptions .....                          | 65     |
| Clone the Data Storage of an IO-Link port .....       | 51     |
| Configuring the MQTT command channel .....            | 69     |
| GET request .....                                     | 38     |
| Integrate IO-Link master in a CODESYS project .....   | 79     |
| output subtree .....                                  | 42     |
| POST request .....                                    | 39     |
| Publish the temperature to an MQTT broker .....       | 71     |

|                                                                          |        |
|--------------------------------------------------------------------------|--------|
| Read IO-Link process data (operating mode) .....                         | 53     |
| Read several parameter values of the IO-Link master simultaneously ..... | 43     |
| Read the parameter value of an IO-Link device .....                      | 56     |
| Reading digital input (operating mode) .....                             | 54     |
| Reading properties of an element .....                                   | 41     |
| Request with authentication .....                                        | 47     |
| reset password .....                                                     | 48     |
| Subscribing notifications via WebSocket .....                            | 66     |
| Subscribing to notifications .....                                       | 44, 62 |
| Subscribing to notifications in CSV format .....                         | 64     |
| Unsubscribing from notifications .....                                   | 64     |
| Update firmware .....                                                    | 60     |
| Writing digital output (operating mode) .....                            | 54     |
| Writing IO-Link value (operating mode) .....                             | 53     |
| Explanation of Symbols .....                                             | 6      |

## F

|                                          |    |
|------------------------------------------|----|
| Factory settings .....                   | 93 |
| Fieldbus                                 |    |
| Configuring the fieldbus interface ..... | 49 |
| Configure IP settings .....              | 29 |
| Configuring the IP settings .....        | 49 |
| set the length of the process data ..... | 30 |
| Setting fail-safe values .....           | 50 |
| Firmware                                 |    |
| Reboot the device .....                  | 34 |
| Reset device to factory settings .....   | 34 |
| First steps .....                        | 41 |
| Function .....                           | 10 |

## G

|                                                      |    |
|------------------------------------------------------|----|
| Gateway                                              |    |
| Reading device information .....                     | 59 |
| Reading status and diagnostic information .....      | 59 |
| Resetting, rebooting and localising the device ..... | 58 |
| Setting the application tag .....                    | 61 |
| Updating the firmware .....                          | 60 |
| General .....                                        | 7  |
| General functions .....                              | 41 |
| GET request .....                                    | 38 |

## I

|                                                                  |         |
|------------------------------------------------------------------|---------|
| ifm IoT Core .....                                               | 36, 129 |
| Info                                                             |         |
| Show device information .....                                    | 33      |
| Input Data .....                                                 | 107     |
| Inputs .....                                                     | 97      |
| Inputs / outputs .....                                           | 96      |
| Install the device .....                                         | 13      |
| Integrate the AL1940 into the Modbus project .....               | 79      |
| Intended use .....                                               | 9       |
| Interfaces .....                                                 | 97      |
| Internet of Things (IoT) .....                                   | 11      |
| IO-Link .....                                                    | 11      |
| IO-Link devices                                                  |         |
| Accessing parameters .....                                       | 56      |
| Indicating IO-Link events .....                                  | 58      |
| Reading an writing device information .....                      | 58      |
| IO-Link ports .....                                              | 16      |
| Activate data transfer to LR AGENT or LR SMARTOB SERVER .....    | 30      |
| Configure operating mode .....                                   | 31      |
| Configuring data transfer to LR AGENT or LR SMARTOB SERVER ..... | 53      |
| Configuring device validation and data storage .....             | 51      |
| Indicating port events .....                                     | 56      |

|                                                               |             |
|---------------------------------------------------------------|-------------|
| Reading / writing process data .....                          | 53          |
| set fail-safe values.....                                     | 33          |
| Set the device validation and data storage .....              | 32          |
| Setting the operating mode of pin 4 (US) .....                | 50          |
| IO-Link Ports (Class A).....                                  | 21          |
| IO-Link supply.....                                           | 12          |
| IoT                                                           |             |
| Configure IP settings.....                                    | 25          |
| Configure security mode .....                                 | 26          |
| Configure the interface to LR AGENT or LR SMARTOB SERVER..... | 28          |
| Configuring access rights.....                                | 27, 45      |
| Configuring IP settings .....                                 | 45          |
| Configuring security mode .....                               | 46          |
| Configuring the LR AGENT or LR SMARTOB SERVER interface ..... | 46          |
| IoT Core                                                      |             |
| Diagnostic codes .....                                        | 40          |
| General information .....                                     | 37          |
| IoT port.....                                                 | 15, 21      |
| IT security .....                                             | 8           |
| <b>L</b>                                                      |             |
| LED indicators .....                                          | 20          |
| Legal and copyright information .....                         | 5           |
| LR DEVICE.....                                                | 24          |
| <b>M</b>                                                      |             |
| Maintenance, repair and disposal .....                        | 92          |
| Managing notifications.....                                   | 73          |
| Mapping                                                       |             |
| Compact Input Block .....                                     | 110         |
| Compact Output Block .....                                    | 112         |
| diagnostic information .....                                  | 109         |
| Diagnostics .....                                             | 105         |
| digital input data .....                                      | 108         |
| Digital output data .....                                     | 111         |
| events .....                                                  | 106         |
| port configuration.....                                       | 103         |
| PQI.....                                                      | 115         |
| Status information .....                                      | 114         |
| Status information IO-Link ports .....                        | 110         |
| Mechanical data.....                                          | 98          |
| Modbus TCP .....                                              | 11, 79, 100 |
| Programmers' notes .....                                      | 89          |
| Mounting .....                                                | 13          |
| MQTT support.....                                             | 68          |
| <b>N</b>                                                      |             |
| Note                                                          |             |
| Connection states.....                                        | 69          |
| Exception Codes .....                                         | 89          |
| Security mode .....                                           | 46          |
| Notes.....                                                    | 14          |
| <b>O</b>                                                      |             |
| Offline parameter setting .....                               | 25          |
| Operating and display elements .....                          | 19          |
| Operation .....                                               | 91          |
| Output Data .....                                             | 111         |
| Outputs .....                                                 | 97          |
| Overview .....                                                | 19          |
| IoT profile.....                                              | 130         |
| IoT services .....                                            | 138         |
| IoT types .....                                               | 137         |

**P**

|                                        |     |
|----------------------------------------|-----|
| Parameter setting .....                | 11  |
| Parameter setting with LR DEVICE ..... | 25  |
| POST request .....                     | 39  |
| Power supply .....                     | 21  |
| Preliminary note .....                 | 5   |
| Profile                                |     |
| blob .....                             | 130 |
| deviceinfo.....                        | 131 |
| devicetag .....                        | 131 |
| imlinkdevice_full .....                | 132 |
| imlinkmaster .....                     | 132 |
| mqttCmdChannel .....                   | 133 |
| mqttCmdChannelSetup .....              | 133 |
| mqttConnection .....                   | 133 |
| mqttSetup .....                        | 134 |
| network .....                          | 134 |
| parameter .....                        | 135 |
| processdata .....                      | 135 |
| runcontrol .....                       | 135 |
| service .....                          | 135 |
| software .....                         | 135 |
| software/uploadedablesoftware .....    | 136 |
| Timer .....                            | 136 |
| Programmers' notes .....               | 37  |
| Purpose of the document .....          | 5   |

**R**

|                                                   |     |
|---------------------------------------------------|-----|
| Read device information .....                     | 88  |
| Read diagnostic information and events .....      | 87  |
| Read input data of individual IO-Link ports ..... | 84  |
| Read input data of several IO-Link ports .....    | 83  |
| Reading and writing process data .....            | 77  |
| Register .....                                    | 101 |
| Remarks .....                                     | 25  |
| Replacing IO-Link device .....                    | 92  |
| Request channel .....                             | 117 |
| Required background knowledge .....               | 7   |
| Response channel .....                            | 118 |
| Rules for accessing the Modbus registers .....    | 89  |

**S**

|                                                 |     |
|-------------------------------------------------|-----|
| Safety instructions .....                       | 7   |
| Safety symbols on the device .....              | 7   |
| Searching for elements in the device tree ..... | 75  |
| Security mode .....                             | 11  |
| Service                                         |     |
| factoryreset .....                              | 138 |
| getblobdata .....                               | 139 |
| getdata .....                                   | 139 |
| getdatamulti .....                              | 140 |
| getelementinfo .....                            | 140 |
| getsubscriberlist .....                         | 142 |
| getsubscriptioninfo .....                       | 143 |
| gettree .....                                   | 144 |
| install .....                                   | 145 |
| ioreadacyclic .....                             | 145 |
| iowriteacyclic .....                            | 145 |
| querytree .....                                 | 146 |
| reboot .....                                    | 146 |
| Reset .....                                     | 146 |
| setblock .....                                  | 147 |
| setdata .....                                   | 148 |

|                                    |     |
|------------------------------------|-----|
| signal .....                       | 148 |
| start.....                         | 149 |
| start_stream_set.....              | 149 |
| stop .....                         | 149 |
| stream_set.....                    | 150 |
| subscribe .....                    | 150 |
| unsubscribe .....                  | 151 |
| validation_useconnecteddevice..... | 151 |
| Servicet                           |     |
| getidentity .....                  | 141 |
| Set IO-Link master.....            | 81  |
| Set IO-Link ports.....             | 82  |
| Setting the storage duration ..... | 44  |
| Set-up .....                       | 22  |
| Single Port Access.....            | 113 |
| Status LEDs.....                   | 20  |
| Subscribing to notifications.....  | 62  |
| Supported function codes.....      | 89  |

**T**

|                      |    |
|----------------------|----|
| Technical data ..... | 96 |
|----------------------|----|

**U**

|                                    |        |
|------------------------------------|--------|
| Updating the firmware .....        | 78, 92 |
| Use acyclic services .....         | 90     |
| Using the IoT-Core Visualizer..... | 72     |
| Using Web Socket .....             | 66     |
| Using web-based management.....    | 91     |

**V**

|                        |    |
|------------------------|----|
| Visual indication..... | 12 |
|------------------------|----|

**W**

|                                                     |    |
|-----------------------------------------------------|----|
| Write output data of individual IO-Link ports ..... | 86 |
| Write output data of several IO-Link ports.....     | 85 |