# **EN**



# P1KHxxx

Reflex Sensors with Background Suppression High-End with Teach-in



**Operating Instructions** 

# **Table of Contents**

1.	General	
	1.1 Information Concerning these Instructions	
	1.2 Explanations of Symbols	
	1.3 Limitation of Liability	
	1.4 Copyrights	
2.	For Your Safety	.5
	2.1 Use for Intended Purpose	
	2.2 Use for Other than the Intended Purpose	
	2.3 Personnel Qualifications	
	2.4 Modification of Products	
	2.5 General Safety Precautions	
	2.6 Laser/LED Warnings	
	2.7 Approvals and protection class	6
3.	Technical Data	.7
	3.1 Spot Diameter	8
	3.2 Switching Frequency / Response Time	
	3.2.1 Switching Distance Deviation	
	3.3 Complementary Products	
	3.4 Layout	
	3.5 Control Panel	
	3.6 Scope of Delivery	
4.	Transport and Storage	11
	4.1 Transport	11
	4.2 Storage	11
5.	4.2 Storage	11 <b>12</b>
5.	4.2 Storage Installation and Electrical Connection 5.1 Installation	11 <b>12</b> 12
5.	4.2 Storage  Installation and Electrical Connection  5.1 Installation  5.2 Electrical Connection	11 <b>12</b> 12 12
5.	4.2 Storage	11 12 12 12 13
<ol> <li>6.</li> </ol>	4.2 Storage  Installation and Electrical Connection  5.1 Installation  5.2 Electrical Connection	11 12 12 12 13
6.	4.2 Storage	11 12 12 12 13 15
	4.2 Storage	11 12 12 13 15
6.	4.2 Storage	11 12 12 13 15 15
6.	4.2 Storage	11 12 12 13 15 15
6.	4.2 Storage  Installation and Electrical Connection  5.1 Installation  5.2 Electrical Connection  5.3 Diagnostics  Settings  Settings  Settings via IO-Link  7.1 Teach Mode  7.1.1 Foreground Teach-In  7.1.2 Background Teach-In  7.2 Pin Function, I/O2.	11 12 12 13 15 15 15 16 16
6.	4.2 Storage  Installation and Electrical Connection  5.1 Installation  5.2 Electrical Connection  5.3 Diagnostics  Settings  Settings  Settings via IO-Link  7.1 Teach Mode  7.1.1 Foreground Teach-In  7.1.2 Background Teach-In  7.2 Pin Function, I/O2.  7.2.1 Input External Teach-In	11 12 12 12 13 15 15 16 16 16
6.	4.2 Storage  Installation and Electrical Connection  5.1 Installation  5.2 Electrical Connection  5.3 Diagnostics  Settings  Settings  Settings via IO-Link  7.1 Teach Mode  7.1.1 Foreground Teach-In  7.1.2 Background Teach-In  7.2 Pin Function, I/O2.  7.2.1 Input External Teach-In  7.2.2 Error Output	11 12 12 13 15 15 15 16 16 16 17
6.	4.2 Storage Installation and Electrical Connection 5.1 Installation 5.2 Electrical Connection 5.3 Diagnostics Settings Settings Settings via IO-Link 7.1 Teach Mode 7.1.1 Foreground Teach-In 7.1.2 Background Teach-In 7.1.2 Background Teach-In 7.2 Pin Function, I/O2. 7.2.1 Input External Teach-In 7.2.2 Error Output. 7.3 Additional functions and settings via IO-Link	11 12 12 12 13 15 15 16 16 16 17 17
6.	4.2 Storage  Installation and Electrical Connection  5.1 Installation  5.2 Electrical Connection  5.3 Diagnostics  Settings  Settings  Settings via IO-Link  7.1 Teach Mode  7.1.1 Foreground Teach-In  7.1.2 Background Teach-In  7.2 Pin Function, I/O2.  7.2.1 Input External Teach-In  7.2.2 Error Output	11 12 12 12 13 15 15 16 16 16 17 17
6. 7.	4.2 Storage Installation and Electrical Connection 5.1 Installation 5.2 Electrical Connection 5.3 Diagnostics Settings Settings Settings via IO-Link 7.1 Teach Mode 7.1.1 Foreground Teach-In 7.1.2 Background Teach-In 7.1.2 Background Teach-In 7.2 Pin Function, I/O2. 7.2.1 Input External Teach-In 7.2.2 Error Output. 7.3 Additional functions and settings via IO-Link	11 12 12 13 15 15 16 16 16 17 17
6. 7. 8. 9.	Installation and Electrical Connection 5.1 Installation 5.2 Electrical Connection 5.3 Diagnostics  Settings  Settings  Settings via IO-Link 7.1 Teach Mode 7.1.1 Foreground Teach-In 7.1.2 Background Teach-In 7.1.2 Background Teach-In 7.2 Pin Function, I/O2 7.2.1 Input External Teach-In 7.2.2 Error Output 7.3 Additional functions and settings via IO-Link  I/O-Link  Maintenance Instructions	11 12 12 13 15 15 16 16 16 17 17 17
6. 7. 8. 9.	Installation and Electrical Connection  5.1 Installation  5.2 Electrical Connection  5.3 Diagnostics  Settings  Settings via IO-Link  7.1 Teach Mode  7.1.1 Foreground Teach-In.  7.1.2 Background Teach-In.  7.2 Pin Function, I/O2.  7.2.1 Input External Teach-In  7.2.2 Error Output  7.3 Additional functions and settings via IO-Link  I/O-Link  Maintenance Instructions  Proper Disposal	11 12 12 12 13 15 15 15 16 16 16 17 17 17 17
6. 7. 8. 9.	Installation and Electrical Connection  5.1 Installation  5.2 Electrical Connection  5.3 Diagnostics  Settings  Settings via IO-Link  7.1 Teach Mode  7.1.1 Foreground Teach-In.  7.1.2 Background Teach-In.  7.2 Pin Function, I/O2.  7.2.1 Input External Teach-In.  7.2.2 Error Output  7.3 Additional functions and settings via IO-Link  I/O-Link  Maintenance Instructions  Proper Disposal  Appendix.	11 12 12 13 15 15 15 16 16 17 17 17 17 18
6. 7. 8. 9.	Installation and Electrical Connection  5.1 Installation  5.2 Electrical Connection  5.3 Diagnostics  Settings  Settings via IO-Link  7.1 Teach Mode  7.1.1 Foreground Teach-In.  7.1.2 Background Teach-In.  7.2 Pin Function, I/O2.  7.2.1 Input External Teach-In  7.2.2 Error Output  7.3 Additional functions and settings via IO-Link  I/O-Link  Maintenance Instructions  Proper Disposal	11 12 12 13 15 15 15 16 16 17 17 17 17 18 18



## 1. General

## 1.1 Information Concerning these Instructions

- These instructions apply to the products with ID code P1KHxxx.
- They make it possible to use the product safely and efficiently.
- These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.
- · Local accident prevention regulations and national work safety regulations must be complied with as well.
- The product is subject to further technical development, and thus the information contained in these operating instructions may also be subject to change. The current version can be found at www.wenglor.com in the product's separate download area.



#### NOTE!

The operating instructions must be read carefully before using the product and must be kept on hand for later reference.

## 1.2 Explanations of Symbols

- Safety precautions and warnings are emphasized by means of symbols and attention-getting words.
- Safe use of the product is only possible if these safety precautions and warnings are adhered to.

The safety precautions and warnings are laid out in accordance with the following principle:



# Attention-Getting Word! Type and Source of Danger!

Possible consequences in the event that the hazard is disregarded.

· Measures for averting the hazard.

The meanings of the attention-getting words, as well as the scope of the associated hazards, are listed below.



#### DANGER!

This word indicates a hazard with a high degree of risk which, if not avoided, results in death or severe injury.



#### WARNING!

This word indicates a hazard with a medium degree of risk which, if not avoided, may result in death or severe injury.



#### CAUTION!

This word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



#### ATTENTION!

This word draws attention to a potentially hazardous situation which, if not avoided, may result in property damage.



## NOTE!

A note draws attention to useful tips and suggestions, as well as information regarding efficient, error-free use.

## 1.3 Limitation of Liability

- The product has been developed in consideration of the current state-of-the-art and applicable standards and guidelines. Subject to change without notice.
- A valid declaration of conformity can be accessed at www.wenglor.com in the product's separate download area.
- wenglor sensoric elektronische Geräte GmbH (hereinafter referred to as "wenglor") excludes all liability in the event of:
  - · Non-compliance with the instructions
  - · Use of the product for purposes other than those intended
  - · Use by untrained personnel
  - · Use of unapproved replacement parts
  - · Unapproved modification of products
- These operating instructions do not include any guarantees from wenglor with regard to the described procedures or specific product characteristics.
- wenglor assumes no liability for printing errors or other inaccuracies contained in these operating
  instructions, unless wenglor was verifiably aware of such errors at the point in time at which the operating
  instructions were prepared.

# 1.4 Copyrights

- The contents of these instructions are protected by copyright law.
- · All rights are reserved by wenglor.
- Commercial reproduction or any other commercial use of the provided content and information, in particular graphics and images, is not permitted without previous written consent from wenglor.

4 General



# 2. For Your Safety

## 2.1 Use for Intended Purpose

The product is based on the following functional principle:

#### Reflex Sensors with Background Suppression

Reflex sensors with background suppression analyze the light reflected from objects. As these sensors work according to the principle of angular measurement, the color, shape and surface characteristics of the object have almost no influence on the detection range. Even dark objects can be reliably detected against a bright background. The output is switched as soon as an object passes the selected range.

#### This product can be used in the following industry sectors:

- Special machinery manufacturing
   Consumer goods industry Heavy machinery manufacturing
- Paper industry

Logistics

- · Electronics industry
- · Automotive industry
- Glass industry

Food industry

- Steel industry
- · Packaging industry
- Aviation industry
- Pharmaceuticals industry
- · Chemicals industry

· Plastics industry

- Alternative energy

- Woodworking industry
- · Raw materials extraction

# 2.2 Use for Other than the Intended Purpose

- Not a safety component in accordance with 2006/42/EC (Machinery Directive)
- The product is not suitable for use in potentially explosive atmospheres.
- The product may only be used with accessories supplied or approved by wenglor, or combined with approved products. A list of approved accessories and combination products can be accessed at www.wenglor.com on the product detail page.

#### DANGER!



Risk of personal injury or property damage in case of use for other than the intended purpose!

Use for other than the intended purpose may lead to hazardous situations.

Observe instructions regarding use for intended purpose.

#### 2.3 Personnel Qualifications

- Suitable technical training is a prerequisite.
- In-house electronics training is required.
- Trained personnel must have uninterrupted access to the operating instructions.



#### DANGER!

 
Risk of personal injury or property damage in case of incorrect initial start-up and maintenance!

Personal injury and damage to equipment may occur.

• Adequate training and qualification of personnel.

#### 2.4 Modification of Products

#### DANGER!





Personal injury and damage to equipment may occur. Non-observance may result in loss of the CE marking and the guarantee may be rendered null and void.

• Modification of the product is impermissible.

## 2.5 General Safety Precautions

#### NOTE

 These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.



- In the event of possible changes, the respectively current version of the operating instructions can be accessed at www.wenglor.com in the product's download area.
- Read the operating instructions carefully before using the product.
- Protect the sensor against contamination and mechanical influences.

# 2.6 Laser/LED Warnings

The respective laser class or LED group is listed in the product's technical data.



Laser Class 1 (EN 60825-1)

Applicable standards and safety regulations must be observed. Pp = 7 mW, t = 8 s,  $\lambda$  = 680 nm

# 2.7 Approvals and protection class







6 For Your Safety



# 3. Technical Data

Optical Data		
Service life (ambient temp. = +25 °C)	100000 h	
Max. permissible ambient light	10000 Lux	
Switching Hysteresis	<10 %	
Electrical Data		
Supply power	1530 V DC	
IO-Link supply voltage	1830 V DC	
Temperature drift	< 5 %	
Temperature range	−4060 °C	
Switching output voltage drop	< 2 V	
Switching output switching current	100 mA	
Switching output residual current	< 50 μA	
Short-circuit protection	Yes	
Reverse polarity protected	Yes	
Overload-proof	Yes	
Lockable	Yes	
Interface	IO-Link	
IO-Link version	1.1	
Protection class	III	
Mechanical Data		
Setting method	Teach-in	
Housing material	Plastic	
Degree of protection	IP67/IP68	
Lens cover	PMMA	

Order Number		P1KH			
Technical Data		016	024	017	031
Range		200	mm	120	mm
Adjustable Range		302	00 mm	3012	20 mm
Light Source		Red	Light	Laser	(red)
Laser Class (EN 60825	-1)		_	-	1
Spot Diameter		see T	able 1	see Ta	able 2
Current consumption		< 20 mA			
Switching Frequency		see Table 1			
Response Time		see Table 1			
	PNP	×		×	
Output function	NPN		×		×
Output function	NC, NO antivalent	×	×	×	×
	Configurable	×	×	×	×
Connection		M8×1			
Connection Diagram No.		221			
Suitable Mounting Technology No.		7			

# 3.1 Spot Diameter

Range	30 mm	120 mm	200 mm
Spot diameter	9 mm	7 mm	10 mm

Table 1

Range	40 mm	80 mm	120 mm
Spot diameter	2,5 mm	1,5 mm	1 mm

Table 2

# 3.2 Switching Frequency / Response Time

The switching frequency and the response time are depending on 2 settings: operating mode and switching outputs. The following values result according to the setting:

On avating Made	Outputs		
Operating Mode	2 independent switching outputs	1 switching output	
Switching Frequency (Standard Mode)	100 Hz*	1000 Hz	
Response Time (Standard Mode)	5 ms*	0,5 ms	
Switching Frequency (Interference-free Mode)	50 Hz	500 Hz	
Response Time (Interference-free Mode)	10 ms	1 ms	


Table 3

\*preset configuration


## 3.2.1 Switching Distance Deviation

Typical characteristic curve based on Kodak white (90 % remission).

#### P1KH016, P1KH024

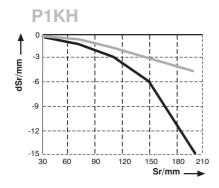

#### P1KH017, P1KH031

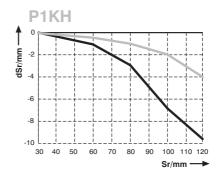


Sr = Switching Distance dSr = Switching Distance Change Black 6 % remission Grey 18 % remission

8 Technical Data



# 3.3 Complementary Products

wenglor can provide you with suitable connection technology for your product.

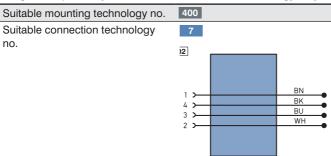


PNP-NPN converter BG7V1P-N-2M

IO-Link master


wTeach2 software DNNF005

# 3.4 Layout

# P1KH016, P1KH024

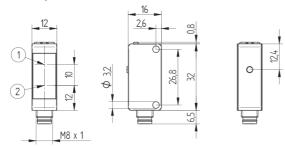


# P1KH017, P1KH031

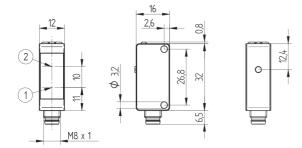

① = Emitter diode ② = Receiving diode Screw M3 = 0,5 Nm Dimensions specified in mm (1 mm = 0,03937 Inch)

# 3.5 Control Panel

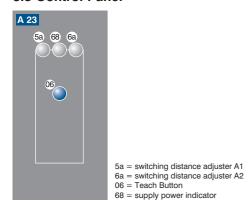

10 Technical Data



# 3.6 Scope of Delivery

- Sensor
- · Safety precautions
- Mounting-Set 01

# 4. Transport and Storage

## 4.1 Transport

Upon receipt of shipment, the goods must be inspected for damage in transit. In the case of damage, conditionally accept the package and notify the manufacturer of the damage. Then return the device, making reference to damage in transit.

## 4.2 Storage

The following points must be taken into condition with regard to storage:

- · Do not store the product outdoors.
- Store the product in a dry, dust-free place.
- Protect the product against mechanical impacts.
- · Protect the product against exposure to direct sunlight.

#### ATTENTION!



Risk of property damage in case of improper storage!

The product may be damaged.

• Storage instructions must be complied with.

# 5. Installation and Electrical Connection

#### 5.1 Installation

- Protect the product from contamination during installation.
- Observe all applicable electrical and mechanical regulations, standards, and safety rules.
- Protect the product against mechanical influences.
- Make sure that the sensor is mounted in a mechanically secure fashion.
- Specified torque values must be complied with (see section "3. Technical Data", page 7).

#### ATTENTION!



## Risk of property damage in case of improper installation!

The product may be damaged.

• Installation instructions must be complied with.

#### **CAUTION!**




## Risk of personal injury or property damage during installation!

Personal injury and damage to the product may occur.

A safe installation environment must be assured.

### 5.2 Electrical Connection



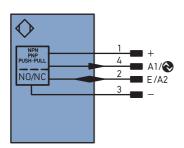



+	Supply Voltage +		
_	Supply Voltage 1 V		
~	Supply Voltage (AC Voltage)		
Α	Switching Output	(NO)	
Ā	Switching Output	(NC)	
V	Contamination/Error Output	(NO)	
⊽	Contamination/Error Output	(NC)	
E	Input (analog or digital)		
Т	Teach Input		
Z	Time Delay (activation)		
S	Shielding		
RxD	Interface Receive Path		
TxD	Interface Send Path		
RDY	Ready		
GND	Ground		
CL	Clock		
E/A	Output/Input programmable		
<b>②</b>	IO-Link		
PoE	Power over Ethernet		
IN	Safety Input		
OSSD	Safety Output		
Signal	, ,		
BI_D+/-	Ethernet Gigabit bidirect. data	a line (A-D)	
ENORS422 Encoder 0-pulse 0-0 (TTL)			

PT	Platinum measuring resistor
nc	not connected
U	Test Input
Ū	Test Input inverted
W	Trigger Input
W -	Ground for the Trigger Input
0	Analog Output
0-	Ground for the Analog Output
BZ	Block Discharge
Awv	Valve Output
а	Valve Control Output +
b	Valve Control Output 0 V
SY	Synchronization
SY-	Ground for the Synchronization
E+	Receiver-Line
S+	Emitter-Line
÷	Grounding
SnR	Switching Distance Reduction
Rx+/-	Ethernet Receive Path
Tx+/-	Ethernet Send Path
Bus	Interfaces-Bus A(+)/B(-)
La	Emitted Light disengageable
Mag	Magnet activation
RES	Input confirmation
EDM	Contactor Monitoring

ENARS422	Encoder A/Ā (TTL)
ENBRS422	Encoder B/B (TTL)
ENA	Encoder A
ENB	Encoder B
Amin	Digital output MIN
Амах	Digital output MAX
Аок	Digital output OK
SY In	Synchronization In
SY OUT	Synchronization OUT
Оцт	Brightness output
М	Maintenance
rsv	reserved
Wire Co	olors according to IEC 60757
BK	Black
BN	Brown
RD	Red
OG	Orange
YE	Yellow
GN	Green
BU	Blue
VT	Violet
GY	Grey
WH	White
PK	White Pink

## DANGER!



Legend

### Risk of personal injury or property damage due to electric current!

Voltage conducting parts may cause personal injury or damage to equipment.


• The electric device may only be connected by appropriately qualified personnel.

# 5.3 Diagnostics

Causes for Triggering the Contamination Warning (blinking LED):

Display LED Diagnosis/Cause		Elimination
	Contamination	Carefully clean the optic cover with a cloth.
Continuous blinking	Aged emitter diode	Replace the sensor.
at approx. 2.5 Hz	Unreliable working range	<ul><li>Increase the sensor's switching distance.</li><li>Reduce distance between sensor and object.</li></ul>
	Short-circuit	Check electrical wiring and eliminate the short-circuit.
Continuous blinking at approx. 5 Hz	Over-temperature	Disconnect the sensor from supply power and allow it to cool down.
	Hardware error	Replace the sensor.

## **Contamination Warning Flowcharts**

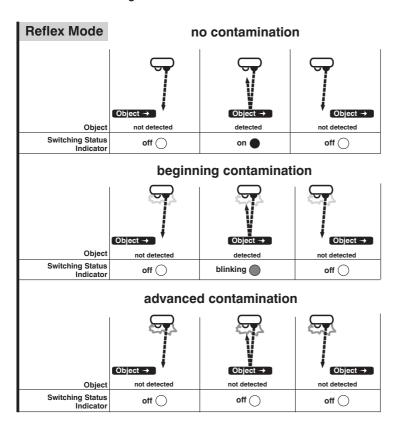



# 6. Settings

The switching distance to the object can be taught in for both outputs by pressing the teach-in key on the sensor (default setting is foreground teach-in).

#### Teach-In for Switching Output 1

- 1. Mount the sensor in accordance with the mounting instructions.
- 2. Press and hold the teach-in key until switching status indicator LED A1 starts blinking.
- 3. Release the teach-in key after 2 seconds.
- 4. The distance is taught in and the LED at output 1 lights up in order to confirm successful teach-in.

#### Teach-In for Switching Output 2

- 1. Mount the sensor in accordance with the mounting instructions.
- 2. Press and hold the teach-in key until switching status indicator LED A2 starts blinking.
- 3. Release the teach-in key after 5 seconds.
- 4. The distance is taught in and the LED for output 2 lights up in order to confirm successful teach-in.



#### NOTE!

If teach-in is conducted without an object or if the object is too far from the sensor, switching distance is set to the end of the setting range.


# 7. Settings via IO-Link

Further settings can be entered to the sensor via the IO-Link interface.

#### 7.1 Teach Mode


## 7.1.1 Foreground Teach-In

Teaching in progress while the sensor is focused on the object. The switching distance is then automatically set to a distance which is slightly greater than the clearance between the sensor and the object. The sensor is thus activated for all objects whose distance to the sensor is equal to or less than the distance to the object used for the Teach-In procedure.

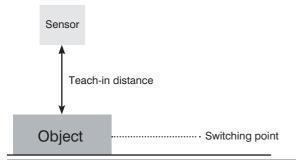

#### 7.1.2 Background Teach-In

Teach-In is performed while the sensor spot is aligned to the background. The switching distance is then automatically set to a distance which is slightly less than the clearance between the sensor and the background. The sensor is thus activated whenever an object is located between the background and the sensor.

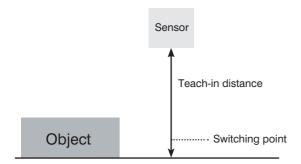

## 7.2 Pin Function, I/O2

The function of I/O2 can be configured either as an output or an input.

### 7.2.1 Input External Teach-In

Teach in output A1 via the teach-in input.

1. Set the E/A2 pin function to external teach-in.

With Ub setting active (default):

- 2. Apply 18...30 V to pin E/A2 for at least 1 second, but for no more than 4 seconds.
- 3. As soon as voltage drops at the input, A1 is taught in.

With Ub setting inactive:

- 2. Disconnect pin I/O2 or connect it to 0 V for at least 1 second, but for no more than 4 seconds.
- 3. As soon as voltage is applied to the input, O1 is taught in.

#### Locking

If the teach-in input is continuously activated, the teach-in key is locked and protected against inadvertent changes.

1. Change the E/A2 pin function to external teach-in input.

With Ub setting active (default):

- 2. Permanently connect pin E/A2 to voltage within a range of 18 to 30 V DC.
- 3. The sensor is protected against inadvertent changes caused by the teach-in key.

With Ub setting inactive:

- 2. Permanently disconnect pin I/O2 or connect it to 0 V.
- 3. The sensor is protected against inadvertent changes caused by the teach-in key.



#### 7.2.2 Error Output

The error output is switched in the following cases:

- Contamination
- · Aged emitter diode
- · Unreliable working range
- · Short-circuit
- Over-temperature
- · Hardware error

# 7.3 Additional functions and settings via IO-Link

- PNP/NPN/push-pull
- NC/NO
- Switching hysteresis
- · On/off-delay
- · Operating mode
- · Switch emitted light off
- · Test mode
- · Data storage

# 8. I/O-Link

Process and parameters data, as well as the IODD, can be found at www.wenglor.com in the product's separate download area.

# 9. Maintenance Instructions

#### NOTE!



- This wenglor sensor is maintenance-free.
- Cleaning and inspection of the plug connections at regular intervals are advisable.
- Do not clean the sensor with solvents or cleansers which could damage the product.
- The product must be protected against contamination during initial start-up.

# 10. Proper Disposal

wenglor sensoric GmbH does not accept the return of unusable or irreparable products. Respectively valid national waste disposal regulations apply to product disposal.

# 11. Appendix

## 11.1 List of Abbreviations

Abbreviation	Meaning	
Tu	Ambient temperature	
Ub	Supply voltage	
IODD	IO Device Description	
MTTFd	Mean Time to Dangerous Failure	

# 11.2 Change Index, Operating Instructions

Version	Date	Description/Change
1.0.0	22.05.17	Initial version of the operating instructions
1.0.1	08.11.17	Switching Frequency/Response Time
1.0.2	20.11.17	Switching Distance Deviation
1.1.0	04.12.17	"3. Technical Data" on page 7
1.2.0	07.02.18	"3. Technical Data" on page 7 (Range, Adjustable Range)
1.3.0	15.03.18	"3.2.1 Switching Distance Deviation" on page 8
1.4.0	11.07.19	"7.2 Pin Function, I/O2" on page 16

# 11.3 EU Declaration of Conformity

The EU declaration of conformity can be found on our website at www.wenglor.com in the product's download area.

18 Proper Disposal