


# LV250

**Steuereinheit für Einweglichtschranken**  
Controller for Through Beam Sensors



**Betriebsanleitung**  
Operating Instructions

## Inhaltsverzeichnis

<b>1. Bestimmungsgemäße Verwendung</b>	<b>3</b>
<b>2. Allgemeine Angaben zum Produkt</b>	<b>3</b>
<b>3. Sicherheitshinweise</b>	<b>3</b>
<b>4. EG-Konformitätserklärung</b>	<b>3</b>
<b>5. Technische Daten LV250xCT</b>	<b>4</b>
<b>EA250-xxx/SA250-xxx</b>	<b>4</b>
5.1. Anschlussplan LV250xCT	5
5.2. Anschlussplan SA250-xxx/EA250-xxx	6
5.3. Abmessung/Bedienfeld	6
<b>6. Montagehinweise</b>	<b>7</b>
6.1. Befestigung auf Trageschiene nach EN 50022	7
<b>7. Einstellungen</b>	<b>7</b>
7.1. NO/NC Umschaltung (alle Ausgänge gemeinsam)	8
7.2. Empfindlichkeit einteachen	8
7.2.1. NORMAL TEACH	9
7.2.2. MIN TEACH	9
7.2.3. Teachen bei Einsatzbereichen mit hoher Verschmutzungswahrscheinlichkeit (Staub, Dampf etc.)	9
7.3. Logikausgang	10
7.4. Ausrichthilfe	12
7.5. Schalterstellung bei Betrieb in Anwendung	14
7.5.1. RUN NORMAL	14
7.5.2. RUN ON-DELAY	14
7.5.3. RUN OFF-DELAY	15
7.6. Externes Teachen über Busklemme 	19
7.6.1. Externes Normal-Teachen	19
7.6.2. Externes Min-Teachen	19
<b>8. Wartungshinweise</b>	<b>19</b>
<b>9. Umweltgerechte Entsorgung</b>	<b>19</b>

## 1. Bestimmungsgemäße Verwendung

Das Steuergerät arbeitet zusammen mit den Lichtschranken SA250-xxx/EA250-xxx und vermeidet eine gegenseitige Beeinflussung der Sensoren.

## 2. Allgemeine Angaben zum Produkt

Das Steuergerät LV250xCT kann insgesamt 3 Lichtschranken des Typs EA 250/SA 250 überwachen. Durch Kaskadierung von bis zu 9 LV250xCT können bis zu 27 Einzelschranken genutzt werden. Je LV250xCT verlängert sich die Reaktionszeit um 2 ms. Die Reichweite beträgt 25 m.

Die Bedienung erfolgt weiterhin von lediglich einem dafür festzulegenden LV250xCT (Master), was die Bedienbarkeit sehr einfach gestaltet. Durch einen extern zugänglichen Teach-Eingang kann der Teach-Vorgang von einem externen Gerät ausgelöst werden. Ein Logik-Ausgang dient zur gleichzeitigen Überwachung aller Schranken. Ein spezieller Modus, „Schalterstellung 9“ MASK, ermöglicht die einfache Justierung der Schranken und Ausblendung nicht vorhandener oder verdeckter Schranken.

## 3. Sicherheitshinweise

- Diese Anleitung ist Teil des Produkts und während der gesamten Lebensdauer des Produkts aufzubewahren.
- Betriebsanleitung vor Gebrauch des Produkts sorgfältig durchlesen.
- Die Montage, Inbetriebnahme und Wartung des vorliegenden Produkts ist ausschließlich durch fachkundiges Personal auszuführen.
- Eingriffe und Veränderungen am Produkt sind nicht zulässig.
- Produkt bei Inbetriebnahme vor Verunreinigung schützen.
- DieKein Sicherheitsbauteil gemäß EU-Maschinenrichtlinie.

## 4. EG-Konformitätserklärung

Die EG-Konformitätserklärung finden Sie unter [www.wenglor.com](http://www.wenglor.com) im Download-Bereich des Produktes.



**RoHS**

## 5. Technische Daten LV250xCT EA250-xxx/SA250-xxx

Versorgungsspannung	18...30 V	Reichweite	15000 mm
Stromaufnahme (Ub = 24 V)	120 mA	max. zul. Fremdlicht	10000 Lux
Schaltfrequenz	250 Hz	Temperaturdrift	< 10 %
Ansprechzeit	4 ms	Temperaturbereich	-25...60 °C
Anzugs-/Abfallzeitverzögerung	50 ms	kurzschlussfest	ja
Temperaturdrift	< 10 %	verpolungssicher	ja
Temperaturbereich	-25...60 °C	überlastsicher	ja
Spannungsabfall Schaltausgang	< 2,5 V	Gehäusematerial	CuZn, vernickelt
Schaltstrom Schaltausgang	200 mA	Vollverguss	ja
Schaltstrom Fehlerausgang	200 mA	Schutzart	IP67
kurzschlussfest	ja	Anschlussart	Kabel
verpolungssicher	ja	Ausgangsfunktion	für Anschluss an Steuergerät LV250
überlastsicher	ja		
Teachmodus	NT, MT	passende	
kaskadierbar	ja	Befestigungstechnik-Nr.	<b>170</b>
Logik Ausgang	UND/ODER	Schutzklasse	III
externer Teach-Eingang	ja		
Einstellart	Teach-In		
Gehäusematerial	Kunststoff		
Schutzart	IP20		
Befestigung DIN-Schiene	35 mm		


### LV250xTC

Bestellnummer	LV250PCT	LV250NCT
PNP Öffner/Schließer umschaltbar	✓	
NPN Öffner/Schließer umschaltbar		✓

### EA250-xxx/SA250-xxx

Bestellnummer	Empfänger		Sender	
	EA250-P24	EA250-25M	SA250-P24	SA250-25M
Öffnungswinkel	8°		12°	
Kabellänge	6 m	25 m	6 m	25 m

## 5.1. Anschlussplan LV250xCT

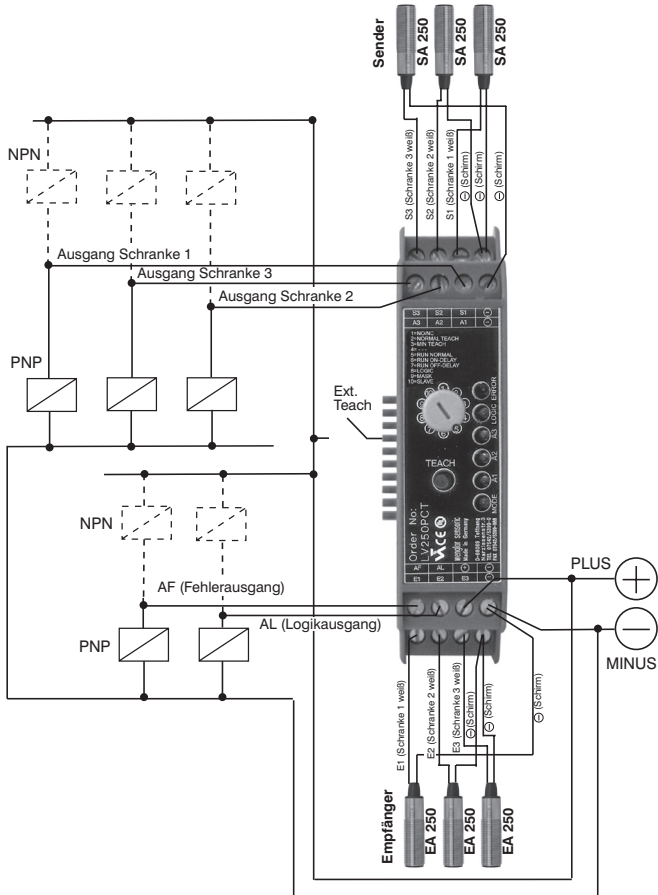


## 5.2. Anschlussplan SA250-xxx/EA250-xxx



SA250



 EA250




## 5.3. Abmessung/Bedienfeld

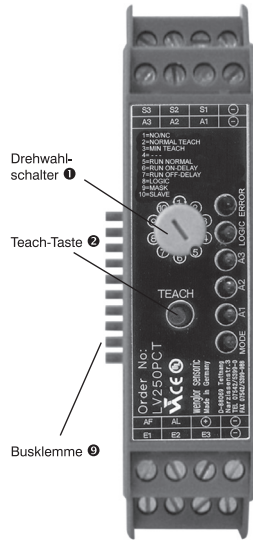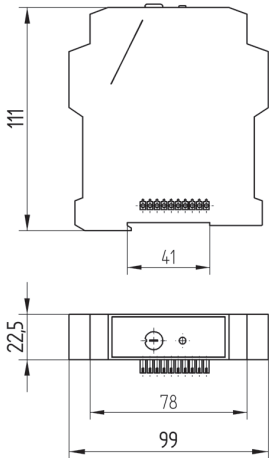

- Rot Error-LED ④
- Grün Logic-LED ⑤
- Gelb LED A3 ⑥
- Gelb LED A2 ⑦
- Gelb LED A1 ⑧
- Rot Mode-LED ⑨


## 6. Montagehinweise

### 6.1. Befestigung auf Trageschiene nach EN 50022


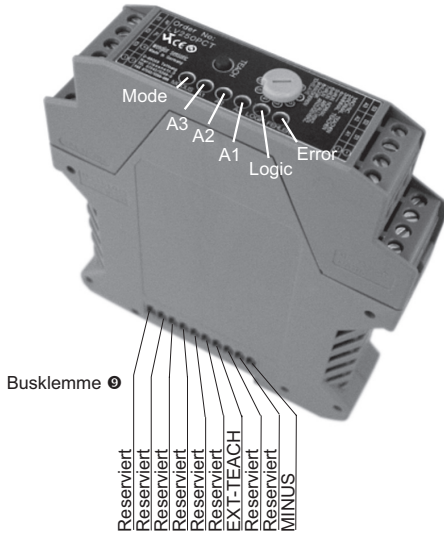


## 7. Einstellungen

 NO = hellschaltend




NC = dunkelschaltend

  

RUN = je nach Bedarf


- RUN NORMAL (5), Voreinstellung
- RUN ON-DELAY (6)
- RUN OFF-DELAY (7)

## 7.1. NO/NC Umschaltung (alle Ausgänge gemeinsam)

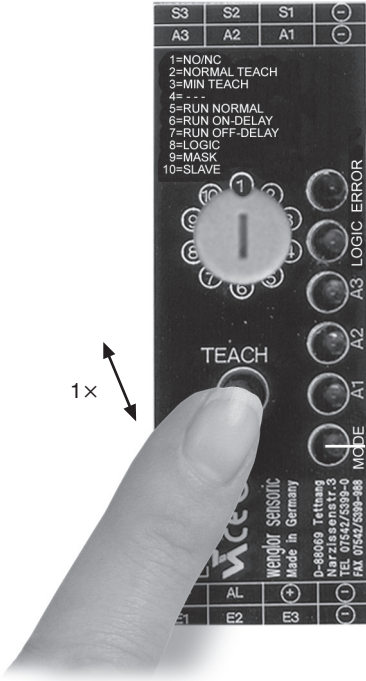

- Drehwahlschalter ❶ auf Stellung 1
- Teach-Taste ❷ 1 × drücken  
→ Mode LED ❸ leuchtet  
→ NO-Einstellung (Schließer)\*
- Teach-Taste ❷ 1 × drücken  
→ Mode LED ❸ ist aus  
→ NC-Einstellung (Öffner)
- Drehwahlschalter ❶ auf RUN

### Mode LED ❸

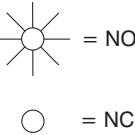

\* Voreinstellung

## 7.2. Empfindlichkeit einteachen

Beim Teachvorgang wird die optimale Empfindlichkeit der Einweglichtschranke(n) eingestellt. Es stehen drei Teach-Arten zur Verfügung bei denen die Empfindlichkeit unterschiedlich berechnet wird:

 
- NORMAL TEACH
- MIN TEACH
- Teachen bei Einsatzbereichen mit hoher Verschmutzungswahrscheinlichkeit



### 7.2.1. NORMAL TEACH

Erkennung von 50 % Signalpegel-Unterschied



- Drehwahlschalter ❶ auf Stellung 2
- kein Objekt im Lichtstrahl
- Teach-Taste ❷ 1× drücken
- Drehwahlschalter ❶ auf RUN



### 7.2.2. MIN TEACH

Erkennung von 10 % Signalpegel-Unterschied

 - Drehwahlschalter ❶ auf Stellung 3
- kein Objekt im Lichtstrahl
- Teach-Taste ❷ 1× drücken
- Drehwahlschalter ❶ auf RUN

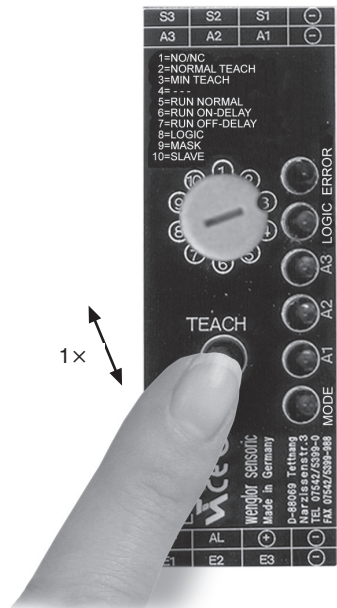


### 7.2.3. Teachen bei Einsatzbereichen mit hoher Verschmutzungswahrscheinlichkeit (Staub, Dampf etc.)


- Drehwahlschalter ❶ auf Stellung 3
- Unterbrechen der Lichtschranke durch ein absolut lichtundurchlässiges Material (Holz, Metall etc.)
- Teach-Taste ❷ 1× drücken
- Drehwahlschalter ❶ auf RUN

## 7.3. Logikausgang

- Drehwahlschalter ❶ auf Stellung 8
- Teach-Taste ❷ 1× drücken  
→ Mode LED ❸ leuchtet:  
UND verknüpft
- Teach-Taste ❷ 1× drücken  
→ Mode LED ❸ ist aus:  
ODER verknüpft
- Drehwahlschalter ❶ auf RUN


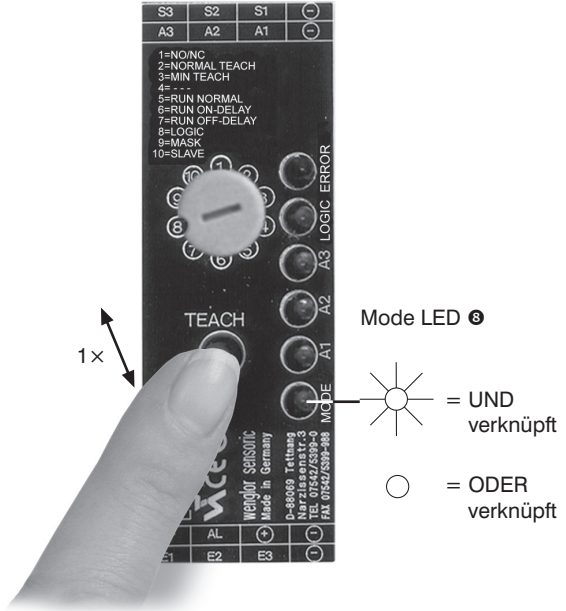


### ODER verknüpft

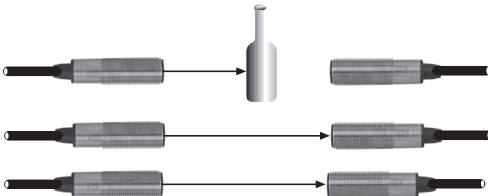


### Logikausgang


 

### Logic-LED ❹

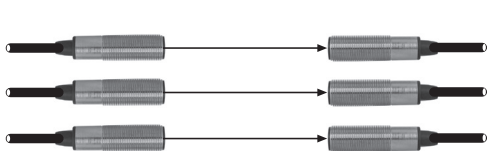

UND verknüpft

Logikausgang

 
Logic-LED 

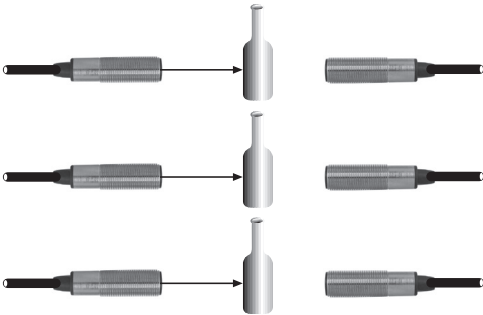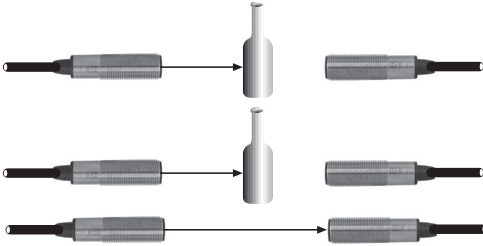


## 7.4. Ausrichthilfe

1. Programmschritt: Modus aktivieren

- Drehwahlschalter ❶ auf Stellung 9
- Teach-Taste ❷ 1 × drücken
  - Mode-LED ❸ blinkt
  - LED A1 ❹, LED A2 ❺, LED A3 ❻ leuchten: Schranke ausgerichtet
  - LED A1 ❹, LED A2 ❺, LED A3 ❻ aus: Schranke nicht ausgerichtet oder nicht angeschlossen
- Schranken ausrichten

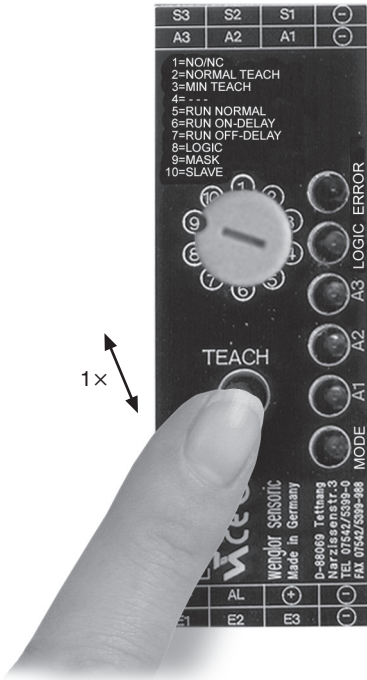

Lichtschanke ausrichten bis zugehörige Ausgangs-LED leuchtet (A1, A2, A3)

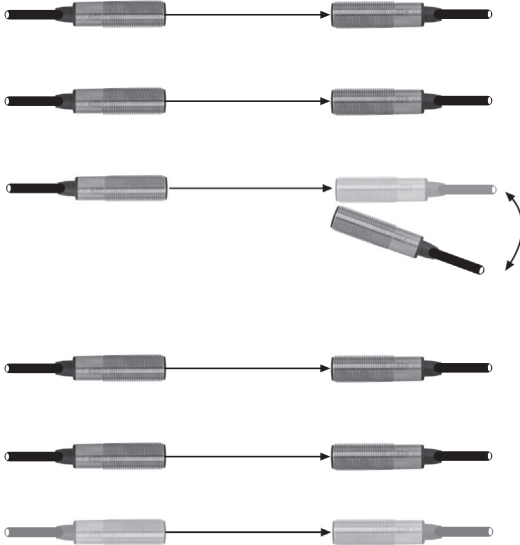

LED A1 ⑦

LED A2 ⑥

LED A3 ⑤

LED A1 ⑦

LED A2 ⑥

LED A3 ⑤



- Teach-Taste ② 1× drücken  
→ Mode-LED ③ erlischt
- Nicht ausgerichtete LED A1 ⑦, LED A2 ⑥, LED A3 ⑤ blinkt
- Drehwahlschalter ① auf RUN

1x

LED A3 ⑤  
LED A2 ⑥  
LED A1 ⑦  
Mode LED ③

	Ausgerichtet	nicht ausgerichtet oder verdeckt
LED A1 ⑦		
LED A2 ⑥		
LED A3 ⑤		


## 7.5. Schalterstellung bei Betrieb in Anwendung

### 7.5.1. RUN NORMAL




- Drehwahlschalter ❶ auf Stellung 5
- Teach-Taste ❷ ist verriegelt

### 7.5.2. RUN ON-DELAY

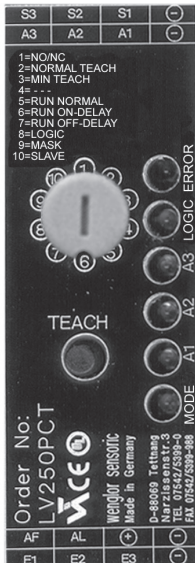


- Drehwahlschalter ❶ auf Stellung 6  
 → Ausgänge zeitverzögert
- Teach-Taste ❷ ist verriegelt

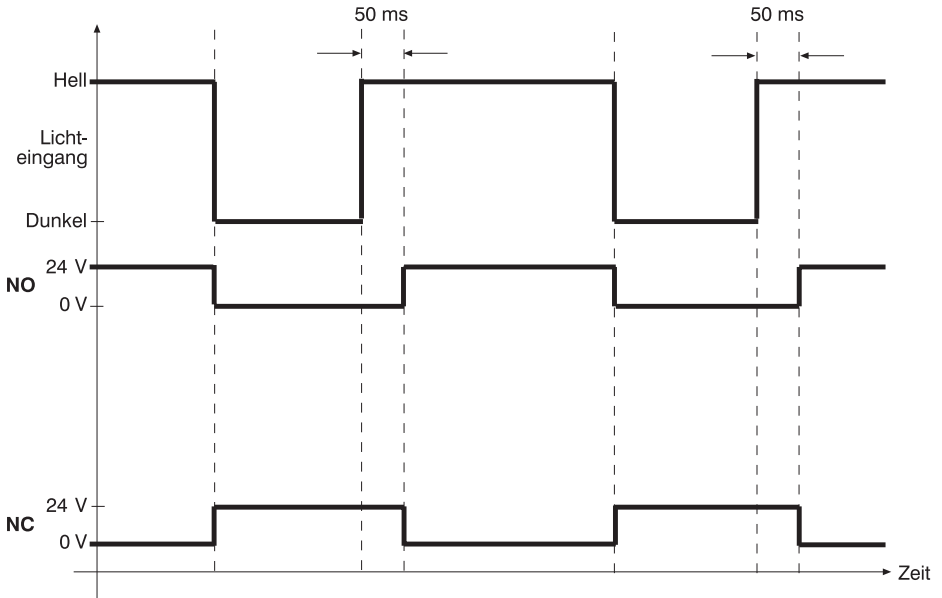

### 7.5.3. RUN OFF-DELAY




- Drehwahlschalter ➊ auf Stellung 7  
→ Ausgänge zeitverzögert
- Teach-Taste ➋ ist verriegelt

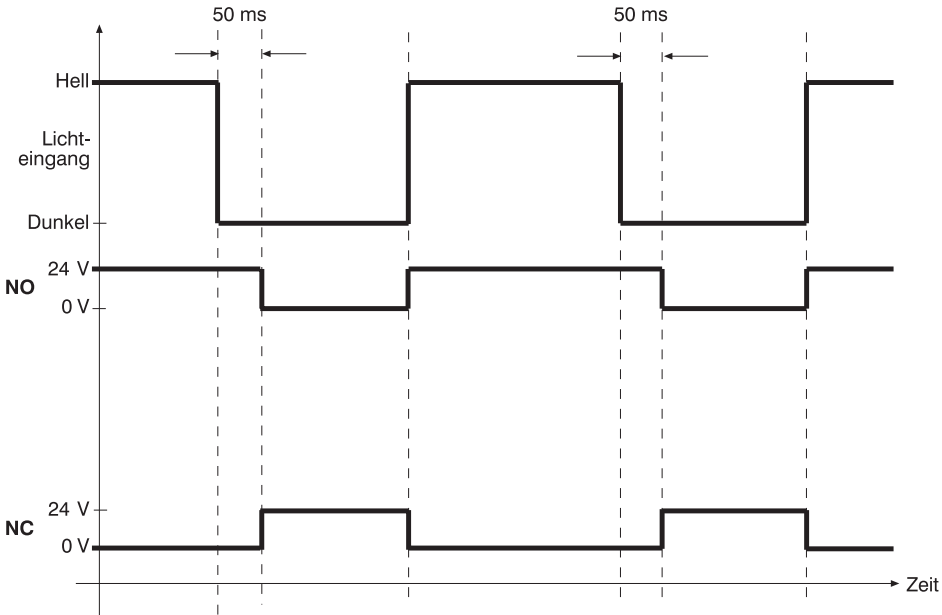




## Kaskadieren


- Stromversorgung unterbrechen
- Steuergeräte kaskadieren (siehe Seite 18)
- Bei EINEM Steuergerät Drehwahlschalter ➊ auf Stellung 1...9 → Master
- Bei ALLEN anderen Steuergeräten Drehwahlschalter ➊ auf Stellung 10 → Slaves
- Stromversorgung am Master anschließen. Die Slaves erhalten ihre Stromversorgung über die Busklemme vom Master.
  - ➔ Bedienfelder der Slaves (auf Schalterstellung 10) sind deaktiviert
  - ➔ Bedienfeld des Masters (auf Schalterstellung 1...9) ist weiterhin aktiv, die Funktionen des Masters werden auf die Slaves übertragen

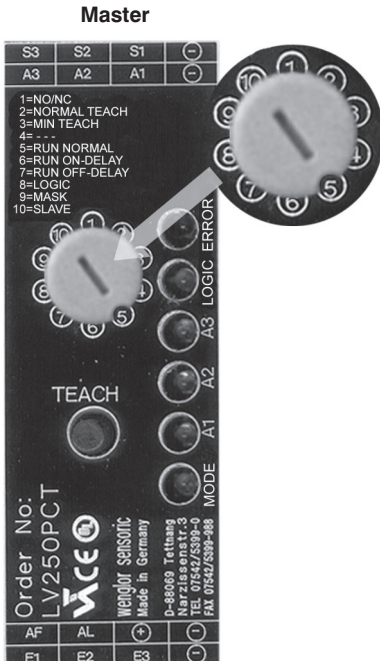


Geräte sind über die Busklemme  verbunden

nur die Bedienelemente  
des Masters haben Funktion


Master

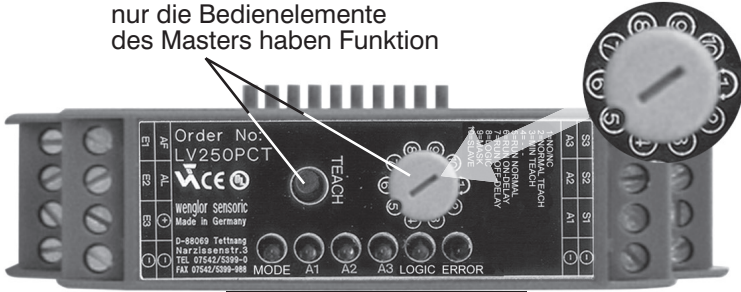

Slave 1

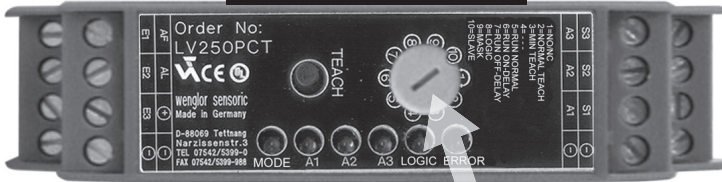


Slave 2

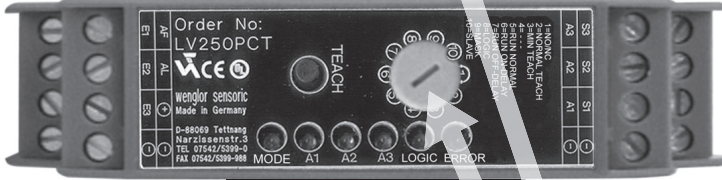

Slave 3



Max.  
Slave 8

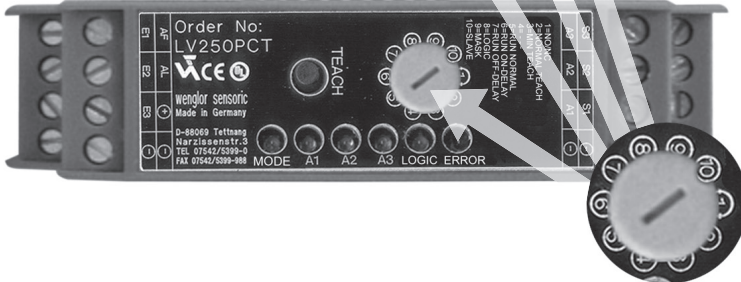

## 7.6. Externes Teachen über Busklemme ⑨

### Initialisierung

**Einmalig** muss vor einem externen Teach-Vorgang das gewünschte Teach-Verfahren am Sensor eingestellt werden.

#### 7.6.1. Externes Normal-Teachen

(Initialisierung Normal-Teach: Drehwahlschalter ❶ auf Stellung 2 Teach-Taste ❷ drücken Drehwahlschalter ❶ auf RUN)

- Drehwahlschalter ❶ auf RUN
- 10 V...30 V auf Teach-Eingang legen (bezogen auf Minuspol, min. 0,3 sec lang)
  - Mode-LED ❸ blinkt
- Spannung am Teach-Eingang wegnehmen
  - Teach-Vorgang erfolgt
  - Mode-LED ❸ hört auf zu blinken

#### 7.6.2. Externes Min-Teachen

(Initialisierung Min-Teach: Drehwahlschalter ❶ auf Stellung 3 Teach-Taste ❷ drücken Drehwahlschalter ❶ auf RUN)

- Drehwahlschalter ❶ auf Run
- 10 V...30 V auf Teach-Eingang legen (bezogen auf Minuspol, min. 0,3 sec lang)
  - Mode-LED ❸ blinkt
- Spannung am Teach-Eingang wegnehmen
  - Teach-Vorgang erfolgt
  - Mode-LED ❸ hört auf zu blinken


## 8. Wartungshinweise

- Dieser wenglor Sensor ist wartungsfrei.
- Eine regelmäßige Reinigung der Linse und des Displays sowie eine Überprüfung der Steckerverbindungen wird empfohlen.
- Verwenden Sie zur Reinigung des Sensors keine Lösungsmittel oder Reiniger, die das Gerät beschädigen könnten.

## 9. Umweltgerechte Entsorgung

Die wenglor sensoric gmbh nimmt unbrauchbare oder irreparable Produkte nicht zurück. Bei der Entsorgung der Produkte gelten die jeweils gültigen länderspezifischen Vorschriften zur Abfallentsorgung.

## Table of Contents

<b>1. Proper Use</b>	<b>21</b>
<b>2. General information</b>	<b>21</b>
<b>3. Safety Precautions</b>	<b>21</b>
<b>4. Declaration of Conformity</b>	<b>21</b>
<b>5. Technical Data LV250xCT</b>	<b>22</b>
<b>EA250-xxx/SA250-xxx</b>	<b>22</b>
5.1. Wiring Diagram LV250xCT	23
5.2. Wiring Diagram SA250-xxx/EA250-xxx	24
5.3. Dimensions/Control Panel	24
<b>6. Mounting Instructions</b>	<b>25</b>
6.1. Apply to DIN rail 35 mm according to EN 50022	25
<b>7. Settings</b>	<b>25</b>
7.1. NO/NC Selection (applies to all outputs)	26
7.2. Teaching In the Sensitivity	27
7.2.1. NORMAL TEACH	27
7.2.2. MIN TEACH	28
7.2.3. TEACH-IN in areas with high probability of contamination (dust, damp, aso.)	28
7.3. Logic Output	28
7.4. Alignment Tool	30
7.5. Switch Position during Operation within the Application	32
7.5.1. RUN NORMAL	32
7.5.2. RUN ON-DELAY	33
7.5.3. RUN OFF-DELAY	34
7.6. Cascading	35
7.7. External Teach-In via the Bus Terminal 	37
7.7.1. Normal External Teach-In	37
7.7.2. Minimal External Teach-In	37
<b>8. Maintenance Instructions</b>	<b>37</b>
<b>9. Proper Disposal</b>	<b>37</b>

## 1. Proper Use

The controller works together with the light barriers SA250/EA250 and avoids a mutual influence of the sensors.

## 2. General information

The LV250xCT light barrier control unit can monitor at total of 3 type EA250-xxx/SA250-xxx light barriers.

Up to 27 individual light barriers can be used by cascading up to 9 LV250xCT control units.

Each LV250xCT prolongs reaction time by 2 ms. The sensing range is 25 m.

In order to assure user-friendly operation, the entire system is controlled from a single, designated LV250x-CT control unit (master). The teach-in process can be triggered by an external device via the externally accessible teach-in input. A logic output is provided for simultaneous monitoring of all light barriers. A special mode in switch position 9 MASK allows for easy adjustment of the light barriers, as well as the suppression of non-existent or obstructed light barriers.

## 3. Safety Precautions

- This operating instruction is part of the product and must be kept during its entire service life.
- Read this operating instruction carefully before using the product.
- Installation, start-up and maintenance of this product has only to be carried out by trained personal.
- Tampering with or modifying the product is not permissible.
- Protect the product against contamination during start-up.
- Not a safety component in accordance with the EU Machinery Directive.

## 4. Declaration of Conformity

The EC declaration of conformity can be found on our website at [www.wenglor.com](http://www.wenglor.com) in download area.



RoHS

## 5. Technical Data LV250xCT

Supply Voltage	18...30 V
Current Consumption (U <sub>b</sub> = 24 V)	120 mA
Switching Frequency	250 Hz
Response Time	4 ms
ON-/OFF-Delay	50 ms
Temperature Drift	< 10 %
Temperature Range	-25...60 °C
Switching Output Voltage Drop	< 2,5 V
Switching Output/ Switching Current	200 mA
Error Output/Switching Current	200 mA
Short-Circuit Protection	yes
Reverse Polarity Protection	yes
Overload Protection	yes
Teach Mode	NT, MT
Cascadable	yes
Logic Output	AND/OR
External Teach Input	yes
Adjustment	Teach-In
Housing	Plastic
Degree of Protection	IP20
DIN-Rail mounting	35 mm

## EA250-xxx/SA250-xxx

Range	15000 mm
max. Ambient Light	10000 Lux
Temperature Drift	< 10 %
Temperature Range	-25...60 °C
Short Circuit Protection	yes
Reverse Polarity Protection	yes
Overload Protection	yes
Housing	CuZn, nickel-plated
Full Encapsulation	yes
Degree of Protection	IP67
Connection	Prewired
Output function	For connection to LV250 control module
Suiting	
Mounting Technology No.	<b>170</b>
Protection Class	III


### LV250xTC

Order number	LV250PCT	LV250NCT
PNP NO/NC switchable	✓	
NPN NO/NC switchable		✓


### EA250-xxx/SA250-xxx

Order number	Receiver		Emitter	
	EA250-P24	EA250-25M	SA250-P24	SA250-25M
Opening Angle	8°		12°	
Cable Length	6 m	25 m	6 m	25 m



## 5.1. Wiring Diagram LV250xCT

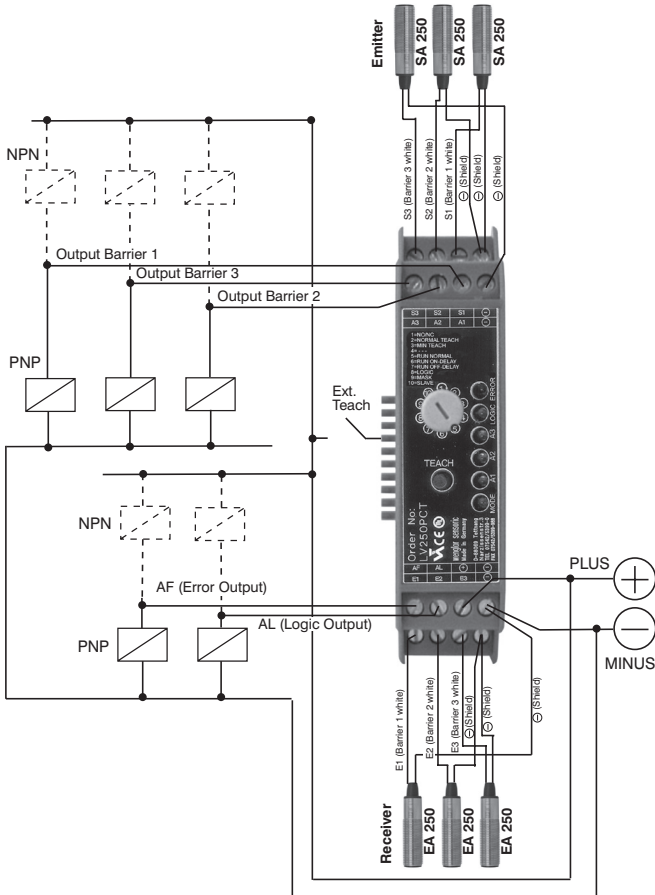

## 5.2. Wiring Diagram SA250-xxx/EA250-xxx

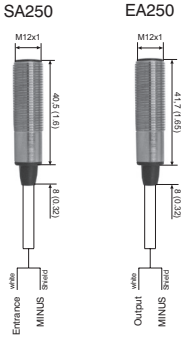

## 5.3. Dimensions/Control Panel

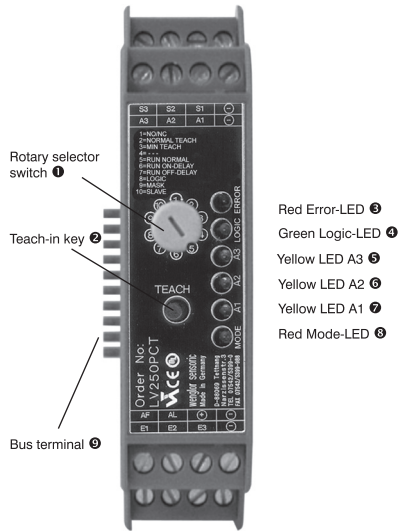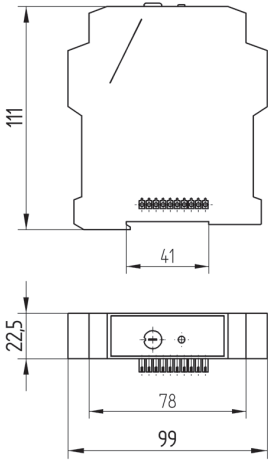


- Red Error-LED ③
- Green Logic-LED ④
- Yellow LED A3 ⑤
- Yellow LED A2 ⑥
- Yellow LED A1 ⑦
- Red Mode-LED ⑧




## 6. Mounting Instructions

### 6.1. Apply to DIN rail 35 mm according to EN 50022


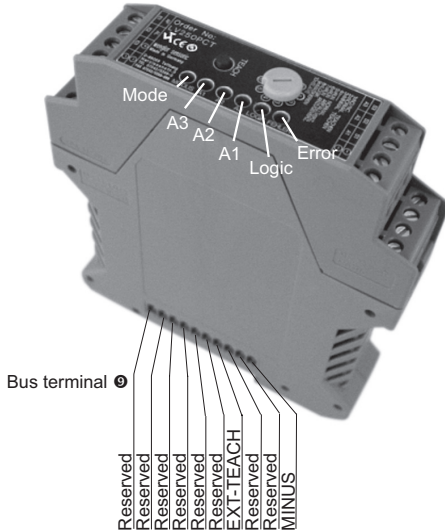


## 7. Settings

 NO = normally open




NC = normally closed

  


RUN = as required

- RUN NORMAL (5), Default Setting
- RUN ON-DELAY (6)
- RUN OFF-DELAY (7)

## 7.1. NO/NC Selection (applies to all outputs)

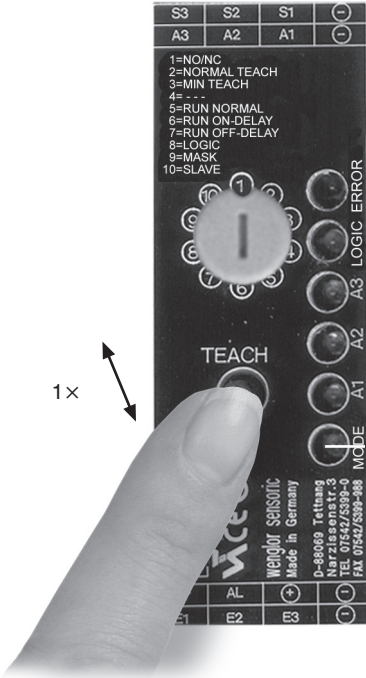

- Turn the rotary selector switch ❶ to position 1
- Press the teach-in key ❷ once
  - Mode LED ❸ lights up
  - NO setting\*
- Press the teach-in key ❷ once
  - Mode LED ❸ goes out
  - NC setting
- Turn the rotary selector switch ❶ to RUN

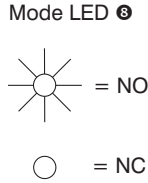

\* Default Setting

## 7.2. Teaching In the Sensitivity



By means of the Teach-In procedure the ideal sensitivity of the Through Beam Sensors is adjusted. Three Teach-In modes are available, each calculates the sensitivity in a different way.

- NORMAL TEACH
- MIN TEACH
- TEACH-IN in areas with high probability of contamination

### 7.2.1. NORMAL TEACH

Recognition of signal level differences of 50 %


- Turn the rotary selector switch **1** to position 2
- Do not position an object within the light beam
- Press the teach-in key **2** once
- Turn the rotary selector switch **1** to RUN

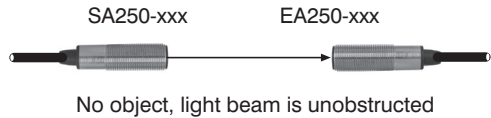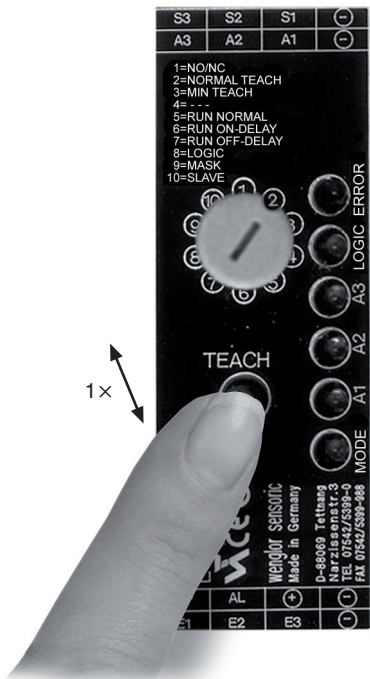

## 7.2.2. MIN TEACH


Recognition of signal level differences of 10 %

 - Turn the rotary selector switch ❶ to position 3
- Do not position an object within the light beam
- Press the teach-in key ❷ once
- Turn the rotary selector switch ❶ to RUN




## 7.2.3. TEACH-IN in areas with high probability of contamination (dust, damp, aso.)

- Turn the rotary selector switch ❶ to position 3
- Break the Through Beam Sensor with a light-tight material (wood, metal, aso.)
- Press the teach-in key ❷ once
- Turn the rotary selector switch ❶ to RUN

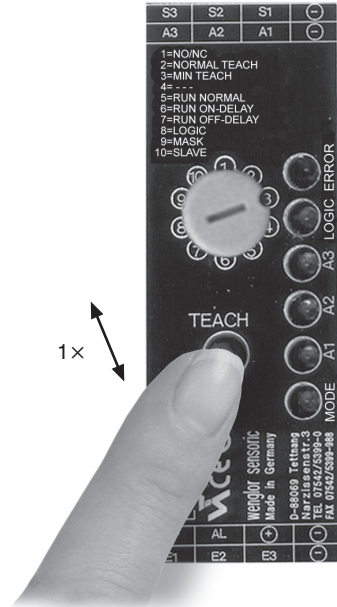


## 7.3. Logic Output




- Turn the rotary selector switch ❶ to position 8
- Press the Teach-In key ❷ once  
→ Mode LED ❸ lights up:  
AND logic
- Press the Teach-In key ❷ once  
→ Mode LED ❸ goes out:  
OR logic
- Turn the rotary selector switch ❶ to RUN

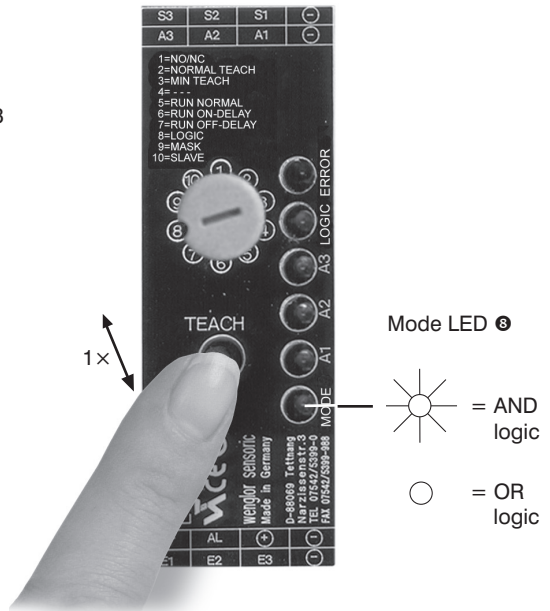

OR logic


Logic output


 

Logic-LED 

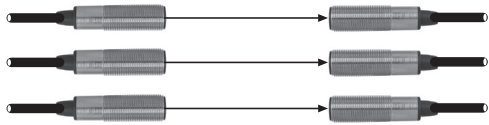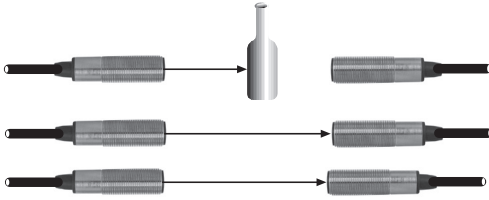

AND logic

Logic output

 
Logic-LED 

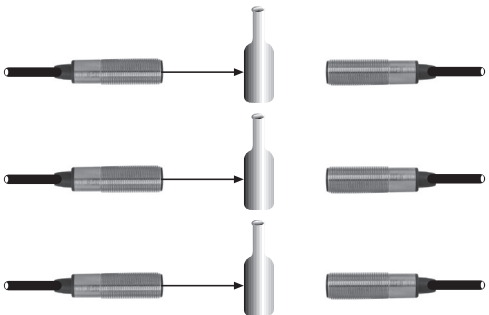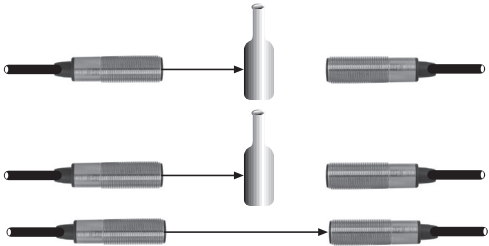

## 7.4. Alignment Tool

1. Programming step 1: activate alignment mode

- Turn the rotary selector switch ① to position 9
- Press the teach-in key ② once
  - Mode-LED ③ blinks
  - LED A1 ⑤, LED A2 ⑥, LED A3 ⑦ light up: light barrier properly aligned
  - LED A1 ⑤, LED A2 ⑥, LED A3 ⑦ off: light barrier not properly aligned or not connected
- Align light barriers

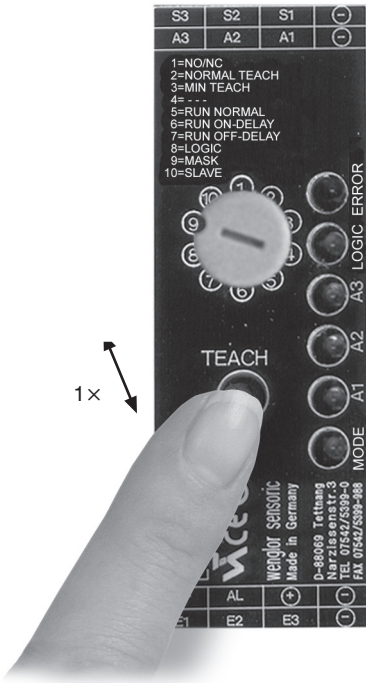

Align the light barrier until the appropriate output LED lights up (A1, A2, A3)



LED A1 ⑥



LED A2 ⑥



LED A3 ⑤



LED A1 ⑥



LED A2 ⑥



LED A3 ⑤



- Press the Teach-In key ② once  
→ Mode-LED ③ goes out
- Not aligned LED A1 ⑦, LED A2 ⑥, LED A3 ⑤ blinks
- Turn the rotary selector switch ① to RUN

1x

LED A3 ⑤

LED A2 ⑥


LED A1 ⑦

Mode LED ③ ○

	Aligned	Not aligned or covered
LED A1 ⑤		
LED A2 ⑥		
LED A3 ⑤		

## 7.5. Switch Position during Operation within the Application


### 7.5.1. RUN NORMAL

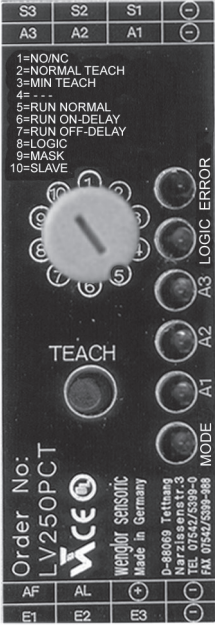


- Turn the rotary selector switch ❶ to position 5
- The teach-in key ❷ is disabled




### 7.5.2. RUN ON-DELAY

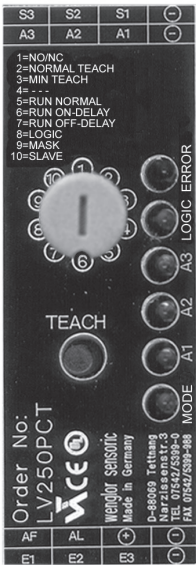


- Turn the rotary selector switch ❶ to position 6  
 → Outputs are ON-DELAYED
- The Teach-In key ❷ is disabled

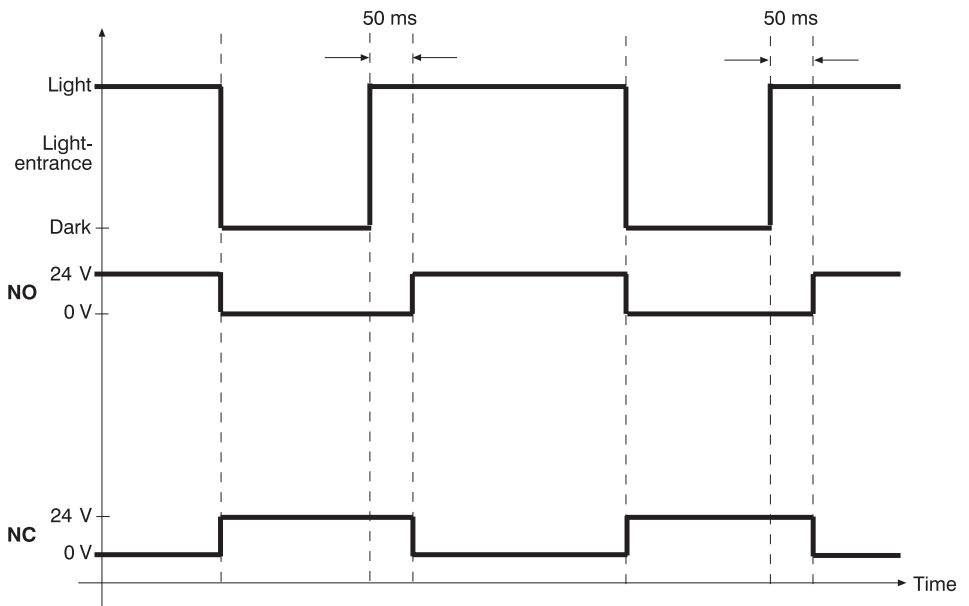

## 7.5.3. RUN OFF-DELAY

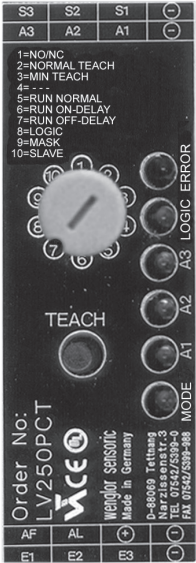


- Turn the rotary selector switch ① to position 7  
→ Outputs are OFF-DELAYED
- The Teach-In key ② is disabled

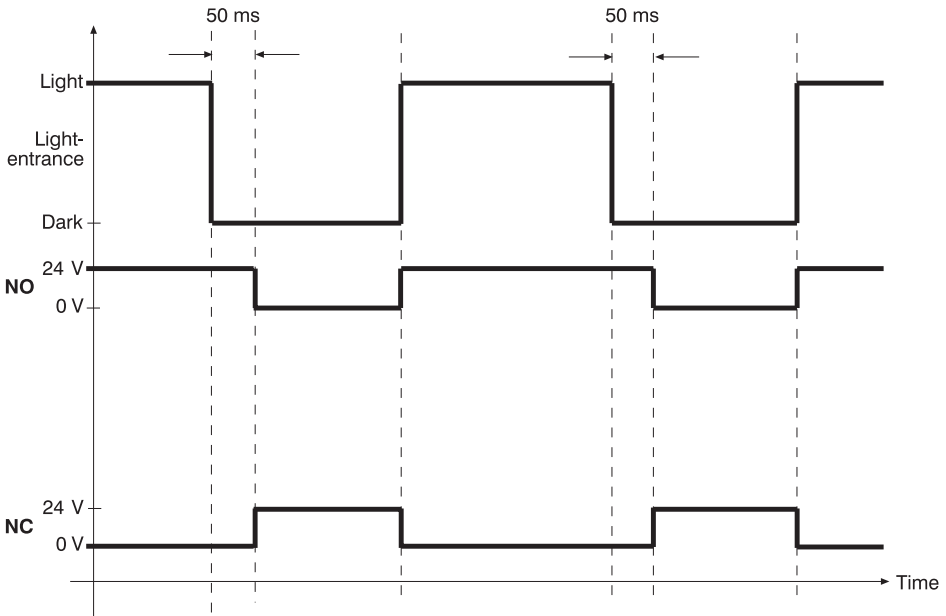


## 7.6. Cascading

- Disconnect the power supply
- Cascade the control units (see page 31)
- Turn the rotary selector switch ❶ to position 1...9 at ONE of the control units → Master
- Turn the rotary selector switch ❶ to position 10 at ALL OTHER control units → Slaves
- Connect the master to power supply. The slaves are supplied with power from the bus terminal at the master.
  - The control panels at the slaves are disabled (switch position 10)
  - The control panel at the master remains active (switch in RUN position), and the master functions are imposed upon the slaves

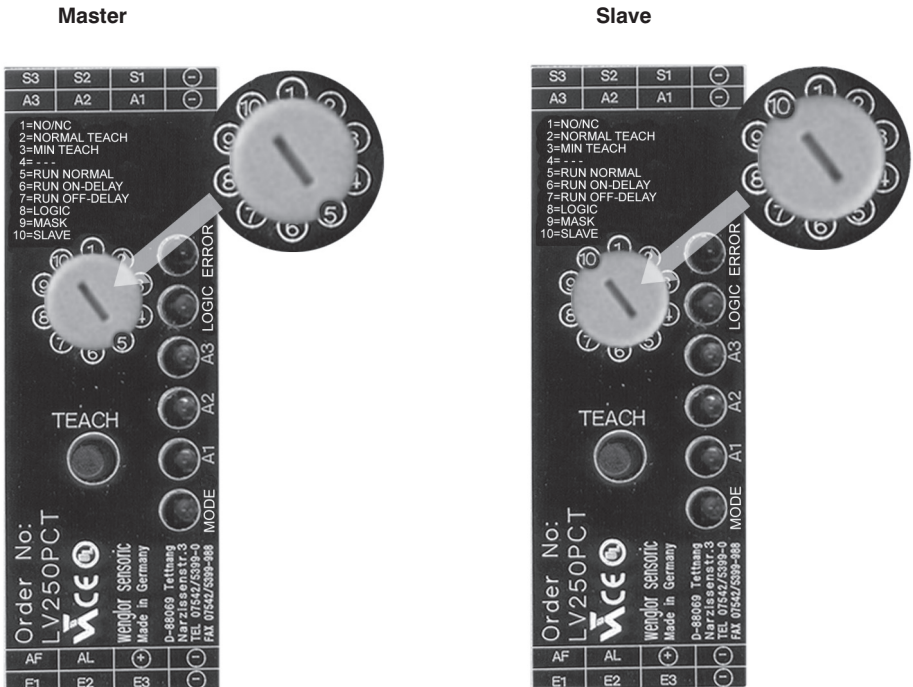

Devices are connected via the bus terminal ⑨

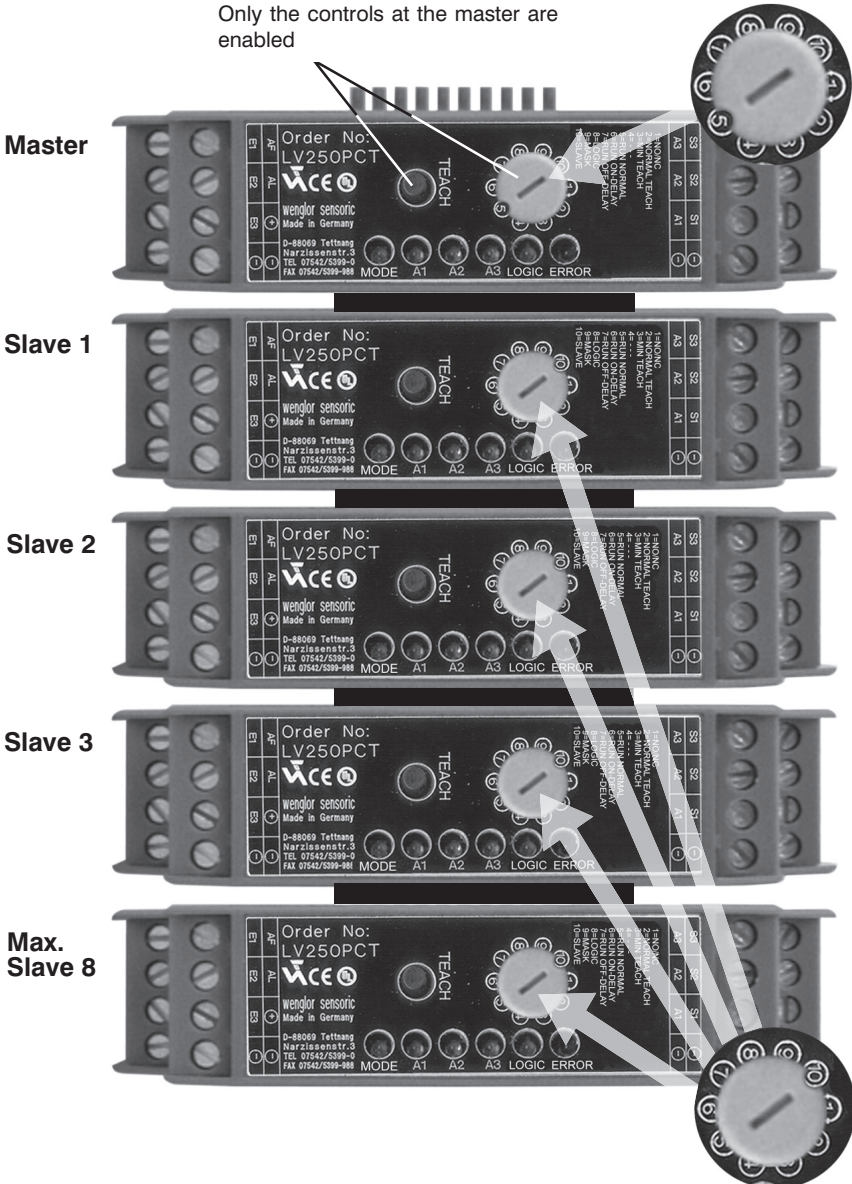

## 7.7. External Teach-In via the Bus Terminal ⑨

### Initialisation

Before starting external Teach-In, the desired Teach-In method must be selected, once only, at the sensor.

#### 7.7.1. Normal External Teach-In

(Initialize normal teach-in: Turn the rotary selector switch ❶ to position 2  
Press the Teach-In key ❷  
Turn the rotary selector switch ❶ to RUN)

- Turn the rotary selector switch ❶ to RUN
- Apply 10 V...30 V to the teach-in input (with reference to minus pole for at least 0,3 sec.)
  - Mode-LED ❸ blinks
- Disconnect voltage from the Teach-In input
  - Teach-in sequence complete
  - Mode-LED ❸ stops blinking

#### 7.7.2. Minimal External Teach-In

(Initialize minimal teach-in: Turn the rotary selector switch ❶ to position 3  
Press the Teach-In key ❷  
Turn the rotary selector switch ❶ to RUN)

- Turn the rotary selector switch ❶ to RUN
- Apply 10 V...30 V to the teach-in input (with reference to minus pole for at least 0,3 sec.)
  - Mode-LED ❸ blinks
- Disconnect voltage from the Teach-In input
  - Teach-in sequence complete
  - Mode-LED ❸ stops blinking

## 8. Maintenance Instructions

- This wenglor sensor is maintenance-free.
- It is advisable to clean the lens and the display, and to check the plug connections at regular intervals.
- Do not clean with solvents or cleansers which could damage the device.

## 9. Proper Disposal

wenglor sensoric gmbh does not accept the return of unusable or irreparable products. Respectively valid national waste disposal regulations apply to product disposal.