











Model Number


OBE1500-R2F-SE2-0,2M-V31-L

Laser thru-beam sensor with 0.2 m fixed cable and M8 plug, 4-pin


Features


- Very flat design for direct mounting without mounting bracket
- DuraBeam Laser Sensors durable and employable like an LED
- High detection ranges achievable
- TEACH-IN
- Detection of small parts or flat objects from 0.3 mm

Dimensions

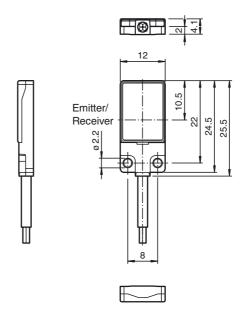

Electrical connection

 

 

Pinout

Wire colors in accordance with EN 60947-5-2



1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)

Technical data System components Emitter

OBE1500-R2F-S-0,2M-V31-L OBE1500-R2F-E2-0,2M-V31-L

General specifications

Effective detection range 0 1500 mm

Threshold detection range 2100 mm

LASER LIGHT Light source

modulated visible red light, 680 nm Light type

Laser nominal ratings

LASER LIGHT, DO NOT STARE INTO BEAM

Laser class 680 nm Wave length Beam divergence > 5 mrad Pulse length approx. 3 µs Repetition rate approx. 16.6 kHz max. pulse energy 8 nJ

Angle deviation approx. 0.5 ° typ. starts from 0.7 mm; typ. from 0.3 mm (after teach-in) Object size

Diameter of the light spot approx. 20 mm at a distance of 1.5 m

Angle of divergence approx. 1 Optical face frontal

EN 60947-5-2: 25000 Lux Ambient light limit

Functional safety related parameters

MTTF_d 806 a Mission Time (T_M) 20 a 0 % Diagnostic Coverage (DC)

Indicators/operating means

Operation indicator LED green, statically lit Power on , short-circuit : LED green

flashing (approx. 4 Hz)

Function indicator Receiver: LED yellow, lights up when light beam is free, flashes

when falling short of the stability control; OFF when light beam

is interrupted

Electrical specifications

12 ... 24 V Operating voltage U_B No-load supply current < 10 mA Protection class Ш

Input

Test input Test of switching function at 0 V

Switching threshold Teach-In input

Output

Switching type NO contact / dark on

Signal output 1 PNP output, short-circuit protected, reverse polarity protected,

open collector

Switching voltage max. 30 V DC Switching current max. 50 mA, resistive load

Voltage drop ≤ 1.5 V DC Switching frequency approx. 2 kHz Response time 250 us

Conformity

Product standard EN 60947-5-2 Laser safety EN 60825-1:2007

Ambient conditions

-10 ... 60 °C (14 ... 140 °F) Ambient temperature Storage temperature -20 ... 70 °C (-4 ... 158 °F)

Mechanical specifications

Housing width 12 mm Housing height 25.5 mm 4.1 mm Housing depth

Degree of protection IP67 Connection 200 mm fixed cable with 4-pin, M8x1 connector

Material

PC (Polycarbonate) and Stainless steel Housing

Optical face РММА Cable **PUR**

Mass approx. 10 g Per sensor

Tightening torque, fastening screws 0.25 Nm Cable length 200 mm

Approvals and certificates

E87056, cULus Recognized, Class 2 Power Source **UL** approval CCC approval CCC approval / marking not required for products rated ≤36 V

Laserlabel



CLASS 1 LASER PRODUCT

IEC 60825-1: 2007 certified. Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50. dated June 24, 2007

CLASS 1 LASER PRODUCT

IEC 60825-1: 2007 certified. Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

Accessories

V31-GM-2M-PUR

Female cordset single-ended, M8, 4-pin, PUR cable

V31-WM-2M-PUR

Female cordset single-ended, M8, 4-pin, PUR cable


Other suitable accessories can be found at www.pepperl-fuchs.com





FDA approval

IEC 60825-1:2007 Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

Curves/Diagrams

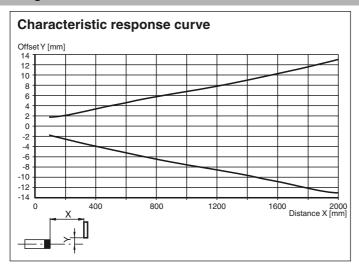

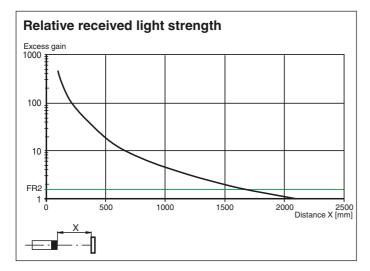

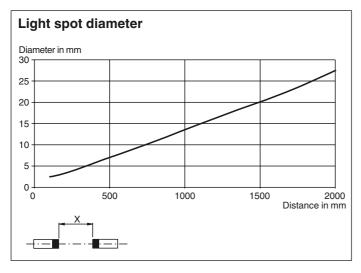

Teach-In Methods

 
The thru-beam sensor enables the switching points to be taught in for optimum adaptation to specific applications. This eliminates the need for additional components such as apertures.

The sensitivity of the thru-beam sensor can be adjusted using three Teach-in methods:

Position Teach

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to an optimum value
- The signal threshold is set to a minimum



Recommended application:

This method enables minuscule particles in the beam path to be detected, and provides exceptional positioning accuracy.


Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.

 
- Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver.
 The green and yellow LED indicators flash simultaneously at 2.5 Hz
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver.
 The green and yellow LED indicators flash alternately at 2.5 Hz
- 3. The end of the Teach-in process is indicated when the green LED indicator lights up static and yellow LED blinks.

Two-Point Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- · The gain is set to an optimum value
- The signal threshold is set in the center between the two taught signal values

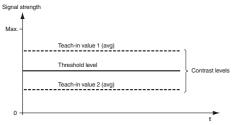





- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver.
 The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 3. Position the object in the beam path.
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver.
 The green and yellow LED indicators flash alternately at 2.5 Hz
- 5. The end of the Teach-in process is indicated when the green LED indicator lights up static.

Maximum Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

 - · The gain is set to a maximum
- The signal threshold is set to a minimum

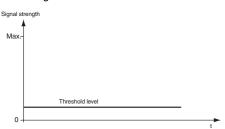



Recommended application:

Enables an object to be detected with a high excess gain. This can be useful if there is severe environmental contamination or to achieve long operating times.

Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.

- 6. Cover the receiver or transmitter.
- 7. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 8. Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 9. The end of the Teach-in process is indicated when the green LED indicator lights up static.

Laser notice laser class 1

- The irradiation can lead to irritation especially in a dark environment. Do not point at people!
- Maintenance and repairs should only be carried out by authorized service personnel!
- Attach the device so that the warning is clearly visible and readable.
- The warning accompanies the device and should be attached in immediate proximity to the device.
- Caution Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation
 exposure.

4