# Thru-beam sensor

# OBE500-R2F-SE2-Y253562



c SL us CE


## **Model Number**

## OBE500-R2F-SE2-Y253562

Thru-beam sensor (pair) with 2 m fixed cable

## **Features**


- Very flat design for direct mounting ٠ without mounting bracket
- TEACH-IN ٠
- Detection of partially transparent • objects by teach-in
- Very bright, highly visible light spot •

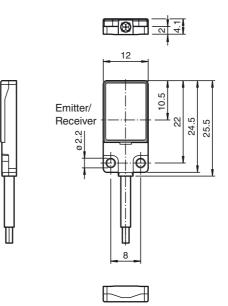

## **Electrical connection**



 **Dimensions** 





Pepperl+Fuchs Group www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com **EPPPERL+FUCHS** 1

### Other suitable accessories can be found at www.pepperl-fuchs.com

Technical data		
System components		
Emitter		OBE500-R2F-S
Receiver		OBE500-R2F-E2-Y813035
General specifications		
Effective detection range		0 500 mm
Threshold detection range		700 mm
Light source		LED
Light type		modulated visible red light, 630 nm
LED risk group labelling		exempt group
Angle deviation		approx. 2 °
Object size		typ. starts from 1.5 mm
Diameter of the light spot		approx. 90 mm at a distance of 500 mm
Angle of divergence Optical face		approx. 5 ° frontal
Ambient light limit		EN 60947-5-2 : 25000 Lux
Functional safety related param	otore	LN 00347-3-2 . 23000 Lux
MTTF <sub>d</sub>	eleis	806 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		0%
Indicators/operating means		
Operation indicator		LED green, statically lit Power on , short-circuit : LED green
Function indicator		flashing (approx. 4 Hz) Receiver: LED yellow, lights up when light beam is free, flashes
		when falling short of the stability control ; OFF when light beam is interrupted
Electrical specifications		
Operating voltage	UB	10 30 V DC
No-load supply current	I <sub>0</sub>	< 10 mA
Protection class		III
Input		
Test input		Test of switching function at 0 V
Switching threshold		Teach-In input
Output		
Switching type		NO contact / dark on
Signal output		1 PNP output, short-circuit protected, reverse polarity protected, open collector
Switching voltage		max. 30 V DC
Switching current		max. 50 mA , resistive load $\leq$ 1.5 V DC
Voltage drop Switching frequency	U <sub>d</sub> f	approx. 1 kHz
Response time	•	500 μs
Conformity		
Product standard		EN 60947-5-2
Ambient conditions		
Ambient temperature		-20 60 °C (-4 140 °F)
Storage temperature		-20 70 °C (-4 158 °F)
Mechanical specifications		
Housing width		12 mm
Housing height		25.5 mm
Housing depth		4.1 mm
Degree of protection		IP67
Connection		2 m fixed cable
Material		
Housing		PC (Polycarbonate) and Stainless steel
Optical face		PMMA
Cable		PUR
Mass		approx. 20 g Per sensor
Tightening torque, fastening screw Cable length	wS	0.25 Nm 2 m
Approvals and certificates		
UL approval		E87056, cULus Recognized, Class 2 Power Source
CCC approval		E67056, COLUS Recognized, Class 2 Power Source CCC approval / marking not required for products rated $\leq$ 36 V
		approvar/ marking not required for products rated ≤30 V


Pepperl+Fuchs Group www.pepperl-fuchs.com


2


Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

### **Curves/Diagrams**

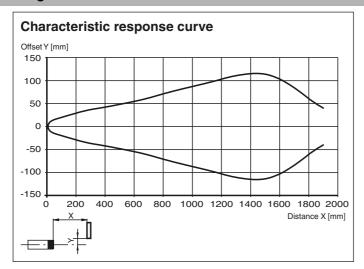

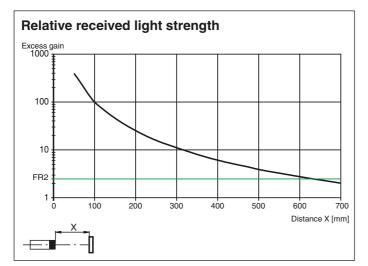

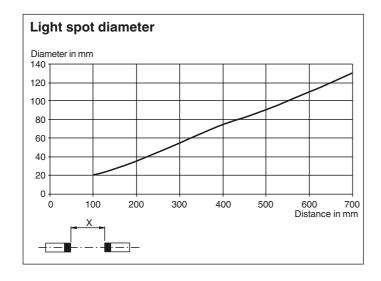

# **Teach-In Methods**

The thru-beam sensor enables the switching points to be taught in for optimum adaptation to specific applications. This eliminates the need for additional components such as apertures.

The sensitivity of the thru-beam sensor can be adjusted using three Teach-in methods:

### **Position Teach**

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to an optimum value
- The signal threshold is set to a minimum

Release date: 2019-11-15 04:13

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

gnal st	irength	
Opt		
	Threshold level	



#### Recommended application:

s

This method enables minuscule particles in the beam path to be detected, and provides exceptional positioning accuracy. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.

- 1. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 2. Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 3. The end of the Teach-in process is indicated when the green LED indicator lights up static and yellow LED blinks.

### **Two-Point Teach-In**

When using this Teach-in method, the following settings are made on the thru-beam sensor:

The gain is set to an optimum value

The signal threshold is set in the center between the two taught signal values

Signal s	strength		
Max			
	Teach-in value 1 (avg)	1	
	Threshold level	<ul> <li>Contrast levels</li> </ul>	
	Teach-in value 2 (avg)		
0 -	1	t t	L

- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 3. Position the object in the beam path.
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 5. The end of the Teach-in process is indicated when the green LED indicator lights up static.

#### Maximum Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to a maximum
- The signal threshold is set to a minimum

Signal strength Max	
Threshold level	

Recommended application:

Enables an object to be detected with a high excess gain. This can be useful if there is severe environmental contamination or to achieve long operating times.

fa-info@de.pepperl-fuchs.com

Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.

6. Cover the receiver or transmitter.

www.pepperl-fuchs.com

- 7. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 9. The end of the Teach-in process is indicated when the green LED indicator lights up static.

fa-info@us.pepperl-fuchs.com

Singapore: +65 6779 9091

fa-info@sg.pepperl-fuchs.com