

OIO-Link

(€

Model Number

OMT45-R103-2EP-IO-0,3M-V1

Distance sensor with fixed cable and M12 connector, 4-pin

Features

- Miniature design with versatile mounting options
- Space-saving distance sensors in small standardized design
- Multi Pixel Technology (MPT) exact and precise signal evaluation
- IO-link interface for service and process data

Product information


The R103 series miniature optical sensors are the first devices of their kind to offer an end-to-end solution in a small single standard design — from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The entire series enables sensors communicate via IO-Link.


The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

Dimensions

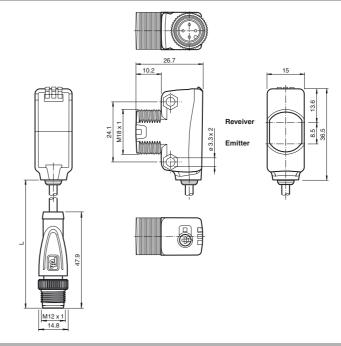

Electrical connection

 



Pinout

Wire colors in accordance with EN 60947-5-2

BN WH BU BK (brown (white) (blue) (black)

  Indicators/operating means





1	Teach-in button	
2	Mode rotary switch	
3	Switch output indicator Q2	
4	Switch output indicator Q1	
5	Operating indicator	

ı	Switch output 1 / switch point B	
	Switch output 1 / switch point A	
Ш	Switch output 2 / switch point A	
ΙV	Switch output 2 / switch point B	
٧	Kevlock	

Technical data General specifications Measurement range 15 ... 45 mm Reference target standard white, 100 mm x 100 mm I FD Light source Light type modulated visible red light LED risk group labelling exempt group Angle deviation max. +/- 1.5 Diameter of the light spot approx. 4 mm at a distance of 45 mm Angle of divergence approx. 4 Ambient light limit EN 60947-5-2: 30000 Lux Resolution 0.01 mm Functional safety related parameters 600 a $MTTF_d$ Mission Time (T_M) 20 a Diagnostic Coverage (DC) 0 % Indicators/operating means Operation indicator LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode Function indicator LED vellow: constantly on - switch output active constantly off - switch output inactive Control elements Control elements 5-step rotary switch for operating modes selection **Electrical specifications** 10 ... 30 V DC Operating voltage U_{B} max. 10 % No-load supply current < 25 mA at 24 V supply voltage Protection class Interface Interface type IO-Link (via C/Q = pin 4) Device profile Smart Sensor COM 2 (38.4 kBaud) Transfer rate **IO-Link Revision** 1.1 Min. cycle time 3 ms Process data input 3 Byte Process data witdh Process data output 2 Bit SIO mode support Device ID 0x110907 (1116423) Compatible master port type Output Switching type The default setting is: C/Q - Pin4: NPN normally open, PNP normally closed, IO-Link Q2 - Pin2: NPN normally open, PNP normally closed Signal output 2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected Switching voltage max. 30 V DC max. 100 mA, resistive load Switching current Usage category DC-12 and DC-13 ≤ 1.5 V DC Voltage drop Response time 2 ms Conformity IFC 61131-9 Communication interface Product standard EN 60947-5-2 Measurement accuracy $20 \ \mu m/K$ Temperature drift Warm up time 5 min Repeat accuracy ≤ 0.2 mm ± 0.3 mm Linearity error **Ambient conditions** Ambient temperature 10 ... 60 °C (50 ... 140 °F) , fixed cable 10 ... 60 °C (50 ... 140 °F) , movable cable not appropriate for conveyor chains Storage temperature -40 ... 70 °C (-40 ... 158 °F) **Mechanical specifications** Housing width 15 mm Housing height 36.5 mm Housing depth 26.7 mm IP67 / IP69 / IP69K Degree of protection Connection 300 mm fixed cable with M12 x 1, 4-pin connector Material Housing PC (Polycarbonate) Optical face **PMMA** Mass approx. 23 g

Accessories

V31-GM-2M-PUR

Female cordset, M8, 4-pin, PUR cable

V31-WM-2M-PUR

Female cordset, M8, 4-pin, PUR cable

IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

OMH-R103-01

Mounting bracket

Other suitable accessories can be found at www.pepperl-fuchs.com

Cable length	0.3 m
Approvals and certificates	
UL approval	E87056 , cULus Listed , class 2 power supply , type rating 1

Preferences

Teach-In:

You can use the rotary switch to select the relevant switching threshold A and/or B for teaching in for switch signal Q1 or Q2.

The yellow LEDs indicate the current state of the selected output.

To store a threshold value, press and hold the "TI" button until the yellow and green LEDs flash in phase (approx. 1 s). Teach-In starts when the "TI" button is released.

Successful Teach-In is indicated by alternating flashing (2.5 Hz) of the yellow and green LEDs.

 
An unsuccessful Teach-In is indicated by rapidly alternating flashing (8 Hz) of the yellow and green LEDs.

After an unsuccessful Teach-In, the sensor continues to operate with the previous valid setting after the relevant visual fault signal is issued.


Different switching modes can be defined by teaching in the relevant distance measured values

for the switching thresholds A and B:

Single point mode:



Window mode:

 

Every taught-in switching threshold can be retaught (overwritten) by pressing the "TI" button again.

Pressing and holding the "TI" button for > 4 s completely deletes the taught-in value. The vellow and green LEDs go out simultaneously to indicate that this procedure has been completed. Successful resetting is indicated by alternating flashing (2.5 Hz) of the yellow and green LEDs.

Resetting to Factory Default Settings

Press the "Tl" button for > 10 s in rotary switch position ,O' to reset to factory default settings. The yellow and green LEDs go out simultaneously to indicate the resetting.

Resetting process starts when the "TI" button is released and is indicated by the yellow LED. After the process the sensor works with factory default settings, immediately.

OMT:

- Factory default settings switch signal Q1: Switch signal active, window mode
- · Factory default settings switch signal Q2: Switch signal active, window mode

OQT:

- · Factory default settings switch signal Q1:
 - Switch signal active, BGS mode (background suppression)
- Factory default settings switch signal Q2: Switch signal active, BGS mode (background suppression)

 
Configuration via IO-Link interface

Setting different operating modes via the IO-Link interface

The devices are equipped with an IO-Link interface as standard for diagnostics and parameterization tasks to ensure optimum adjustment of the sensors to the relevant application.

Single point mode operating mode (one switch point):

- "Detection of objects irrespective of type and color in a defined detection range. Objects in the background are suppressed.
- "The switch point corresponds exactly to the set point.



Window mode operating mode (two switch points):

- Detection of objects irrespective of type and color in a defined detection range. Reliable detection when object leaves the detection range.
- Window mode with two switch points.



Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

Release date: 2019-01-03 10:49

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

 
Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

suppression




Center window mode operating mode (one switch point):

- Detection of objects irrespective of type and color in a defined detection range. Sets a defined window around a given object. Objects outside this window are not detected.
- Window mode with one switch point.



Two point mode operating mode (hysteresis operating mode):

 • Detection of objects irrespective of type and color between a defined switch-on and switch-off point.



Inactive operating mode:

Evaluation of switching signals is deactivated.

The associated IODD device description file can be found in the download area at www.pepperl-fuchs.com.