









Model Number


OBE500-R3F-SE0-L

Laser thru-beam sensor with 2 m fixed cable

Features


- Very flat design for direct mounting without mounting bracket
- DuraBeam Laser Sensors durable and employable like an LED
- TEACH-IN
- Detection of partially transparent objects by teach-in
- Detection of small parts or flat objects from 0.25 mm

Dimensions

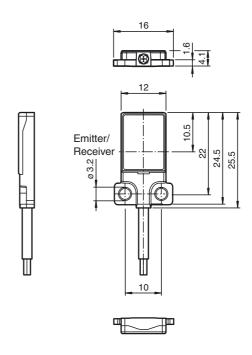

Electrical connection



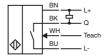

Laserlabel



CLASS 1 LASER PRODUCT

IEC 60825-1: 2007 certified. Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50. dated June 24, 2007

CLASS 1 LASER PRODUCT

IEC 60825-1: 2007 certified. Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

Other suitable accessories can be found at www.pepperl-fuchs.com

Date of issue: 2019-10-29 280492_eng.xml

Approvals and certificates


UL approval CCC approval E87056, cULus Recognized, Class 2 Power Source


CCC approval / marking not required for products rated ≤36 V


FDA approval

IEC 60825-1:2007 Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

Curves/Diagrams

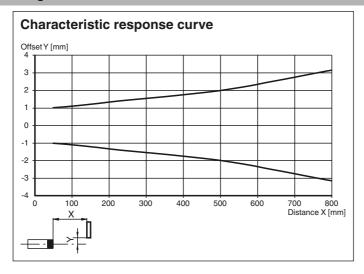

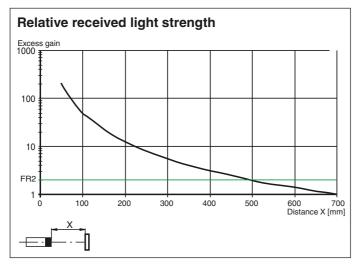

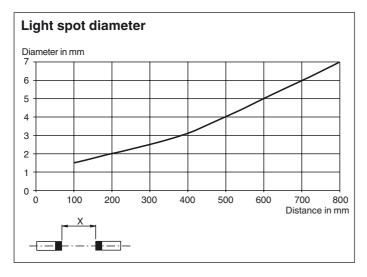

Teach-In Methods


The thru-beam sensor enables the switching points to be taught in for optimum adaptation to specific applications. This eliminates the need for additional components such as apertures.

The sensitivity of the thru-beam sensor can be adjusted using three Teach-in methods:

Position Teach

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to an optimum value
- The signal threshold is set to a minimum

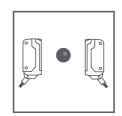

Recommended application:

This method enables minuscule particles in the beam path to be detected, and provides exceptional positioning accuracy.


Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.


- Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver.
 The green and yellow LED indicators flash simultaneously at 2.5 Hz
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver.
 The green and yellow LED indicators flash alternately at 2.5 Hz
- 3. The end of the Teach-in process is indicated when the green LED indicator lights up static and yellow LED blinks.

Two-Point Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- · The gain is set to an optimum value
- · The signal threshold is set in the center between the two taught signal values

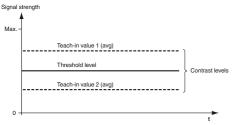

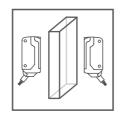



- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver.
 The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 3. Position the object in the beam path.
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver.
 The green and yellow LED indicators flash alternately at 2.5 Hz
- 5. The end of the Teach-in process is indicated when the green LED indicator lights up static.

Maximum Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- · The gain is set to a maximum
- · The signal threshold is set to a minimum

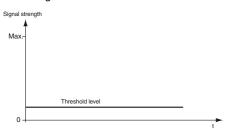

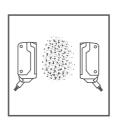

Recommended application:

Enables an object to be detected with a high excess gain. This can be useful if there is severe environmental contamination or to achieve long operating times.

Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.

- 6. Cover the receiver or transmitter.
- 7. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 8. Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 9. The end of the Teach-in process is indicated when the green LED indicator lights up static.

Laser notice laser class 1

- The irradiation can lead to irritation especially in a dark environment. Do not point at people!
- Maintenance and repairs should only be carried out by authorized service personnel!
- Attach the device so that the warning is clearly visible and readable.
- The warning accompanies the device and should be attached in immediate proximity to the device.
- Caution Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation
 exposure.

4