



 ϵ





Model Number

OBT300-R103-2EP-IO

Triangulation sensor (BGS) with fixed cable

Features

- Miniature design with versatile mounting options
- Best background suppressor in its
- Precision object detection, almost irrespective of the color
- Extended temperature range -40°C ... 60°C
- High degree of protection IP69K
- IO-link interface for service and process data

Product information


The R103 series miniature optical sensors are the first devices of their kind to offer an end-to-end solution in a small single standard design — from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The entire series enables sensors to communicate via IO-Link.


The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.


Dimensions

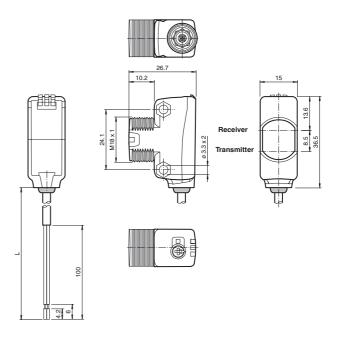

Electrical connection

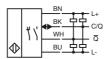

Indicators/operating means

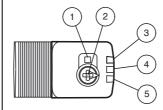

- Light-on/dark-on changeover switch
- Sensing range adjuster
- 3 Operating indicator / dark on
- 4 Function indicator
- Operating indicator / light on



Technical data General specifications 5 ... 300 mm Detection range 5 ... 25 mm Detection range min. Detection range max 5 ... 300 mm Adjustment range 25 ... 300 mm standard white, 100 mm x 100 mm Reference target Light source Light type modulated visible red light LED risk group labelling exempt group Black/White difference (6 %/90 %) < 15 % at 300 mm Diameter of the light spot approx. 18 mm at a distance of 300 mm Angle of divergence approx. 3 Ambient light limit EN 60947-5-2: 40000 Lux Functional safety related parameters $MTTF_d$ 600 a Mission Time (T_M) 20 a Diagnostic Coverage (DC) 0 % Indicators/operating means Operation indicator LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode Function indicator LED vellow: constantly on - object detected constantly off - object not detected Control elements Light-on/dark-on changeover switch Control elements Sensing range adjuster **Electrical specifications** Operating voltage UR 10 ... 30 V DC Ripple max. 10 % No-load supply current < 25 mA at 24 V supply voltage Protection class Interface Interface type IO-Link (via C/Q = BK) Device profile Smart Sensor COM 2 (38.4 kBaud) Transfer rate **IO-Link Revision** 1.1 Min. cycle time 2.3 ms Process data witdh Process data input 1 Bit Process data output 2 Bit SIO mode support 0x110604 (1115652) Device ID Compatible master port type Output Switching type The switching type of the sensor is adjustable. The default setting is: C/Q - BK: NPN normally open / light-on, PNP normally closed / dark-on, IO-Link /Q - WH: NPN normally closed / dark-on, PNP normally open / Signal output 2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected Switching voltage max 30 V DC max. 100 mA, resistive load Switching current DC-12 and DC-13 Usage category ≤ 1.5 V DC Voltage drop Switching frequency 500 Hz Response time 1 ms Conformity Communication interface IEC 61131-9 EN 60947-5-2 Product standard **Ambient conditions** Ambient temperature -40 ... 60 °C (-40 ... 140 °F) , fixed cable -25 ... 60 °C (-13 . . 140 °F) , movable cable not appropriate for conveyor chains Storage temperature -40 ... 70 °C (-40 ... 158 °F) **Mechanical specifications** Housing width 15 mm Housing height 36.5 mm Housing depth 26.7 mm IP67 / IP69 / IP69K Degree of protection Connection 2 m fixed cable Material Housing PC (Polycarbonate) Optical face **PMMA** Mass approx. 38 g

Accessories

IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

REF-H85-2

Reflector, rectangular 84.5 mm x 84.5 mm, mounting holes

REF-H50

Reflector, rectangular 51 mm x 61 mm, mounting holes, fixing strap

REF-VR10

Reflector, rectangular 60 mm x 19 mm, mounting holes

OFR-100/100

Reflective tape 100 mm x 100 mm

REF-H33

Reflector with screw fixing

OMH-R103-01

Mounting bracket

OMH-R101-Front

Mounting Clamp

OMH-R101

Mounting Clamp

OMH-4.1

Mounting Clamp

OMH-ML6

Mounting bracket

OMH-ML6-U

Mounting bracket

OMH-ML6-Z

Mounting bracket

Other suitable accessories can be found at www.pepperl-fuchs.com





Cable length 2 m


Approvals and certificates


UL approval E87056 , cULus Listed , class 2 power supply , type rating 1

Curves/Diagrams

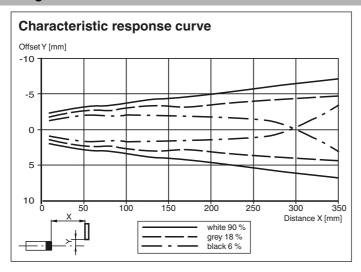


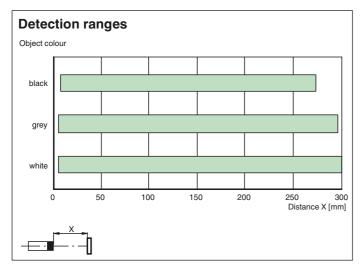

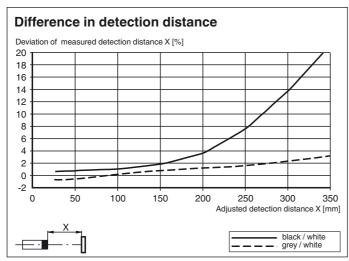

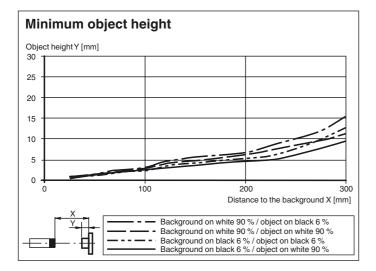

Functions and Operation

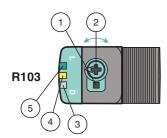

- 1 Light-on / dark-on changeover switch
- 2 Sensing range / sensitivity adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range adjuster / sensitivity adjuster for more than 180 degrees.

Sensing Range/ Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range / sensitivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on /dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

Restore Factory Settings

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjustment, turn the sensing range / sensitivity adjuster for more than 180 degrees.