	Technical data	
	General specifications	
	Sensing range	60 2000 mm
	Adjustment range	90 2000 mm
	Dead band	0 60 mm
	Standard target plate Transducer frequency	100 mm x 100 mm approx. 175 kHz
	Response delay	approx. 150 ms
	Indicators/operating means	
	LED green	solid green: Power on
	LED yellow	solid: object in evaluation range flashing: program function normal operation: "fault"
	LED red	program function: no object detected
	Electrical specifications	
	Operating voltage U _B	17 30 V DC , ripple 10 % _{SS}
	No-load supply current I ₀ Input/Output	≤ 50 mA
	Synchronization	bi-directional
c Us		0 level -U _B +1 V 1 level: +4 V+U _B input impedance: > 12 KOhm
Model Number		synchronization pulse: $\ge 100 \ \mu s$, synchronization interpulse period: $\ge 2 \ ms$
	Synchronization frequency	
UB2000-F42-U-V15	Common mode operation	≤ 30 Hz
Single head system	Multiplex operation	\leq 30/n Hz, n = number of sensors
	Output Output type	1 analog output 0 10 V
Features	Default setting	evaluation limit A1: 90 mm , evaluation limit A2: 2000 mm ,
Analog output 0 10 V	, i i i i i i i i i i i i i i i i i i i	wide sound lobe
Extremely small unusable area	Resolution	0.7 mm
-	Deviation of the characteristic curve Repeat accuracy	± 1 % of full-scale value ± 0.1 % of full-scale value
• TEACH-IN	Load impedance	> 1 kOhm
Interference suppression	Temperature influence	± 1 % of full-scale value
(adjustable divergence of sound	Ambient conditions	
cone in close range)	Ambient temperature Storage temperature	-25 70 °C (-13 158 °F) -40 85 °C (-40 185 °F)
Temperature compensation	Mechanical specifications	ין געו עדין סיגע געין די
	Connection type	Connector plug M12 x 1 , 5-pin
 Synchronization options 	Degree of protection	IP54
 Mode of operation adjustable 	Material Housing	ABS
Diagrama	Transducer	epoxy resin/hollow glass sphere mixture; foam polyurethane,
Diagrams	Mass	cover PBT
	Mass Compliance with standards and	140 g
Characteristic response curve	directives	
	Standard conformity	
Distance Y [m]	Standards	EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012 EN 60947-5-7:2003
0.5		IEC 60947-5-7:2003
	Approvals and certificates	al II us Listed, Constal Burness
	UL approval CSA approval	cULus Listed, General Purpose cCSAus Listed, General Purpose
	CCC approval	CCC approval / marking not required for products rated \leq 36 V
-0.5		
Round bar, Ø 25 mm		
-1		
Distance X [m]		
∔ Ύ		

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 Gr


 www.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com

Release date: 2016-02-26 11:32 Date of issue: 2019-01-25 133991_eng.xml

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com


UB2000-F42-U-V15

Dimensions

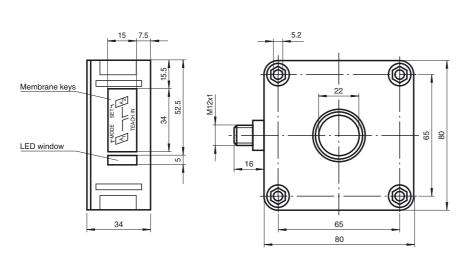


Additional Information

Analogue output programmation

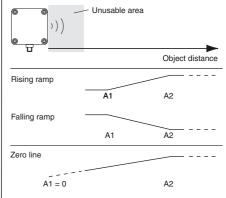

Electrical Connection



Core colours in accordance with EN 60947-5-2.

Pinout



Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)
5	GY	(gray)

Accessories

MH 04-3505 Mounting aid for FP and F42 sensors

MHW 11 Mounting brackets for sensors

DA5-IU-2K-V Process control and indication equipment

V15-G-2M-PVC Female cordset, M12, 5-pin, PVC cable

Functional Description

The sensor may be completely parameterised via two keys on the side panel of the housing. As a special feature provided by this sensor, the ultrasound beam width may be adapted to the environmental conditions at the place of operation of the sensor.

Specifying the evaluation limits:

The evaluation limits determine the characteristic line and the working range of the analog output.

Specifying the A1 evaluation limit by pressing the A1 key		
Holding down the A1key > 2 seconds	The sensor switches to learn mode and the user may specify the A1 evaluation limit	
Position the target object at the desired distance	The yellow LED of the sensor flashes fast to indicate that the target object is recognised. The red LED flashes if the object is not recognised.	
Briefly pressing the A1 key	The sensor terminates the specification of the A1 eval- uation limit and saves it as a non-volatile value. The specified value is invalid if the object is uncertain (i.e. the red LED lights up at irregular intervals). The learn mode is exited.	

The A2 evaluation limit is specified via the A2 key, analogous to the description above.

Alternatively, the evaluation limits may also be specified electrically via the learn input. To specify the A1 evaluation limit, the learn input must be connected to

-UB; to specify the A2 evaluation limit, it must be connected to +UB. Specified values are saved upon the disconnection from the learn input.

Evaluation limits may only be specified within the first 5 minutes after Power on. To modify the evaluation limits later, the user may specify the desired values only after a new Power On.

Proceed as follows to parameterise the output function and the ultrasound beam width:

Press the A1 key during Power on and hold down the key for another second to ensure that the sensor starts the two-step parameterisation of the operating modes.

Step 1, parameterisation of the output function

The output function parameterised last is displayed. All output functions available may be selected via consecutive, brief strokes of the A2 key. These strokes are visualised via short flashes of the green LED.

Operating mode	Flash sequence of the green LED	A2 key
Rising edge	-Ò, pause -Ò, -	\square
Falling edge	-ऴॣ॔ॱॖऴॣ॔ॱpauseऴॣ॔ॱ_	
Zero point straight line		

Hold down the A1 key for 2 seconds to save the selected output mode, complete the parameterisation and ensure that the sensor returns to normal mode. If you briefly press the A1 key, Step 2 is entered (parameterisation of the ultrasound beam width).

Step 2, parameterisation of the ultrasound beam width

Via Step 2, the ultrasound beam width may be adapted to the requirements of the corresponding application.

The beam width parameterised last is displayed first. Available beam width settings may be selected via consecutive, brief strokes of the A2 key. These strokes are visualised via the flash sequence of the red LED.

133991 ena.xml

Date of issue: 2019-01-25

Release date: 2016-02-26 11:32

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

The "Zero point straight line" setting fixedly specifies the A1 evaluation limit to 0 (see specification of the evaluation limits). The A2 evaluation limit determines the steepness of the output characteristic line.

Beam width	Flash sequence of the red LED	A2 key
Small beam	-Ò, pauseÒ,	\square
Medium beam	-ऴॣ॔:ऴॣ॔: pauseऴॣ॔: _	
Large beam	- ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ;	

Hold down the A1 key for 2 seconds to save the selected beam shape, terminate the parameterisation and ensure that the sensor returns to normal mode. Briefly press the A1 key to return to Step 1 (parameterisation of the output function).

If the parameterisation mode is not terminated within 5 minutes (hold down the A1 key for 2 seconds), the sensor aborts this mode without modifying the settings.

Synchronisation

The sensor provides a synchronisation port to suppress mutual influencing. If this port has not been connected, the sensor works at an internally generated cycle rate. Several sensors may be synchronised via the following options.

External synchronisation:

The sensor may be synchronised via the external application of a square wave voltage. A synchronisation pulse on the synchronisation input initiates a measuring cycle. The pulse width must be greater than 100 µs. The measuring cycle is started with the falling edge. A low level > 1 s or an open synchronisation input initiate the transition to normal sensor mode. A high level on the synchronisation input deactivates the sensor.

Two modes are possible:

- Several sensors are controlled via the same synchronisation signal. The sensors work in common mode.
- The synchronisation pulses are forwarded at cyclic intervals to respectively one single sensor. The sensors work in multiplex mode.

Self-synchronisation:

The synchronisation ports of up to 5 sensors suitable for self-synchronisation are connected to each other. These sensors work in multiplex mode after Power on. The On delay increases depending on the number of sensors to be synchronised. While the learn mode is active, no synchronisation is possible (and vice-versa). To specify the switching points, the sensors must be operated in non-synchronised mode.

Note:

If the synchronisation option is not used, the synchronisation input must be connected to ground (0V) or the sensor must be operated with a (4-pole) V1 connecting cable.

fa-info@sg.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Germany: +49 621 776 1111 Pepperl+Fuchs Group USA: +1 330 486 0001 Singapore: +65 6779 9091 fa-info@de.pepperl-fuchs.com www.pepperl-fuchs.com fa-info@us.pepperl-fuchs.com

