	Technical data	
	General specifications	
	Sensing range	200 4000 mm
	Adjustment range Dead band	240 4000 mm 0 200 mm
	Standard target plate	100 mm x 100 mm
	Transducer frequency	approx. 85 kHz
	Response delay	approx. 325 ms
	Indicators/operating means	aalid eesaan Dawar an
	LED green LED yellow	solid green: Power on solid: object in evaluation range
		flashing: program function
	LED red	normal operation: "fault"
	Electrical specifications	program function: no object detected
	Operating voltage U _B	17 30 V DC , ripple 10 % _{SS}
	No-load supply current I ₀	≤ 60 mA
CE (SP. c(UL)us	Input/Output	
	Synchronization	bi-directional 0 level -U _B +1 V
		1 level: $+4$ V $+U_B$
		input impedance: > 12 KOhm
Model Number		synchronization pulse: \geq 100 µs, synchronization interpulse period: \geq 2 ms
	Synchronization frequency	ponou. ≤ 2 mo
JB4000-F42-U-V15	Common mode operation	≤ 13 Hz
Single head system	Multiplex operation	\leq 13/n Hz, n = number of sensors
	Output	
eatures	Output type	1 analog output 0 10 V
Analog output 0 10 V	Default setting	evaluation limit A1: 240 mm , evaluation limit A2: 4000 mm , wide sound lobe
	Resolution	0.7 mm
Extremely small unusable area	Deviation of the characteristic curve	± 1 % of full-scale value
TEACH-IN	Repeat accuracy	± 0.1 % of full-scale value
-	Load impedance Temperature influence	> 1 kOhm ± 1 % of full-scale value
Interference suppression	Ambient conditions	
(adjustable divergence of sound cone in close range)	Ambient temperature	-25 70 °C (-13 158 °F)
	Storage temperature	-40 85 °C (-40 185 °F)
Temperature compensation	Mechanical specifications	• · · · · · · · · · · · · · · · · · · ·
Synchronization options	Connection type Degree of protection	Connector plug M12 x 1 , 5-pin IP54
•	Material	IF 34
Mode of operation adjustable	Housing	ABS
Diagrams	Transducer	epoxy resin/hollow glass sphere mixture; foam polyurethane,
Jiagrains	Mass	cover PBT 150 g
	Compliance with standards and	150 g
Characteristic response curve	directives	
	Standard conformity	
stance Y [m]	Standards	EN 60947-5-2:2007+A1:2012
Flat surface 100 mm x 100 mm		IEC 60947-5-2:2007 + A1:2012 EN 60947-5-7:2003
		IEC 60947-5-7:2003
	Approvals and certificates	
	UL approval	cULus Listed, General Purpose
	CSA approval	cCSAus Listed, General Purpose
	CCC approval	CCC approval / marking not required for products rated \leq 36 V
Round bar, Ø 25 mm		
Distance X [m]		
t Υ		
→ X wide sonic beam		
narrow sonic beam		

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information".


 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 Gr

 www.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com

Release date: 2016-02-26 11:33 Date of issue: 2019-01-25 134004_eng.xml


UB4000-F42-U-V15

Dimensions

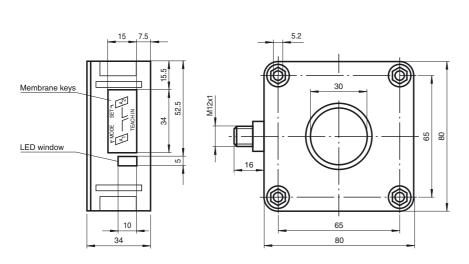


Additional Information

Analogue output programmation

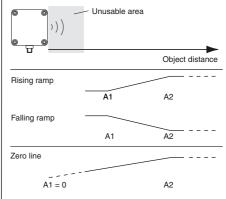

Electrical Connection



Core colours in accordance with EN 60947-5-2.

Pinout



Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)
5	GY	(gray)

fa-info@us.pepperl-fuchs.com

www.pepperl-fuchs.com

Accessories

MH 04-3505 Mounting aid for FP and F42 sensors

MHW 11 Mounting brackets for sensors

DA5-IU-2K-V Process control and indication equipment

V15-G-2M-PVC Female cordset, M12, 5-pin, PVC cable

Functional Description

The sensor may be completely parameterised via two keys on the side panel of the housing. As a special feature provided by this sensor, the ultrasound beam width may be adapted to the environmental conditions at the place of operation of the sensor.

Specifying the evaluation limits:

The evaluation limits determine the characteristic line and the working range of the analog output.

Specifying the A1 evaluation limit by pressing the A1 key		
Holding down the A1key > 2 seconds	The sensor switches to learn mode and the user may specify the A1 evaluation limit	
Position the target object at the desired distance	The yellow LED of the sensor flashes fast to indicate that the target object is recognised. The red LED flashes if the object is not recognised.	
Briefly pressing the A1 key	The sensor terminates the specification of the A1 eval- uation limit and saves it as a non-volatile value. The specified value is invalid if the object is uncertain (i.e. the red LED lights up at irregular intervals). The learn mode is exited.	

The A2 evaluation limit is specified via the A2 key, analogous to the description above.

Alternatively, the evaluation limits may also be specified electrically via the learn input. To specify the A1 evaluation limit, the learn input must be connected to

-UB; to specify the A2 evaluation limit, it must be connected to +UB. Specified values are saved upon the disconnection from the learn input.

Evaluation limits may only be specified within the first 5 minutes after Power on. To modify the evaluation limits later, the user may specify the desired values only after a new Power On.

Proceed as follows to parameterise the output function and the ultrasound beam width:

Press the A1 key during Power on and hold down the key for another second to ensure that the sensor starts the two-step parameterisation of the operating modes.

Step 1, parameterisation of the output function

The output function parameterised last is displayed. All output functions available may be selected via consecutive, brief strokes of the A2 key. These strokes are visualised via short flashes of the green LED.

Operating mode	Flash sequence of the green LED	A2 key
Rising edge	-Ŏ pause -Ŏ	\square
Falling edge	-ऴॣ॔ऴॣ॔ pauseऴॣ॔	\downarrow
Zero point straight line	-;;;- u -;;;- u -;;;- pause	

Hold down the A1 key for 2 seconds to save the selected output mode, complete the parameterisation and ensure that the sensor returns to normal mode. If you briefly press the A1 key, Step 2 is entered (parameterisation of the ultrasound beam width).

Step 2, parameterisation of the ultrasound beam width

Via Step 2, the ultrasound beam width may be adapted to the requirements of the corresponding application.

The beam width parameterised last is displayed first. Available beam width settings may be selected via consecutive, brief strokes of the A2 key. These strokes are visualised via the flash sequence of the red LED.

134004 ena.xml

Date of issue: 2019-01-25

Release date: 2016-02-26 11:33

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

The "Zero point straight line" setting fixedly specifies the A1 evaluation limit to 0 (see specification of the evaluation limits). The A2 evaluation limit determines the steepness of the output characteristic line.

Beam width	Flash sequence of the red LED	A2 key
Small beam	-Ò, pauseÒ,	\square
Medium beam	-ऴॣ॔:ऴॣ॔: pauseऴॣ॔: _	
Large beam	- ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ;	

Hold down the A1 key for 2 seconds to save the selected beam shape, terminate the parameterisation and ensure that the sensor returns to normal mode. Briefly press the A1 key to return to Step 1 (parameterisation of the output function).

If the parameterisation mode is not terminated within 5 minutes (hold down the A1 key for 2 seconds), the sensor aborts this mode without modifying the settings.

Synchronisation

The sensor provides a synchronisation port to suppress mutual influencing. If this port has not been connected, the sensor works at an internally generated cycle rate. Several sensors may be synchronised via the following options.

External synchronisation:

The sensor may be synchronised via the external application of a square wave voltage. A synchronisation pulse on the synchronisation input initiates a measuring cycle. The pulse width must be greater than 100 µs. The measuring cycle is started with the falling edge. A low level > 1 s or an open synchronisation input initiate the transition to normal sensor mode. A high level on the synchronisation input deactivates the sensor.

Two modes are possible:

- Several sensors are controlled via the same synchronisation signal. The sensors work in common mode.
- The synchronisation pulses are forwarded at cyclic intervals to respectively one single sensor. The sensors work in multiplex mode.

Self-synchronisation:

The synchronisation ports of up to 5 sensors suitable for self-synchronisation are connected to each other. These sensors work in multiplex mode after Power on. The On delay increases depending on the number of sensors to be synchronised. While the learn mode is active, no synchronisation is possible (and vice-versa). To specify the switching points, the sensors must be operated in non-synchronised mode.

Note:

If the synchronisation option is not used, the synchronisation input must be connected to ground (0V) or the sensor must be operated with a (4-pole) V1 connecting cable.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Germany: +49 621 776 1111 Pepperl+Fuchs Group USA: +1 330 486 0001 Singapore: +65 6779 9091

fa-info@sg.pepperl-fuchs.com