



# P1NHxxx

**Reflex Sensors with Background Suppression** 



**Operating Instructions** 

Translation of the Original Operating Instruction Subject to change without notice Available as PDF version only Version: 1.4.1 Status: 11.06.2019 www.wenglor.com

# **Table of Contents**

1.	General	3
	1.1 Information Concerning these Instructions	
	1.2 Explanations of Symbols	3
	1.3 Limitation of Liability	
	1.4 Copyrights	4
2.	For Your Safety	5
	2.1 Use for Intended Purpose	
	2.2 Use for Other than the Intended Purpose	
	2.3 Personnel Qualifications	6
	2.4 Modification of Products	
	2.5 General Safety Precautions	6
	2.6 Laser/LED Warnings	
	2.7 Approvals and protection class	6
3.	Technical Data	7
	3.7.1 Spot Diameter	
	3.7.2 Switching Distance Deviation	10
	3.1 Complementary Products	12
	3.2 Layout	
	3.3 Control Panel	
	3.4 Scope of Delivery	16
4.	Transport and Storage	16
	4.1 Transport	16
	4.2 Storage	16
5.	Installation and Electrical Connection	17
•	5.1 Installation	
	5.2 Electrical Connection	18
	5.3 Diagnostics	19
6	Settings	21
0.	6.1 Object Detection Directly in Front of a Background or an Undersurface	21
	6.2 Detection of Objects Without Interfering Background	
7.		
8.	Maintenance Instructions	
9.	Proper Disposal	21
10.	Appendix	22
	10.1 List of Abbreviations	
	10.2 Change Index, Operating Instructions	
	10.3 EU Declaration of Conformity	



# 1. General

# 1.1 Information Concerning these Instructions

- These instructions apply to the products with ID code P1NHxxx.
- They make it possible to use the product safely and efficiently.
- These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.
- · Local accident prevention regulations and national work safety regulations must be complied with as well.
- The product is subject to further technical development, and thus the information contained in these operating instructions may also be subject to change. The current version can be found at www.wenglor.com in the product's separate download area.



#### NOTE!

The operating instructions must be read carefully before using the product and must be kept on hand for later reference.

## 1.2 Explanations of Symbols

- · Safety precautions and warnings are emphasized by means of symbols and attention-getting words
- · Safe use of the product is only possible if these safety precautions and warnings are adhered to

The safety precautions and warnings are laid out in accordance with the following principle:



#### Attention-Getting Word! Type and Source of Danger!

Possible consequences in the event that the hazard is disregarded.

• Measures for averting the hazard.

The meanings of the attention-getting words, as well as the scope of the associated hazards, are listed below.

	DANGER! This word indicates a hazard with a high degree of risk which, if not avoided, results in death or severe injury.
	<b>WARNING!</b> This word indicates a hazard with a medium degree of risk which, if not avoided, may result in death or severe injury.
	CAUTION! This word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.
	<b>ATTENTION!</b> This word draws attention to a potentially hazardous situation which, if not avoided, may result in property damage.
i	<b>NOTE!</b> A note draws attention to useful tips and suggestions, as well as information regarding efficient, error-free use.

# 1.3 Limitation of Liability

- The product has been developed in consideration of the current state-of-the-art and applicable standards and guidelines. Subject to change without notice.
- A valid declaration of conformity can be accessed at www.wenglor.com in the product's separate download area.
- wenglor sensoric elektronische Geräte GmbH (hereinafter referred to as "wenglor") excludes all liability in the event of:
  - Non-compliance with the instructions
  - · Use of the product for purposes other than those intended
  - · Use by untrained personnel
  - · Use of unapproved replacement parts
  - · Unapproved modification of products
- These operating instructions do not include any guarantees from wenglor with regard to the described procedures or specific product characteristics.
- wenglor assumes no liability for printing errors or other inaccuracies contained in these operating
  instructions, unless wenglor was verifiably aware of such errors at the point in time at which the operating
  instructions were prepared.

# 1.4 Copyrights

- The contents of these instructions are protected by copyright law.
- All rights are reserved by wenglor.
- Commercial reproduction or any other commercial use of the provided content and information, in particular graphics and images, is not permitted without previous written consent from wenglor.



# 2. For Your Safety

# 2.1 Use for Intended Purpose

The product is based on the following functional principle:

### **Reflex Sensors with Background Suppression**

Reflex sensors with background suppression analyze the light reflected from objects. As these sensors work according to the principle of angular measurement, the color, shape and surface characteristics of the object have almost no influence on the detection range. Even dark objects can be reliably detected against a bright background. The output is switched as soon as an object passes the selected range.

### This product can be used in the following industry sectors:

- Special machinery manufacturing 
   Consumer goods industry
- Heavy machinery manufacturing
- Logistics
- Automotive industry
- Food industry
- Packaging industry
- Pharmaceuticals industry
- · Plastics industry
- Woodworking industry

- Paper industry
  - Electronics industry
  - · Glass industry
  - Steel industry
  - Aviation industry
  - · Chemicals industry
  - Alternative energy
  - Raw materials extraction

# 2.2 Use for Other than the Intended Purpose

- Not a safety component in accordance with 2006/42/EC (Machinery Directive)
- The product is not suitable for use in potentially explosive atmospheres.
- The product may only be used with accessories supplied or approved by wenglor, or combined with approved products. A list of approved accessories and combination products can be accessed at www.wenglor.com on the product detail page.

### DANGER!

Risk of personal injury or property damage in case of use for other than the intended purpose!

Use for other than the intended purpose may lead to hazardous situations.

Observe instructions regarding use for intended purpose.

# 2.3 Personnel Qualifications

- Suitable technical training is a prerequisite.
- In-house electronics training is required.
- Trained personnel must have uninterrupted access to the operating instructions.

#### DANGER!

Risk of personal injury or property damage in case of incorrect initial start-up and maintenance!

Personal injury and damage to equipment may occur.

• Adequate training and qualification of personnel.

#### 2.4 Modification of Products



#### DANGER! Risk of personal injury or property damage if the product is modified!

Personal injury and damage to equipment may occur. Non-observance may result in loss of the CE marking and the guarantee may be rendered null and void. • Modification of the product is impermissible.

### 2.5 General Safety Precautions

#### NOTE!

- These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.
- In the event of possible changes, the respectively current version of the operating instructions can be accessed at www.wenglor.com in the product's download area.
- · Read the operating instructions carefully before using the product.
- Protect the sensor against contamination and mechanical influences.

### 2.6 Laser/LED Warnings

The respective laser class or LED group is listed in the product's technical data.

LASER CLASS 1 EN 60825-1:2014

#### Laser Class 1 (EN 60825-1)

Applicable standards and safety regulations must be observed. Pp = 7 mW, t = 8 s,  $\lambda$  = 680 nm

### 2.7 Approvals and protection class





# 3. Technical Data

Optical Data	
Service life (ambient temp. = +25 °C)	100000 h
Max. permissible ambient light	10000 Lux
Electrical Data	
Supply power	1030 V DC
IO-Link supply voltage	1830 V DC
	-4060 °C
Switching output voltage drop	< 2 V
Switching output switching current	100 mA
Switching output residual current	< 50 µA
Short-circuit protection	Yes
Reverse polarity protected	Yes
Overload-proof	Yes
Lockable	Yes
Interface	IO-Link
IO-Link version	1.1
Protection class	Ш
Mechanical Data	
Housing material	Plastic
Degree of protection	IP67/IP68
Lens cover	РММА

		1	1		1	P1	NH						
Technical D	102	104	201	202	203	206	207	208	701	706	707	708	
Principle	Mechanical Background Suppression												
Range		200 mm 300 mm											
Adjustable I	Range	45200 mm 50300 mm									653	00 mm	
Swichting h	ysteresis				< 5	5%					<	1 %	
Light Sourc	e				Red	Light					La	ser	
Laser Class	(EN 60825-1)				-	_						1	
Spot Diame	ter	See T	able 5			See T	able 1				See T	able 6	
Current con	sumption				< 25	5 mA					< 18	5 mA	
Temperature	e range				-40	.60 °C					-25	.60 °C	
Temperature	e drift	< 5 % < 2 %											
Switching fr	requency	1000 Hz											
Response ti	ime	0,5 ms											
Switching fr (Interference	equency e-free-Mode)	500 Hz											
Response ti (Interferenc	ime e-free-Mode)	1 ms											
Setting Meth	od	Single-turn											
	PNP, antivalent	×		×	×					×			
Output	NPN, antivalent		×				×	×			×		
function	PNP, NO					×						×	
	NPN, NO								×				×
Connection		Plug 4-j	M12, pin	É UI Plug M12, 4-pin Bug M12, 4-pi									
Connection	diagram No.	215	213	214	215	1027	213	212	228	215	213	1027	228
Suitable mo technology							:	2					



P1NH																		
801	802	803	804	805	301	302	303	306	401	402	601	602	703	705	304	307	501	503
			Me	echani	cal Bad	ckgrou	nd Sup	pressi	on		-		Electro	onical	Backgi	round S	Suppre	ssion.
	4	100 mn	n			500	mm		700	mm	1200	) mm	300	mm	500	mm	800	mm
	65.	400 ı	mm			605	00 mm		80			.1200		.300	50500		80	
		< 1 %						5 %	111	m		m 0 %		m 1 %	mm			111
		Laser							Lindat			0 %		ser				
		Laser						Rea	Light					l		Red	Light	
		3 mm				See T	able 2			able 2	See T	able 1		1		_		
		< 15 m					$\frac{1}{5}$ mA		See I	-	) mA	able 4			- 20	 ) mA		
		560		-			.60 °C	-			.60 °C					-		
	-2	< 2 %					.00 C		< 5	-40 % *					-40	-4060 °C < 5 %		
		600 Hz					0 Hz		500 Hz					1000 Hz				
		0.8 ms					0,5 ms 1 ms				0,5 ms							
									-	,								
		300 Hz	Z			500	) Hz			250	Hz	500 Hz						
		1,6 ms	6			1 1	ms		2 ms			1 ms						
					Si	ngle-tu	ırn						Potentiometer					
	×	×				×			×		×		×		×		×	
×					×					×		×		×		×		×
			×				×											
								×										
								Plug	M12, 4	4-pin								
213	215	215	1027	228	213	215	1027	228	215	213	215	213	215	213	215	213	215	213

2

\* For the sensors P1NH401–P1NH402 the Temperature drift is depending on the ambient temperature: Temperature drift (-20 °C < Tu < 60 °C): < 5 % Temperature drift (-40 °C < Tu < 60 °C): < 8 %

#### 3.7.1 Spot Diameter

Range	50 mm	150 mm	300 mm
Spot diameter	10 mm	10 mm	10 mm
Table 1			
Range	60 mm	250 mm	500 mm
Spot diameter	11 mm	13 mm	15 mm
Table 2			
Range	80 mm	350 mm	700 mm
Spot diameter	12 mm	16 mm	18 mm
Table 3			
Range	100 mm	600 mm	1200 mm
Spot diameter	14 mm	18 mm	30 mm
Table 4			
Range	45 mm	100 mm	200 mm
Spot diameter	7 mm	6 mm	5 mm
Table 5			
Range	65 mm	120 mm	300 mm
Spot diamotor	2 mm	0.5 mm	1 5 mm


Range	65 mm	120 mm	300 mm
Spot diameter	3 mm	2,5 mm	1,5 mm

Table 6


#### 3.7.2 Switching Distance Deviation

Typical characteristic curve based on Kodak white (90 % remission).

P1NH201-P1NH203, P1NH206-P1NH208

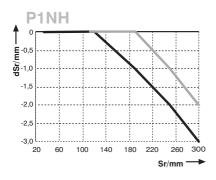

#### P1NH301-P1NH303, P1NH306

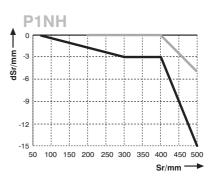





#### P1NH102, P1NH104


P1NH401, P1NH402


P1NH801-805

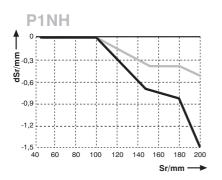

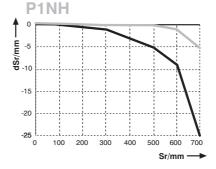


#### P1NH601, P1NH602

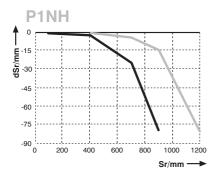

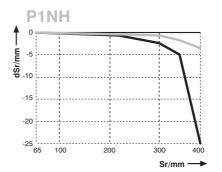


#### P1NH701, P1NH706-708

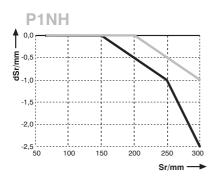

Sr = Switching Distance dSr = Switching Distance Change Black 6 % remission Grey 18 % remission


# **3.1 Complementary Products**

wenglor can provide you with suitable connection technology for your product.

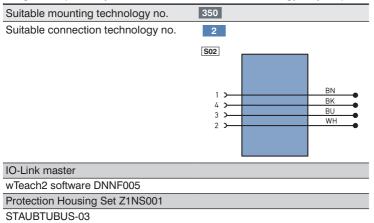


### 3.2 Layout

P1NH304, P1NH307

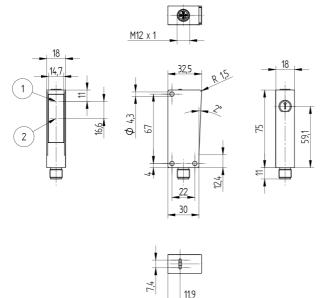


#### P1NH501, P1NH503




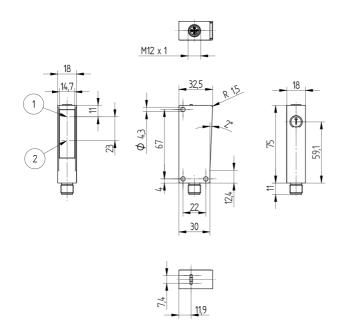


P1NH104, P1NH102, P1NH206, P1NH202, P1NH203, P1NH208, P1NH301, P1NH302, P1NH303, P1NH306

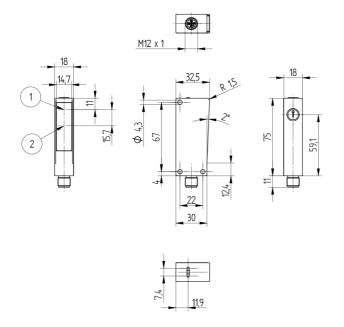

### P1NH201, P1NH207

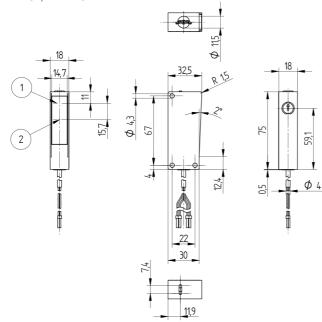

### P1NH401, P1NH402, P1NH601, P1NH602

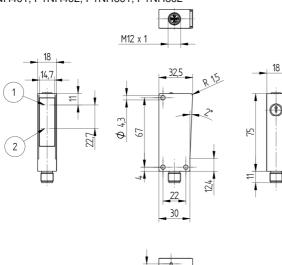

7,4


<u>1</u>1,9

59,1


t





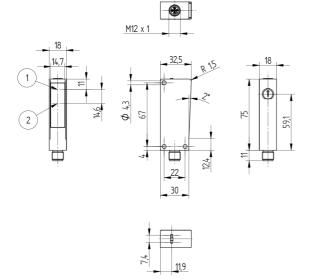

P1NH706, P1NH707, P1NH708, P1NH701, P1NH801, P1NH802, P1NH803, P1NH804, P1NH805

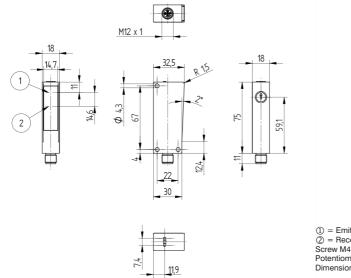

### 3.3 Control Panel



05 = switching distance adjuster 30 = switching status indicator / contamination warning 68 = supply power indicator

# 3.4 Scope of Delivery

- Sensor
- · Safety precautions
- Mounting-Set 02

# 4. Transport and Storage

### 4.1 Transport

Upon receipt of shipment, the goods must be inspected for damage in transit. In the case of damage, conditionally accept the package and notify the manufacturer of the damage. Then return the device, making reference to damage in transit.

## 4.2 Storage

The following points must be taken into condition with regard to storage:

- Do not store the product outdoors.
- Store the product in a dry, dust-free place.
- · Protect the product against mechanical impacts.
- · Protect the product against exposure to direct sunlight.

#### ATTENTION!



Risk of property damage in case of improper storage!

The product may be damaged.

• Storage instructions must be complied with.



# 5. Installation and Electrical Connection

# 5.1 Installation

- Protect the product from contamination during installation.
- Observe all applicable electrical and mechanical regulations, standards, and safety rules.
- Protect the product against mechanical influences.
- Make sure that the sensor is mounted in a mechanically secure fashion.
- Specified torque values must be complied with (see section "3. Technical Data", page 7).

#### ATTENTION!

#### Risk of property damage in case of improper installation!

The product may be damaged. • Installation instructions must be complied with.




#### CAUTION!

#### Risk of personal injury or property damage during installation!

Personal injury and damage to the product may occur.

· A safe installation environment must be assured.

# **5.2 Electrical Connection**

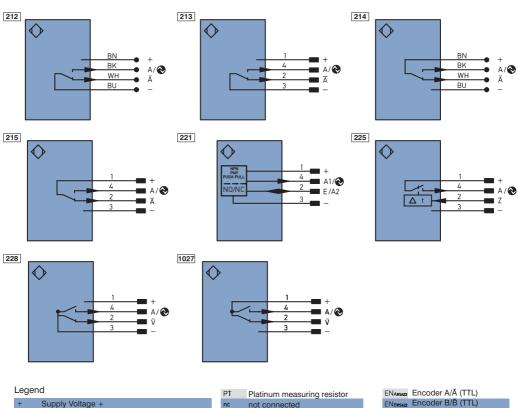

2090						
+	Supply Voltage +					
-	Supply Voltage 0 V					
~	Supply Voltage (AC Voltage)					
А	Switching Output (NO)					
Ā	Switching Output	(NC)				
V	Contamination/Error Output	(NO)				
V	Contamination/Error Output	(NC)				
E	Input (analog or digital)					
Т	Teach Input					
Z	Time Delay (activation)					
S	Shielding					
RxD	Interface Receive Path					
TxD	Interface Send Path					
RDY	Ready					
GND	Ground					
CL	Clock					
E/A	Output/Input programmable					
0	IO-Link					
PoE	Power over Ethernet					
IN	Safety Input					
OSSD	Safety Output					
Signal	Signal Output					
BI_D+/-	Ethernet Gigabit bidirect. data	a line (A-D)				
ENOR5422 Encoder 0-pulse 0-0 (TTL)						

PT	Platinum measuring resistor
nc	not connected
U	Test Input
Ū	Test Input inverted
W	Trigger Input
W -	Ground for the Trigger Input
0	Analog Output
0-	Ground for the Analog Output
BZ	Block Discharge
Awv	Valve Output
а	Valve Control Output +
b	Valve Control Output 0 V
SY	Synchronization
SY-	Ground for the Synchronization
E+	Receiver-Line
S+	Emitter-Line
÷	Grounding
SnR	Switching Distance Reduction
Rx+/-	Ethernet Receive Path
Tx+/-	Ethernet Send Path
Bus	Interfaces-Bus A(+)/B(-)
La	Emitted Light disengageable
Mag	Magnet activation
RES	Input confirmation
EDM	Contactor Monitoring

ENARS422	Encoder A/Ā (TTL)
ENBRS422	Encoder B/B (TTL)
ENa	Encoder A
ENв	Encoder B
Amin	Digital output MIN
Амах	Digital output MAX
Аок	Digital output OK
SY In	Synchronization In
SY OUT	Synchronization OUT
Олт	Brightness output
м	Maintenance
rsv	reserved
Wire Co	olors according to IEC 60757
BK	Black
BN	Brown
RD	Red
OG	Orange
YE	Yellow
GN	Green
BU	Blue
VT	Violet
GY	Grey
WH	White
PK	Pink
GNYE	Green/Yellow



#### DANGER!

#### Risk of personal injury or property damage due to electric current!

Voltage conducting parts may cause personal injury or damage to equipment.The electric device may only be connected by appropriately qualified personnel.


### **5.3 Diagnostics**

Δ

Causes for Triggering the Contamination Warning (blinking LED):

Display LED	Diagnosis/Cause	Elimination
	Contamination	Carefully clean the optic cover with a cloth.
Continuous blinking	Aged emitter diode	Replace the sensor.
at approx. 2.5 Hz	Unreliable working range	<ul><li>Increase the sensor's switching distance.</li><li>Reduce distance between sensor and object.</li></ul>
	Short-circuit	Check electrical wiring and eliminate the short-circuit.
Continuous blinking at approx. 5 Hz	Over-temperature	Disconnect the sensor from supply power and allow it to cool down.
	Hardware error	Replace the sensor.

#### **Contamination Warning Flowcharts**

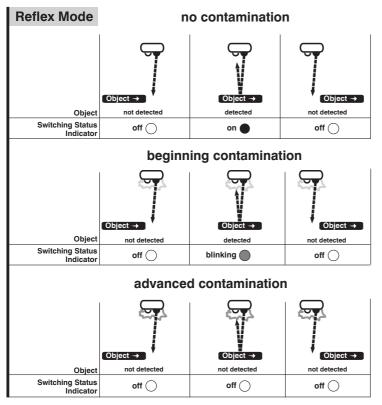

#### Required action in case of fault:

#### NOTE!

- Shut down the machine.
- Analyze and eliminate the cause of error with the help of the diagnostics information.
- If the error cannot be eliminated, please contact wenglor's support department.
  - Do not operate in case of indeterminate malfunctioning.
  - The machine must be shut down if the error cannot be unequivocally clarified or reliably eliminated.



#### DANGER!

#### Risk of personal injury or property damage in case of non-compliance!

The system's safety function is disabled. Personal injury and damage to equipment. • Required action as specified in case of fault.



# 6. Settings

## 6.1 Object Detection Directly in Front of a Background or an Undersurface

- Adjust and securely mount the sensor such that the spot strikes the object to be detected at a right angle.
- Turn the potentiometer all the way to the right.
- Remove the object and slowly turn the potentiometer back until the output is switched. The background or the undersurface is now suppressed.
- Put the object back under the spot and check to determine whether or not the sensor is activated again.

# 6.2 Detection of Objects Without Interfering Background

- Adjust and securely mount the sensor such that the spot strikes the object to be detected.
- Turn the potentiometer all the way to the left.
- Turn up the potentiometer up until activation occurs and, if required, turn it up a bit further for increased switching reliability.

# 7. IO-Link

Further settings are possible via the IO-Link interface. The IODD can be found at www.wenglor.com in the product's download area.

# 8. Maintenance Instructions

#### NOTE!

- This wenglor sensor is maintenance-free.
- Cleaning and inspection of the plug connections at regular intervals are advisable.
- Do not clean the sensor with solvents or cleansers which could damage the product.
- The product must be protected against contamination during initial start-up.

# 9. Proper Disposal

wenglor sensoric GmbH does not accept the return of unusable or irreparable products. Respectively valid national waste disposal regulations apply to product disposal.

# 10. Appendix

# **10.1 List of Abbreviations**

Abbreviation	Meaning
Tu	Ambient temperature
Ub	Supply voltage
IODD	IO Device Description
MTTFd	Mean Time to Dangerous Failure

## 10.2 Change Index, Operating Instructions

Version	Date	Description/Change
1.0.0	23.11.18	Initial version of the operating instructions
1.1.0	13.12.18	Updates of "3 Technical Data" on page 7 ff
1.2.0	28.01.19	Updates of "3 Technical Data" on page 7 ff
1.3.0	27.02.19	Updates of "3 Technical Data" on page 7 ff
1.4.0	28.05.19	Updates of "3 Technical Data" on page 7 ff

# **10.3 EU Declaration of Conformity**

The EU declaration of conformity can be found on our website at www.wenglor.com in the product's download area.