







Model Number

OBE12M-R101-S2EP-IO-0,3M-V1

Thru-beam sensor with fixed cable and M12 connector, 4-pin

Features

- Miniature design with versatile mounting options
- IO-link interface for service and process data
- Various frequencies for avoiding mutual interference (cross-talk immunity)
- Extended temperature range -40°C ... 60°C
- · High degree of protection IP69K


Product information

The miniature optical sensors are the first devices of their kind to offer an end-to- end solution in a small single standard design — from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.


The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.


Dimensions

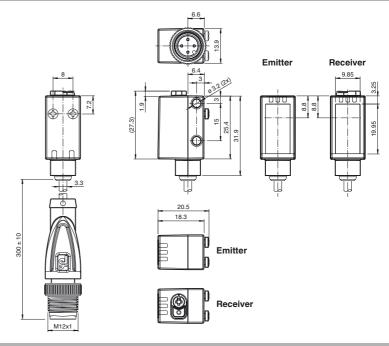

Electrical connection emitter

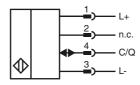

Electrical connection receiver

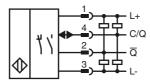

2 3 4

Pinout




Wire colors in accordance with EN 60947-5-2

DIN	(DIOWII)
WH	(white)
BU	(blue)
BK	(black)


281012 eng.xml

Indicators/operating means

Emitter

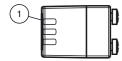

Receiver

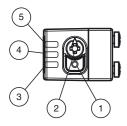

- Operating indicator
- Light-on/dark-on changeover switch
- Sensitivity adjuster
- 3 Operating indicator / light on
- 4 Signal indicator
- 5 Operating indicator / dark on

Accessories

V1-W-2M-PUR

Female cordset, M12, 4-pin, PUR cable

V1-G-2M-PUR

Female cordset, M12, 4-pin, PUR cable

IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

OMH-R101

Mounting Clamp

OMH-R101-Front

Mounting Clamp

OMH-4.1

Mounting Clamp

OMH-ML6

Mounting bracket

OMH-ML6-U

Mounting bracket

OMH-ML6-Z

Mounting bracket

V31-GM-2M-PUR

Female cordset, M8, 4-pin, PUR cable

V31-WM-2M-PUR

Female cordset, M8, 4-pin, PUR cable

Other suitable accessories can be found at www.pepperl-fuchs.com

FPEPPERL+FUCHS

Technical data		
System components		
Emitter		OBE12M-R101-S-IO-0,3M-V1
Receiver		OBE12M-R101-2EP-IO-0,3M-V1
General specifications		
Effective detection range		0 12 m
Threshold detection range		15 m
Light source		LED
Light type		modulated visible red light
LED risk group labelling		exempt group
Diameter of the light spot		approx. 65 mm at a distance of 1 m
Angle of divergence		3.7°
Ambient light limit		EN 60947-5-2 : 30000 Lux
Functional safety related para	meters	462 a
MTTF _d Mission Time (T _M)		20 a
Diagnostic Coverage (DC)		0 %
Indicators/operating means		0 /0
Operation indicator		LED green:
Operation indicator		constantly on - power on
		flashing (4Hz) - short circuit
		flashing with short break (1 Hz) - IO-Link mode
Function indicator		Yellow LED: Permanently lit - light path clear
		Permanently off - object detected
		Flashing (4 Hz) - insufficient operating reserve
Control elements		Receiver: light/dark switch
Control elements		Receiver: sensitivity adjustment
Parameterization indicator		IO link communication: green LED goes out briefly (1 Hz)
Electrical specifications		
Operating voltage	U _B	10 30 V DC
Ripple		max. 10 %
No-load supply current	I _O	Emitter: ≤ 14 mA Receiver: ≤ 13 mA at 24 V supply voltage
Protection class		III
Interface		
Interface type		IO-Link (via C/Q = pin 4)
Transfer rate		COM 2 (38.4 kBaud)
IO-Link Revision		1.1
Min. cycle time		2.3 ms
Process data witdh		Emitter:
		Process data output: 2 Bit Receiver:
		Process data input: 2 Bit
		Process data output: 2 Bit
SIO mode support		yes
Device ID		Emitter: 0x110401 (1115137)
0		Receiver: 0x110301 (1114881)
Compatible master port type		A
Input		and the order of the order of the order
Test input		emitter deactivation at +U _B
Output		The avoidable of the annual adjustable. The default
Switching type		The switching type of the sensor is adjustable. The default setting is:
		C/Q - Pin4: NPN normally open / dark-on, PNP normally close
		light-on, IO-Link
		/Q - Pin2: NPN normally closed / light-on, PNP normally oper dark-on
Signal output		2 push-pull (4 in 1)outputs, short-circuit protected, reverse
Oighai output		polarity protected, overvoltage protected
Switching voltage		max. 30 V DC
Switching current		max. 100 mA , resistive load
Usage category		DC-12 and DC-13
Voltage drop	U_d	≤ 1.5 V DC
Switching frequency	f	1000 Hz
Response time		0.5 ms
Ambient conditions		
Ambient temperature		-40 60 °C (-40 140 °F) , fixed cable -25 60 °C (-13 140 °F) , movable cable not appropriate f conveyor chains
Storage temperature		-40 70 °C (-40 158 °F)
= :		
Mechanical specifications		12.0 mm
Housing width		13.9 mm
Housing height		33.8 mm 18.3 mm
Housing depth Degree of protection		18.3 mm IP67 / IP69 / IP69K
Connection		300 mm fixed cable with M12 x 1, 4-pin connector
COLLICCTOLL		555 Hill lived capie with MTZ X 1, 4-pill conflector
Material		


Refer to "General Notes Relating to Pepperl+Fuchs Product Information".


Material

I	Thru-beam	sens


Housing	PC (Polycarbonate)	
Optical face	PMMA	
Mass	Emitter: approx. 10 g receiver: approx. 10 g	
Cable length	0.3 m	
Compliance with standards and directives		
Directive conformity		
EMC Directive 2004/108/EC	EN 60947-5-2:2007+A1:2012	
Standard conformity		
Product standard	EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012	
Standards	UL 60947-5-2: 2014 IEC 61131-9:2013 EN 62471:2008 EN 61131-9:2013	
Approvals and certificates		
UL approval	E87056 , cULus Listed , class 2 power supply , type rating 1	

Curves/Diagrams

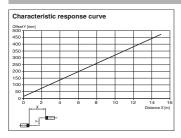

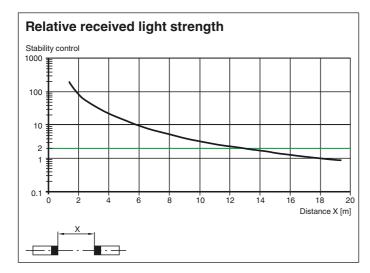

Functions and Operation

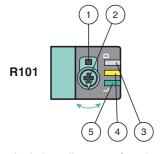

- 1 Light-on / dark-on changeover switch
- 2 Sensing range /sensitivity adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range adjuster for more than 180 degrees.

Sensing Range / Sensitivity

Turn sensing range / sensivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range /sensivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on / dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

Restore Factory Settings

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensivity adjustment is locked. In order to reactivate the sensing range / sensivity adjustment, turn the sensing range / sensivity adjuster for more than 180 degrees.