

Single-beam miniature sensor, ideal for installing in frames or door profiles


## CE


## Function

The narrow miniature thru-beam sensors are a small and cost-effective solution, fitting in virtually any door frame. The ML29 and ML30 series offer fast, reliable detection at a distance of up to 8.5 m. The sensors are easy to mount on the profile, either using adhesive strips or a screw. A large opening angle ensures problem-free alignment. Several sensors can be mounted in a cross formation to offer multi-beam protection.



#### **Dimensions**

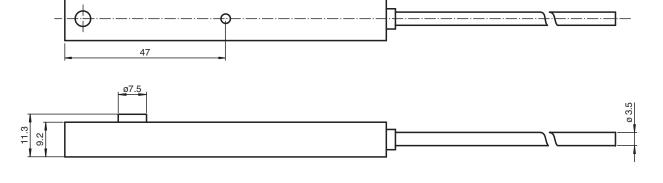



## **Technical Data**

System components		
Emitter		ML29-T/115
Receiver		ML29-R/59/102/115
General specifications		
Effective detection range		0 6 m
Threshold detection range		8.5 m
Light source		IRED
Light type		modulated infrared light
Angle of divergence		+/- 8 °
Optical face		lateral
Ambient light limit		40000 Lux
Functional safety related parameters		
MTTFd		880 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		0 %
Indicators/operating means		
Function indicator		LED red in receiver : lights up when receiving the light beam
Electrical specifications		
Operating voltage	$U_B$	11 30 V DC
No-load supply current	I <sub>0</sub>	Emitter: ≤ 25 mA Receiver: ≤ 10 mA
Input		
Test input		Test: Transmitter switches off at +UB $\leq$ 5 V DC

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Release date: 2020-03-27 Date of issue: 2020-03-27 Filename: 129313\_eng.pdf

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

## ML29-P/59/102/115

## **Technical Data**

Output		
Switching type		dark on
Signal output		1 NPN output, short-circuit protected, reverse polarity protected, open collector
Switching voltage		max. 30 V DC
Switching current		max. 0.1 A
Switching frequency	f	100 Hz
Response time		5 ms
Conformity		
Product standard		EN 60947-5-2
Compliance with standards and directives		
Standard conformity		
Standards		EN 61000-6-2, EN 61000-6-3
Approvals and certificates		
CCC approval		CCC approval / marking not required for products rated ≤36 V
Ambient conditions		
Ambient temperature		-20 60 °C (-4 140 °F)
Storage temperature		-20 75 °C (-4 167 °F)
Relative humidity		90 % , noncondensing
Mechanical specifications		
Degree of protection		IP65
Connection		6 m fixed cable
Material		
Housing		PMMA , black
Optical face		Plastic pane
Mass		per device 12 g


## **Connection Assignment**

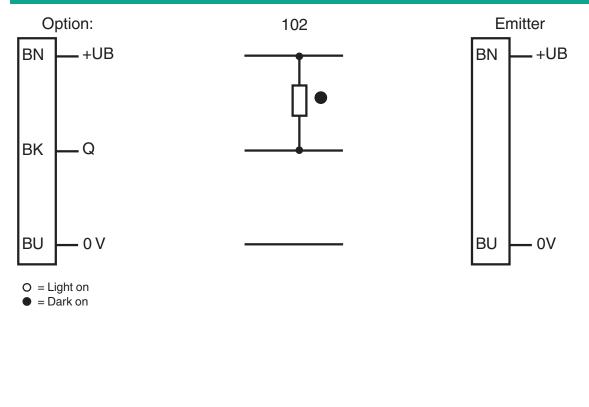


Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

3






## **Characteristic Curve**

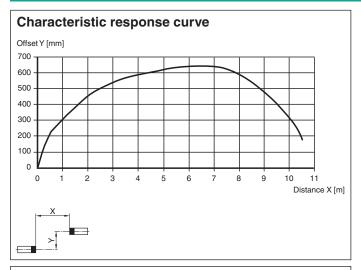

#### **Relative received light strength**

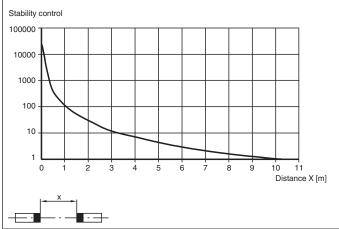

Release date: 2020-03-27 Date of issue: 2020-03-27 Filename: 129313\_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

4

## Thru-beam sensor

## **Application**



# Accessories



Front plate for thru-beam sensors in series ML29

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".



#### Function

#### Static detection:

The thru-beam sensor detects persons and objects independently of movement and surface structure for as long as the object breaks the detection beam.

		Electronic output
Light detection /25	Person in the beam	Inactive
	No person in the beam	Active
Dark detection /59	Person in the beam	Active
	No person in the beam	Inactive

#### **Optics:**

The relatively wide opening angles enable the light beam switches to be installed quickly, without alignment problems. Even if there is a light distortion of the installation profiles the function is retained.

#### **Testing:**

Testing is used to check the function of the light beam switch.

With supply voltage  $+U_B < 5$  V the emitter device is switched off. This simulates a light beam interruption. By means of this, the function of the light barrier can be tested easily without using a separate test input.


#### Installation:

Thanks to its small dimensions, the light beam can be fitted in a U-profile or behind a face panel. The hole diameter for both the emitter and the receiver is 8 mm.

Even fixing by means of the adhesive tape contained in the delivery package can be considered.

#### Installation of twin-beam arrangement:

A twin-beam version requires 2 emitters and receivers. Care should be taken that the beam separation is not less than 20 cm. The transmitters and receivers must be arranged in the form of a cross.

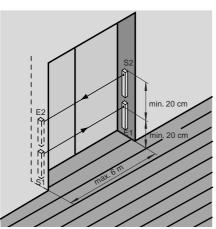

## Accessories

Other suitable accessories can be found at www.pepperl-fuchs.com

#### **Function principle**

The thru-beam sensor requires a pair of devices for operation, comprising a light transmitter and a light receiver. The emitter and receiver must be arranged in optical alignment with each other. The infrared light from the emitter is detected by the receiver and evaluated.

# Application

Refer to "General Notes Relating to Pepperl+Fuchs Product Information

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com



#### Thru-beam sensor

- Person detection for automatic doors and gates
- Closing edge protection on sliding and revolving doors
- Threshold monitoring for elevator doors
- Step monitoring for doors on public transport vehicles
- Trigger function for restarting escalators

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

