

Model Number

OBT100-R101-EP-IO-0,3M-V3-L

Triangulation sensor (BGS) with fixed cable and 3-pin, M8 connector


Features

- Miniature design with versatile • mounting options
- DuraBeam Laser Sensors durable ٠ and employable like an LED
- Extended temperature range • -40°C ... 60°C
- High degree of protection IP69K
- IO-link interface for service and process data

Product information

The miniature optical sensors are the first devices of their kind to offer an end-to- end solution in a small single standard design from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks. The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

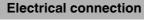




Pinout



Indicators/operating means

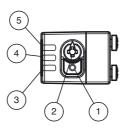

1	Light-on/dark-on changeover switch
2	Sensing range adjuster
3	Operating indicator / dark on
4	Signal indicator
5	Operating indicator / light on

Pepperl+Fuchs Group

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" www.pepperl-fuchs.com

fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

⁵ PEPPERL+FUCHS 1

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111

Technical data

General specifications Detection range Detection range min. Detection range max Adjustment range Reference target Light source Light type Laser nominal ratings Note Laser class Wave length Beam divergence Pulse length Repetition rate max. pulse energy Black/White difference (6 %/90 %) Diameter of the light spot Angle of divergence Ambient light limit Functional safety related parameters MTTF_d Mission Time (T_M) Diagnostic Coverage (DC) Indicators/operating means Operation indicator Function indicator Control elements Control elements

Electrical specifications Operating voltage Ripple No-load supply current Protection class Interface Interface type Device profile Transfer rate **IO-Link Revision** Min. cycle time Process data witdh SIO mode support Device ID Compatible master port type Output Switching type

Signal output

Switching current Usage category Voltage drop Switching frequency Response time Conformity

Switching voltage

Communication interface Product standard Laser safety Ambient conditions

Ambient temperature

Storage temperature Mechanical specifications

www.pepperl-fuchs.com

Housing width

7 ... 100 mm 7 ... 25 mm 7 ... 100 mm 25 ... 100 mm standard white, 100 mm x 100 mm laser diode modulated visible red light

LASER LIGHT , DO NOT STARE INTO BEAM

680 nm > 5 mrad d63 < 1 mm in the range of 150 mm ... 250 mm 3 μs approx. 13 kHz 10.4 nJ < 5 % at 80 mm < 1 mm at a distance of 60 mm approx. 0.3 ° EN 60947-5-2 : 40000 Lux

560 a

UR

 I_0

20 a

0%

LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode LED yellow: constantly on - object detected constantly off - object not detected Light-on/dark-on changeover switch Sensing range adjuster

10 ... 30 V DC max. 10 % < 20 mA at 24 V supply voltage III

IO-Link (via C/Q = pin 4) Smart Sensor COM 2 (38.4 kBaud) 1.1 2.3 ms Process data input 1 Bit Process data output 2 Bit yes 0x110603 (1115651)

A

The switching type of the sensor is adjustable. The default setting is C/Q - Pin4: NPN normally open / light-on, PNP normally closed / dark-on, IO-Link 1 push-pull (4 in 1) output, short-circuit protected, reverse polarity protected, overvoltage protected max. 30 V DC max. 100 mA , resistive load DC-12 and DC-13 \leq 1.5 V DC 1650 Hz 300 us IEC 61131-9 EN 60947-5-2 EN 60825-1:2014 -40 ... 60 °C (-40 ... 140 °F) , fixed cable -25 ... 60 °C (-13 ... 140 °F) , movable cable not appropriate for conveyor chains -40 ... 70 °C (-40 ... 158 °F)



LASER PRODUCT

CLASS 1

CLASS 1 LASER PRODUCT IEC 60825-1: 2007 certified. Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

Accessories

IO-Link-Master02-USB IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

V3-WM-2M-PUR Cable socket, M8, 3-pin, PUR cable

OMH-R101 Mounting Clamp

OMH-R101-Front Mounting Clamp

OMH-4.1 Mounting Clamp

OMH-ML6 Mounting bracket

OMH-ML6-U Mounting bracket

OMH-ML6-Z Mounting bracket

V31-GM-2M-PUR Female cordset, M8, 4-pin, PUR cable

V31-WM-2M-PUR Female cordset, M8, 4-pin, PUR cable

Other suitable accessories can be found at www.pepperl-fuchs.com

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 G

Ud

USA: +1 330 486 0001 Germany: fa-info@us.pepperl-fuchs.com fa-info@de

13.9 mm

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com


Housing height	33.8 mm
Housing depth	18.3 mm
Degree of protection	IP67 / IP69 / IP69K
Connection	300 mm fixed cable with M8 x 1, 3-pin connector
Material	
Housing	PC (Polycarbonate)
Optical face	PMMA
Mass	approx. 17 g


Approvals and certificates


UL approval FDA approval

E87056 , cULus Listed , class 2 power supply , type rating 1 IEC 60825-1:2007 Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

Curves/Diagrams

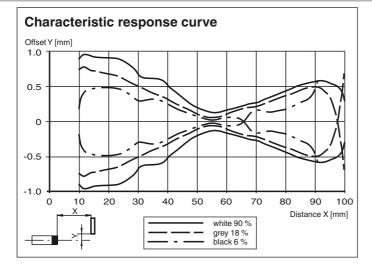

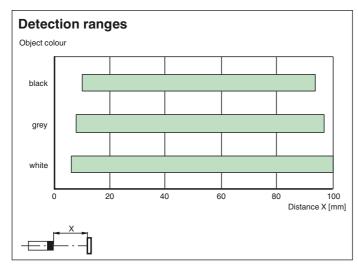

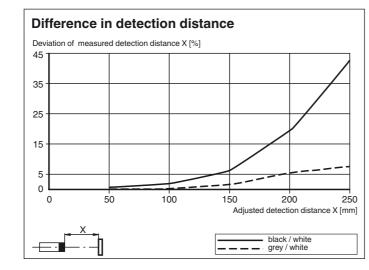

Release date: 2019-03-26 09:37 Date of issue: 2019-03-26 267075-100241_eng.xml


Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com


Light spot diameter

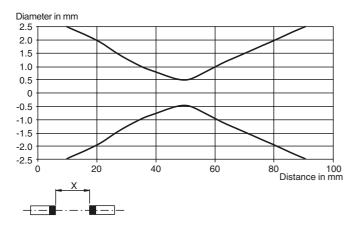

Black-White-Ratio / Grey- White Ratio

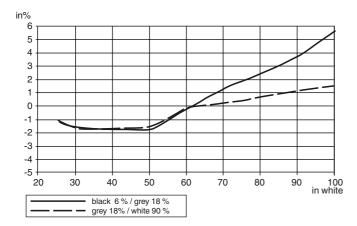

Functions and Operation

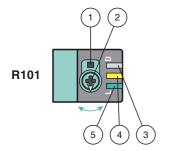

- 1 Light-on / dark-on changeover switch
- 2 Sensing range /sensitivity adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range adjuster for more than 180 degrees.

Sensing Range / Sensitivity

Turn sensing range / sensivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range /sensivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on / dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

Restore Factory Settings

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

	Refer to "General Notes Relating to Pepperl+Fuchs Product Information".					
4	Pepperl+Fuchs Group	USA: +1 330 486 0001	Germany: +49 621 776 1111	Sing		
	www.pepperl-fuchs.com	fa-info@us.pepperl-fuchs.com	fa-info@de.pepperl-fuchs.com	fa-info@		

After 5 minutes of inactivity the sensing range / sensivity adjustment is locked. In order to reactivate the sensing range / sensivity adjustment, turn the sensing range / sensivity adjuster for more than 180 degrees.

Pepperl+Fuchs Group www.pepperl-fuchs.com Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com