

(∈ c



Model Number

OMT300-R201-2EP-IO-0,3M-V1

Distance sensor with fixed cable and M12 connector, 4-pin

Features

- Medium design with versatile mounting options
- Space-saving distance sensors in small standardized design
- Multi Pixel Technology (MPT) exact and precise signal evaluation
- IO-link interface for service and process data

Product information

The optical sensors in the series are the first devices to offer an end-to-end solution in a medium-sized standard design—from the thru-beam sensor through to the measuring distance sensor. As a result of this design, the sensors are able to perform practically all standard automation tasks.


The entire series enables sensors to communicate via IO-Link.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.


Multi Pixel Technology (MPT) ensures that the standard sensors are flexible and

can be adapted to the application environment.

Dimensions

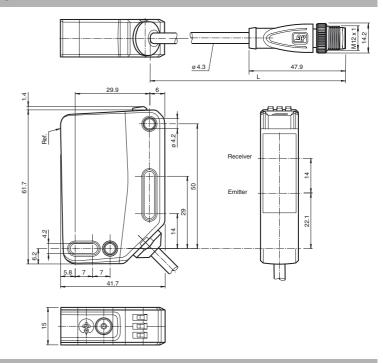


Electrical connection



Pinout



Indicators/operating means

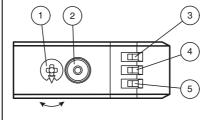

	0	
Q2	8	ŏ
	4 V/V >	
Ø	4	3

2	Teach-in button					
3	Switching output display Q2	YE				
4	Switching output display Q1	YE				
5	Operating indicator					

1 Mode rotary switch

Q1B	Switching output 1/switch point B
Q1A	Switching output 1/switch point A
Q2A	Switching output 2/switch point A
Q2B	Switching output 2/switch point B
0	Keylock

Technical data		
General specifications		100
Measurement range		100 300 mm
Reference target Light source		standard white, 100 mm x 100 mm
Light type		modulated visible red light
LED risk group labelling		exempt group
Angle deviation		max. +/- 1.5 °
Diameter of the light spot		approx. 8 mm at a distance of 300 mm
Angle of divergence		1.8 °
Ambient light limit		EN 60947-5-2 : 45000 Lux
Resolution		0.1 mm
Functional safety related parame	eters	
MTTF _d		600 a
Mission Time (T _M)		20 a 0 %
Diagnostic Coverage (DC)		0 %
Indicators/operating means Operation indicator		LED green:
Operation indicator		constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode
Function indicator		LED yellow:
		constantly on - switch output active constantly off - switch output inactive
Control elements		Teach-In key
Control elements Electrical specifications		5-step rotary switch for operating modes selection
Operating voltage	U _R	10 30 V DC
Ripple	ОВ	max. 10 %
No-load supply current	I ₀	< 25 mA at 24 V supply voltage
Protection class	•	III
Interface		
Interface type		IO-Link (via $C/Q = pin 4$)
Device profile		Identification and diagnosis Smart Sensor type 0/type 3.3
Transfer rate		COM 2 (38.4 kBaud)
IO-Link Revision		1.1
Min. cycle time		3 ms
Process data witdh		Process data input 4 byte Process data output 2 bits
SIO mode support Device ID		yes 0x111914 (1120532)
Compatible master port type		A
Output Switching type		The default setting is:
		C/Q - Pin4: NPN normally open, PNP normally closed, IO-Link Q2 - Pin2: NPN normally open, PNP normally closed
Signal output		2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected
Switching voltage		max. 30 V DC
Switching current		max. 100 mA, resistive load
Usage category	Ud	DC-12 and DC-13 ≤ 1.5 V DC
Voltage drop Response time	od	2 ms , see table 1
Conformity		, 500 100 1
Communication interface		IEC 61131-9
Product standard		EN 60947-5-2
Measurement accuracy		
Temperature drift		0.05 %/K
Warm up time		5 min
Repeat accuracy		< 0.5 % , see table 1
Linearity error		0.5 %
Ambient conditions		10 60 °C (50 140 °E)
Ambient temperature Storage temperature		10 60 °C (50 140 °F) -40 70 °C (-40 158 °F)
Mechanical specifications		.5
Housing width		15 mm
Housing height		61.7 mm
Housing depth		41.7 mm
Degree of protection		IP67 / IP69 / IP69K
Connection		300 mm fixed cable with M12 x 1, 4-pin connector
Material		PC (Polygarhonata)
Housing Optical face		PC (Polycarbonate) PMMA
Mass		approx. 55 g
Cable length		0.3 m
-		

Accessories

V1-G-2M-PUR

Female cordset, M12, 4-pin, PUR cable

V1-W-2M-PUR

Female cordset, M12, 4-pin, PUR cable

IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

OMH-RL31-02

Mounting bracket narrow

OMH-RL31-03

Mounting bracket narrow

OMH-RL31-04

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

OMH-RL31-07

Mounting bracket including adjustment

OMH-R20x-Quick-Mount

Quick mounting accessory

Other suitable accessories can be found at www.pepperl-fuchs.com

FPEPPERL+FUCHS

Approvals and certificates

UL approval E87056, cULus Listed, class 2 power supply, type rating 1
CCC approval CCC approval / marking not required for products rated ≤36 V

Table 1: Information on Measured Value Filters

Measured value filter									
Filter	1-way	2-way	4-way	16-way	64-way	256-way			
Response time (ms)	2	4	8	32	128	512			
Repeatability (%)	< 0.5 %								

Settings

Teach-In (TI)

Use the rotary switch for switching signal Q1 or Q2 to select the relevant switching threshold A and/or B to teach in.

• The yellow LEDs indicate the current state of the selected output.


To teach in a switching threshold, press and hold the "TI" button for approximately 1 s, until the yellow and green LEDs flash in phase. Teach-in starts when the "TI" button is released.

- Teach-in successful: the yellow and green LEDs flash alternately at 2.5 Hz.
- Teach-in unsuccessful: the yellow and green LEDs quickly flash alternately at 8 Hz.


After an unsuccessful Teach-in, the sensor continues to operate with the previous valid setting after the relevant visual fault signal is issued.

Set switching mode: you can define different switching modes by teaching in the relevant distance data for switching thresholds A and B.

1. Single point mode:



2. Window mode:



Teach in switching thresholds: you can teach in or overwrite a taught-in switching threshold at any time. To do this, press the "TI" button again.

Reset a value: you can reset a taught-in value. To do this, press the "TI" button for > 4 s, until the yellow and green LEDs go out. The reset process itself starts when the "TI" button is released.

· Reset successful: the yellow and green LEDs flash alternately at 2.5 Hz.

Resetting to Factory Settings

To revert back to factory settings, press the "TI" button for > 10 s with the rotary switch set to position "O," until the yellow and green LEDs go out at the same time. The reset process itself starts when the "TI" button is released.

 Reset to factory settings successful: the yellow and green LEDs light up at the same time. The sensor then continues to operate with factory settings.

OMT

295670-100185_eng.xml

2019-10-31

- Factory setting for switching signal Q1: Switching signal is high active, window mode
- Factory setting for switching signal Q2: Switching signal is high active, window mode

Configuration via IO-Link interface

Setting different operating modes via the IO-Link interface

active detection range

The devices are equipped with an IO-Link interface as standard for diagnostics and parameterization tasks to ensure optimum adjustment of the sensors to the relevant application.

Single point mode operating mode (one switch point):

- "Detection of objects irrespective of type and color in a defined detection range. Objects in the background are suppressed.
- "The switch point corresponds exactly to the set point.

Background suppression


Window mode operating mode (two switch points):

- Detection of objects irrespective of type and color in a defined detection range. Reliable detection when object leaves the detection range.
- · Window mode with two switch points.




Center window mode operating mode (one switch point):

- Detection of objects irrespective of type and color in a defined detection range. Sets a defined window around a given object. Objects outside this window are not detected.
- Window mode with one switch point.



Two point mode operating mode (hysteresis operating mode):

· Detection of objects irrespective of type and color between a defined switch-on and switch-off point.



Inactive operating mode:

· Evaluation of switching signals is deactivated.

The associated IODD device description file can be found in the download area at www.pepperl-fuchs.com.