











Model Number

VDM28-15-L1/73c/136

Distance sensor with 4-pin, M12 x 1 connector

Features


- Distance measurement using object
- Measuring method PRT (Pulse Ranging Technology)
- Accurate, clear, and reproducible measuring results
- Minimal black-white difference
- Red laser as the light emitter
- Laser class 1, eyesafe

Product information


The VDM28 distance measurement device employs Pulse Ranging Technology (PRT). It has a repeat accuracy of 5 mm with an operating range of 0.2 ... 15 m and an absolute accuracy of 25 mm.

The compact housing of the Series 28 photoelectric sensors, with dimensions of 88 mm (height), 26 mm (width) and 54 mm (depth), make it the smallest device available in its class.

Dimensions

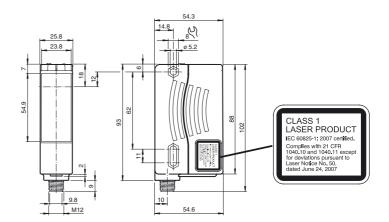

Electrical connection

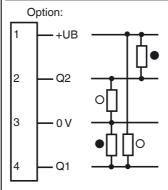


- O = Light on
- = Dark on

Pinout

Wire colors in accordance with EN 60947-5-2

(brown) (white) (blue) (black)

Indicators/operating means



1	Operating display	green
2	Signal display	yellow
3	TEACH-IN button	
4	Mode rotary switch	
5	Laser output	

Technical data

General specifications

Measurement range 0.2 ... 15 m Kodak white (90%) Reference target

Light source laser diode typ. service life 85,000 h at Ta = +25 °C

Light type modulated visible red light

Laser nominal ratings

LASER LIGHT, DO NOT STARE INTO BEAM Note

Laser class Wave length 660 nm Beam divergence 1 mrad Pulse length approx. 4 ns Repetition rate 250 kHz max. pulse energy < 1.5 nJAngle deviation max. ± 2°

Pulse Ranging Technology (PRT) Measuring method Diameter of the light spot < 15 mm at a distance of 15 m at 20 °C

Ambient light limit 50000 Lux Temperature influence typ. ≤ 0.25 mm/K

Functional safety related parameters

 $MTTF_d$ 200 a Mission Time (T_M) 10 a Diagnostic Coverage (DC) 0 %

Indicators/operating means

Operation indicator LED green

Function indicator 2 LEDs yellow for switching state

Teach-In indicator Teach-In: LED green/yellow equiphase flashing; 2.5 Hz Teach Error:LED green/yellow non equiphase flashing; 8.0 Hz

5-step rotary switch for operating modes selection (threshold

setting and operating modes) Switch for setting the threshold values

Electrical specifications

Control elements

Control elements

Operating voltage 10 ... 30 V DC, class 2 Ripple

10 % within the supply tolerance No-load supply current ≤ 125 mA / 24 V DC

I۵ Time delay before availability 1.5 s

Output

Signal output 2 push-pull (4 in 1) outputs, short-circuit protected, reverse

10 ms

polarity protected Switching voltage max. 30 V DC Switching current max. 100 mA Switching frequency 50 Hz

Measurement accuracy

Response time

Absolute accuracy ± 25 mm Repeat accuracy < 5 mm

Ambient conditions

Ambient temperature -30 ... 55 °C (-22 ... 131 °F) -30 ... 70 °C (-22 ... 158 °F) Storage temperature

Mechanical specifications

Housing width 25.8 mm Housing height 88 mm Housing depth 54.3 mm IP67 Degree of protection

Connection 4-pin, M12 x 1 connector

Material

Housing Plastic ABS Optical face Plastic pane Mass 90 g

Compliance with standards and

directives

2

Standard conformity Product standard

EN 60947-5-2 Laser class

IEC 60825-1:2007 Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated

June 24, 2007

Approvals and certificates

Protection class II, rated voltage ≤ 250 V AC with pollution degree 1-2

according to IEC 60664-1

UL approval cULus Listed, Class 2 Power Source, Type 1 enclosure CCC approval CCC approval / marking not required for products rated ≤36 V

Laserlabel

CLASS 1 LASER PRODUCT

IEC 60825-1: 2007 certified.

Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

Accessories

OMH-05

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

Mounting bracket

OMH-22

Mounting bracket

OMH-MLV11-K

dove tail mounting clamp

OMH-RLK29-HW

Mounting bracket for rear wall mounting

OMH-RL28-C

Weld slag cover model

OMH-K01

dove tail mounting clamp

OMH-K03

dove tail mounting clamp

OMH-VDM28-01

Metal enclosure for inserting protective panes or apertures

OMH-VDM28-02


Mounting and fine adjustment device for sensors from the 28 series

Other suitable accessories can be found at www.pepperl-fuchs.com

PEPPERL+FUCHS



Curves/Diagrams

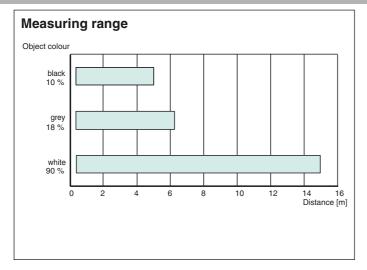

Preferences

Teach-In:

You can use the rotary switch to select the output Q1 or Q2 and the relevant switching threshold A or B for teaching in.

The yellow LEDs indicate the current state of the selected output.


To store a switching threshold (distance measured value), press and hold the "SET" button until the yellow and green LEDs flash in phase (approx. 2 s). Teach-In starts when the "SET" button is released.

A successful Teach-In is indicated by rapidly alternating flashing (2.5 Hz) of the yellow and green LEDs.

An unsuccessful Teach-In is indicated by alternating flashing (8 Hz) of the yellow and green LEDs.

After an unsuccessful Teach-In, the sensor continues to operate with the previous valid setting after the relevant visual fault signal is issued.

Different switching modes can be defined by teaching in the relevant distance measured values for the switching thresholds A and B:

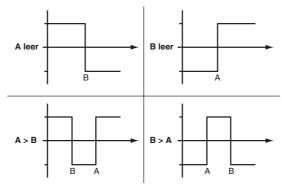

Every taught-in switching threshold can be retaught (overwritten) by pressing the SET button again.

Pressing and holding the "SET" button for > 5 s completely deletes the taught-in value. The yellow and green LEDs go out simultaneously to indicate that this procedure has been completed.

Default setting:

In general, no switching points are set at the factory. The outputs are switched to low.

Reset to default settings:

- Set the rotary switch to the "RUN" position
- Press and hold the "SET" button until the yellow and green LEDs stop flashing in phase (approx. 10 s)
- If the green LED lights up, the procedure is complete.

Error messages:

- · Short circuit: In the event of a short circuit at the sensor output, the green LED flashes with a frequency of approx. 4 Hz.
- Teach error:In the event of a teach error, the yellow and green LEDs flash alternately with a frequency of approx. 8 Hz.

0

eng.xml

297895

Date of issue: 2017-10-16

Release date: 2017-10-16 12:26

Note!

The difference in the taught-in distance measured values for the switching thresholds A and B must be greater than the switching hysteresis set in the

On delivery, the switching hysteresis is 15 mm.

If the difference in the taught-in measured values is the same as or smaller than the set switching hysteresis, the sensor will visually signal an unsuccessful Teach-In. The last distance measured value that was taught in will not be adopted by the sensor.

Select a new distance measured value for switching threshold A or B with a greater difference between the switching thresholds.

Teach in this distance measured value on the sensor again.



Laser notice laser class 1

- The irradiation can lead to irritation especially in a dark environment. Do not point at people!
- Maintenance and repairs should only be carried out by authorized service personnel!
- Attach the device so that the warning is clearly visible and readable.
- Caution Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

FPEPPERL+FUCHS