




CE

Operating instructions
Electronic pressure sensor

PK57xx

UK

11450536 / 00 03 / 2020

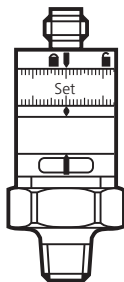

Contents

| | | |
|-----|--------------------------------|---|
| 1 | 1 Preliminary note..... | 2 |
| 1.1 | 1.1 Symbols used | 2 |
| 2 | 2 Safety instructions | 2 |
| 3 | 3 Functions and features | 3 |
| 4 | 4 Installation..... | 4 |
| 5 | 5 Electrical connection..... | 4 |
| 6 | 6 Setting / operation..... | 5 |

1 1 Preliminary note

1.1 Symbols used

- ▶ Instruction
- > Reaction, result
- [...] Designation of keys, buttons or indications
- Cross-reference



Important note

Non-compliance may result in malfunction or interference



Information

Supplementary note

2 Safety instructions

- The device described is a subcomponent for integration into a system.
 - The manufacturer is responsible for the safety of the system.
 - The system manufacturer undertakes to perform a risk assessment and to create a documentation in accordance with legal and normative requirements to be provided to the operator and user of the system. This documentation must contain all necessary information and safety instructions for the operator, the user and, if applicable, for any service personnel authorised by the manufacturer of the system.
- Read this document before setting up the product and keep it during the entire service life.
- The product must be suitable for the corresponding applications and environmental conditions without any restrictions.

- Only use the product for its intended purpose (→ Functions and features).
- Only use the product for permissible media (→ Technical data).
- If the operating instructions or the technical data are not adhered to, personal injury and/or damage to property may occur.
- The manufacturer assumes no liability or warranty for any consequences caused by tampering with the product or incorrect use by the operator.
- Installation, electrical connection, set-up, programming, configuration, operation and maintenance of the product must be carried out by personnel qualified and authorised for the respective activity.
- Protect units and cables against damage.

3 Functions and features

The pressure sensor detects the system pressure and switches the output OUT (pin 4):

- In case of increasing pressure, OUT closes when the set Set value is reached.
- In case of falling pressure OUT opens when the Set value less the fixed hysteresis is reached.
- The hysteresis is fixed to 2 % of the final value of the measuring range.

Application

Type of pressure: relative pressure

| Order number | Measuring range | | Pressure resistance (max. permissible pressure) | | Bursting pressure | |
|--------------|-----------------|---------|---|-----|-------------------|-----|
| | bar | MPa | bar | MPa | bar | MPa |
| PK5722 | 0...100 | 0...10 | 200 | 20 | 1000 | 100 |
| PK5723 | 0...25 | 0...2,5 | 60 | 6 | 500 | 50 |



Avoid static and dynamic overpressure exceeding the specified max. permissible pressure by taking appropriate measures!

The indicated bursting pressure must not be exceeded!

Even if the bursting pressure is exceeded only for a short time, the unit may be destroyed! ATTENTION: risk of injury!!



If the cable length exceeds 30 m or if used outside buildings, there is a risk of overvoltage pulses from external sources. We recommend to use the unit in protected operating environments and to limit overvoltage pulses to max. 500 V.



Pressure Equipment Directive (PED):

The units comply with the Pressure Equipment Directive and are designed and manufactured for group 2 fluids in accordance with the sound engineering practice. Use of group 1 fluids on request!

4 Installation



Before installing and removing the unit: Make sure that no pressure is applied to the system.

- ▶ Insert the unit in a R $\frac{1}{4}$ process connection.
- ▶ Tighten firmly.



Recommended tightening torque: 25 Nm

Depends on lubrication, seal and pressure load!

5 Electrical connection




The unit must be connected by a qualified electrician.

The national and international regulations for the installation of electrical equipment must be adhered to. Voltage supply to SELV, PELV.

- ▶ Disconnect power.
- ▶ Connect the unit as follows:

| | | | |
|------------------------|-------|--|--|
| Core colours | | | |
| BK | black | | |
| BN | brown | | |
| BU | blue | | |
| | | OUT: switching output Colours to DIN EN 60947-5-2 | |
| Example circuit | | | |
| positive switching | | | |
| | | | |
| 4: OUT= normally open | | | |

6 Setting / operation

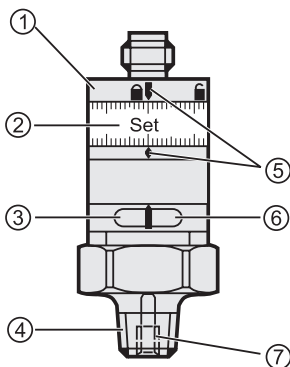

- 1: locking ring
 - 2: setting rings (manually adjustable after unlocking)
 - 3: LED green: operating voltage ok
 - 4: process connection R $\frac{1}{4}$ male
 - 5: setting marks
 - 6: LED yellow: Set value reached, OUT = ON
 - 7: internal M5 thread
- To achieve the setting accuracy:
 - ▶ First position the ring to the lower end stop value.
 - ▶ Then set the requested value.

More information at www.ifm.com