

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



1

UB300-18GM40A-E5-V1

A2

A1

object distance

**Additional Information** 

Programmable output modes 1. Window mode, normally open mode

**A1** 

2. Window mode, normally closed mode

A2

3. One switch point, normally open mode

A2

4. One switch point, normally closed mode

ſ

A1

5. A1 ->  $\infty$ , A2 ->  $\infty$ : Object presence detection mode Object detected: Switch output closed No object detected: Switch output open


A1 < A2:


A2 < A1:

A1 -> ∞:

A2 -> ∞:


## Dimensions

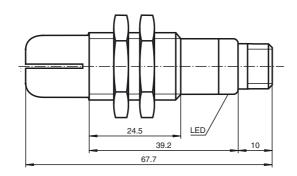

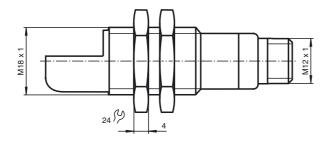

## **Electrical Connection**

Standard symbol/Connections: (version E5, pnp)

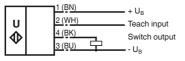

Core colours in accordance with EN 60947-5-2.

## **Pinout**



Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)

Refer to "General Notes Relating to Pepperl+Fuchs Product Information". Pepperl+Fuchs Group www.pepperl-fuchs.com



Release date: 2016-04-25 09:29 Date of issue: 2016-04-25 220351\_eng.xml

## Accessories

# UB-PROG2

Programming unit

## OMH-04

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

# BF 18

Mounting flange, 18 mm

## BF 18-F

Mounting flange with dead stop, 18 mm

## BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

# V1-G-2M-PVC

Female cordset, M12, 4-pin, PVC cable

### V1-W-2M-PUR

Female cordset, M12, 4-pin, PUR cable

## Adjusting the switching points

The ultrasonic sensor features a switch output with two teachable switching points. These are set by applying the supply voltage  $-U_B$  or  $+U_B$  to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with  $-U_B$ , A2 with  $+U_B$ .

Five different output functions can be set

- 1. Window mode, normally-open function
- 2. Window mode, normally-closed function
- 3. one switching point, normally-open function
- 4. one switching point, normally-closed function
- 5. Detection of object presence

## TEACH-IN window mode, normally-open function

- Set target to near switching point
- TEACH-IN switching point A1 with -UB
- Set target to far switching point
- TEACH-IN switching point A2 with  $+U_B$

## TEACH-IN window mode, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A2 with  $+ \mathrm{U}_\mathrm{B}$
- Set target to far switching point
- TEACH-IN switching point A1 with -U\_B

## **TEACH-IN** switching point, normally-open function

- Set target to near switching point
- TEACH-IN switching point A2 with +U\_B
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -UB

## TEACH-IN switching point, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A1 with -UB
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with +UB

## **TEACH-IN** detection of objects presence

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -UB
- TEACH-IN switching point A2 with +UB

## LED Displays

Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN switching point:		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	On	off
Normal operation	off	Switching state
Fault	on	Previous state

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

