

**O**IO-Link US

### **Model Number**

## OBE20M-R101-S2EP-IO-V31-L

Laser thru-beam sensor with 4-pin, M8 x 1 connector


### **Features**

- Miniature design with versatile • mounting options
- DuraBeam Laser Sensors durable ٠ and employable like an LED
- IO-link interface for service and • process data
- Various frequencies for avoiding mutual interference (cross-talk immunity)
- Extended temperature range -40°C ... 60°C
- High degree of protection IP69K


### **Product information**

The miniature optical sensors are the first devices of their kind to offer an end-to- end solution in a small single standard design from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks. The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

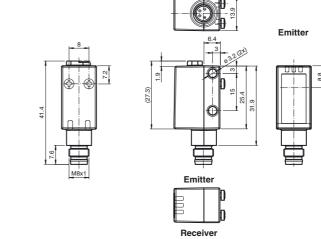


18.3

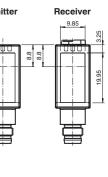


### **Electrical connection emitter**

**Dimensions** 

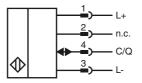

### **Electrical connection receiver**

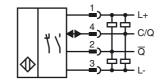

### Pinout



USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

### <sup>5</sup> PEPPERL+FUCHS 1

Emitter

Receiver

5

3

์ 1

# Indicators/operating means Laserlabel Operating indicator 1 CLASS 1 LASER PRODUCT CLASS 1 LASER PRODUCT 1 Light-on/dark-on changeover switch IEC 60825-1: 2007 certified. 2 Sensitivity adjuster Complies with 21 CFR 1040.10 and 1040.11 except $(\mathbf{Q})$ 3 Operating indicator / light on for deviations pursuant to Laser Notice No. 50, dated June 24, 2007 M 4 Signal indicator 5 Operating indicator / dark on CLASS 1 LASER PRODUCT IEC 60825-1: 2007 certified. Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007 Accessories IO-Link-Master02-USB IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection **OMH-R101** Mounting Clamp OMH-R101-Front Mounting Clamp **OMH-4.1** Mounting Clamp OMH-ML6 Mounting bracket OMH-ML6-U Mounting bracket OMH-ML6-Z Mounting bracket V31-GM-2M-PUR 281016\_eng.xm Female cordset single-ended, M8, 4-pin, PUR cable V31-WM-2M-PUR Female cordset single-ended, M8, 4-pin, 4 PUR cable PUR cable Other suitable accessories can be found at $\begin{bmatrix} 1 & 1 \\ 0 & 1 \end{bmatrix}$ www.pepperl-fuchs.com Release date: 2019-11-14 11:11 Date of issue:

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

2

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

<b>-</b>	
Technical data	
System components	
Emitter Receiver	OBE20M-R101-S-IO-V31-L OBE20M-R101-2EP-IO-V31-L
General specifications	OBE20M-R101-2EP-10-V31-L
Effective detection range	0 20 m
Threshold detection range	30 m
Light source	laser diode
Light type	modulated visible red light
Laser nominal ratings	
Note Laser class	LASER LIGHT , DO NOT STARE INTO BEAM
Wave length	680 nm
Beam divergence	> 5 mrad ; d63 < 2 mm in the range of 250 mm 750 mm
Pulse length	1.6 µs
Repetition rate	max. 17.6 kHz
max. pulse energy	9.6 nJ
Diameter of the light spot	approx. 50 mm at a distance of 20 m approx. 0.3 °
Angle of divergence Ambient light limit	EN 60947-5-2 : 30000 Lux
Functional safety related paramet	
MTTF <sub>d</sub>	440 a
Mission Time (T <sub>M</sub> )	20 a
Diagnostic Coverage (DC)	0 %
Indicators/operating means	
Operation indicator	LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode
Function indicator	Yellow LED: Permanently lit - light path clear Permanently off - object detected Flashing (4 Hz) - insufficient operating reserve
Control elements	Receiver: light/dark switch
Control elements	Receiver: sensitivity adjustment
Parameterization indicator	IO link communication: green LED goes out briefly (1 Hz)
Electrical specifications Operating voltage	U <sub>B</sub> 10 30 V DC
Ripple	max. 10 %
No-load supply current	$I_0$ Emitter: $\leq$ 13 mA Receiver: $\leq$ 13 mA at 24 V supply voltage
Protection class	III
Interface	
Interface type	IO-Link (via $C/Q = pin 4$ )
Transfer rate IO-Link Revision	COM 2 (38.4 kBaud) 1.1
Min. cycle time	2.3 ms
Process data witdh	Emitter: Process data output: 2 Bit Receiver: Process data input: 2 Bit Process data output: 2 Bit
SIO mode support	yes
Device ID	Emitter: 0x110402 (1115138) Reciever: 0x110302 (1114882)
Compatible master port type	A
Input Test input	emitter deactivation at ±LL-
Test input Output	emitter deactivation at +U <sub>B</sub>
Switching type	The switching type of the sensor is adjustable. The default setting is: C/Q - Pin4: NPN normally open / dark-on, PNP normally closed / light-on, IO-Link /Q - Pin2: NPN normally closed / light-on, PNP normally open / dark-on
Signal output	2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected
Switching voltage	max. 30 V DC
Switching current	max. 100 mA , resistive load DC-12 and DC-13
Usage category Voltage drop	$D_{c}$ -12 and $D_{c}$ -13 $U_{d} \leq 1.5 \text{ V DC}$
• •	f 1250 Hz
Response time	0.4 ms
Conformity	
Communication interface	IEC 61131-9
Product standard	EN 60947-5-2
Laser safety	EN 60825-1:2014

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com


Ambient conditions	
Ambient temperature	-40 60 °C (-40 140 °F)
Storage temperature	-40 70 °C (-40 158 °F)
Mechanical specifications	
Housing width	13.9 mm
Housing height	41.4 mm
Housing depth	18.3 mm
Degree of protection	IP67 / IP69 / IP69K
Connection	M8 x 1 connector, 4-pin
Material	
Housing	PC (Polycarbonate)
Optical face	PMMA
Mass	Emitter: approx. 10 g receiver: approx. 10 g

### Approvals and certificates

UL approval FDA approval E87056 , cULus Listed , class 2 power supply , type rating 1 IEC 60825-1:2007 Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

### **Curves/Diagrams**

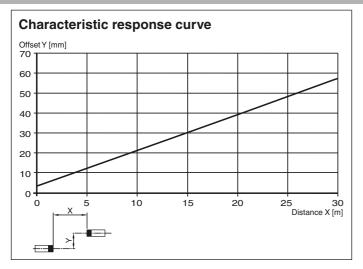

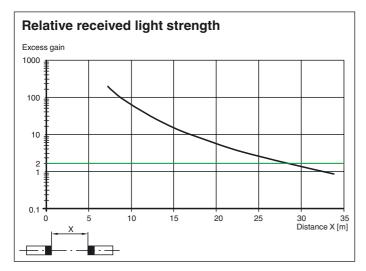


Release date: 2019-11-14 11:11 Date of issue: 2019-11-14 281016\_eng.xml

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 Getter Statement

4

### **Functions and Operation**

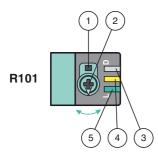

- 1 Light-on / dark-on changeover switch 2 - Sensing range /sensitivity adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range adjuster for more than 180 degrees.

### Sensing Range / Sensitivity

Turn sensing range / sensivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range /sensivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

### Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on / dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

### **Restore Factory Settings**

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensivity adjustment is locked. In order to reactivate the sensing range /sensivity adjustment, turn the sensing range / sensivity adjuster for more than 180 degrees.