


BNI IOL-802-102-Z036

BNI IOL-802-102-Z037



Smart Light
User's Guide

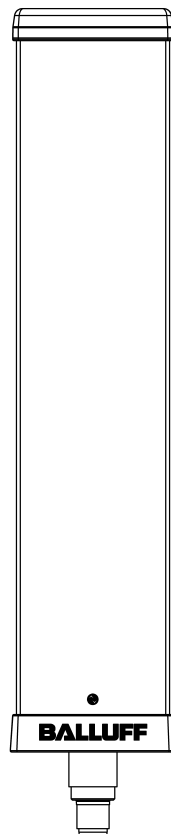

1	Notes to the user	3
1.1	Structure of the guide	3
1.2	Typographical conventions	3
	Enumerations	3
	Actions	3
	Syntax	3
	Cross-references	3
1.3	Symbols	3
1.4	Abbreviations	3
1.5	Deviating views	3
2	Safety	4
2.1	Intended use	4
2.2	Installation and startup	4
2.3	General safety instructions	4
2.4	Resistance to aggressive substances	4
	Hazardous voltage	4
3	Getting Started	5
3.1	Overview BNI IOL-802-102-Z036	5
3.2	Overview BNI IOL-802-102-Z037	6
3.3	Mechanical connection	7
3.4	Electrical connection	7
3.5	Function ground	7
3.6	IO-Link connection	7
	Smart Light connection	7
	Module versions	7
3.7	Short description of the functionality	8
3.8	Segment mode	8
3.9	Level mode	8
3.10	Runlight mode	11
3.11	Flexible mode	12
3.12	Synchronisation	12
4	IO-Link Interface	13
4.1	IO-Link Data	13
4.2	Process data / Input data	13
	BNI IOL-802-102-Z03x	13
	Error codes	13
4.3	Process data / Output data	13
	BNI IOL-802-102-Z03x, Segment Mode	14
	BNI IOL-802-102-Z03x, Level Mode	17
	BNI IOL-802-102-Z03x, Runlight Mode	20
	BNI IOL-802-102-Z03x, Flexible Mode	23
4.4	Parameter data/ Request data	25
	Level resolution 43hex	28
	Level mode limit x-y 49hex 4Ahex 4Bhex 4Chex	28
	Supply monitoring 50hex	29
	Brightness 51hex	29
	Setting the serial number 54hex	29
	Operating Hours Counter 57hex	30
	Boot Cycle Counter 58hex	30
	Device Temperature 59hex	31
	Flexible mode, LEDxx settings A1hex...B4hex	31
	Safe State FBhex	31
	User color FChex	32
	Limit type FDhex	32
4.5	Errors	32
4.6	Events	32

4.7	RGB Color	33
5	Technical Data	34
5.1	Dimensions	34
5.2	Mechanical data	34
5.3	Electrical data	34
5.4	Operating conditions	34
5.5	LED indicator	35
	Status LED	35
6	Appendix	36
6.1	Product ordering code	36
6.2	Order information	36
	Included material	36

1 Notes to the user

- 1.1 Structure of the guide** The guide is organized so that the sections build on one another.
Section 2: Basic safety information.
Section 3: The main steps for installing the device.
.....
- 1.2 Typographical conventions** The following typographical conventions are used in this Guide.
- Enumerations** Enumerations are shown in list form with bullet points.
- Entry 1,
 - Entry 2.
- Actions** Action instructions are indicated by a preceding triangle. The result of an action is indicated by an arrow.
- Action instruction 1.
 - Action result.
 - Action instruction 2.
- Syntax** **Numbers:**
Decimal numbers are shown without additional indicators (e.g. 123),
Hexadecimal numbers are shown with the additional indicator _{hex} (e.g. 00_{hex}).
- Cross-references** Cross-references indicate where additional information on the topic can be found.
-
- 1.3 Symbols**
-  **Attention!**
This symbol indicates a security notice which must be observed.
-
-  **Note**
This symbol indicates general notes.
-
- 1.4 Abbreviations**
- | | |
|------|-------------------------------|
| BNI | Balluff Networking Interface |
| DPP | Direct Parameter Page |
| EMC | Electromagnetic Compatibility |
| FE | Function Earth |
| IOL | IO-Link |
| ISDU | Indexed Service Data Unit |
- 1.5 Deviating views** Product views and illustrations in this guide may differ from the actual product. They are intended only as illustrative material.

2 Safety

2.1 Intended use This guide describes the Balluff BNI IOL-802-102-Z03x for the application as status light module. Hereby it is about an IO-Link device which communicates by means of IO-Link protocol with the superordinate IO-Link master assembly.

2.2 Installation and startup



Attention!

Installation and startup are to be performed only by trained specialists. Qualified personnel are persons who are familiar with the installation and operation of the product, and who fulfills the qualifications required for this activity. Any damage resulting from unauthorized manipulation or improper use voids the manufacturer's guarantee and warranty. The Operator is responsible for ensuring that applicable of safety and accident prevention regulations are complied with.

2.3 General safety instructions

Commissioning and inspection

Before commissioning, carefully read the operating manual. The system must not be used in applications in which the safety of persons is dependent on the function of the device.

Authorized Personnel

Installation and commissioning may only be performed by trained specialist personnel.

Intended use

Warranty and liability claims against the manufacturer are rendered void by:

- Unauthorized tampering
- Improper use
- Use, installation or handling contrary to the instructions provided in this operating manual

Obligations of the Operating Company

The device is a piece of equipment from EMC Class A. Such equipment may generate RF noise. The operator must take appropriate precautionary measures. The device may only be used with an approved power supply. Only approved cables may be used.

Malfunctions

In the event of defects and device malfunctions that cannot be rectified, the device must be taken out of operation and protected against unauthorized use.

Intended use is ensured only when the housing is fully installed.

2.4 Resistance to aggressive substances



Attention!

The BNI modules generally have a good chemical and oil resistance. When used in aggressive media (eg chemicals, oils, lubricants and coolants each in high concentration (ie, low water content)) must be checked prior application-related material compatibility. In the event of failure or damage to the BNI modules due to such aggressive media are no claims for defects.

Hazardous voltage



Attention!

Disconnect all power before servicing equipment.



Note

In the interest of product improvement, the Balluff GmbH reserves the right to change the specifications of the product and the contents of this manual at any time without notice.

3 Getting Started

3.1 Overview BNI IOL-802-102-Z036

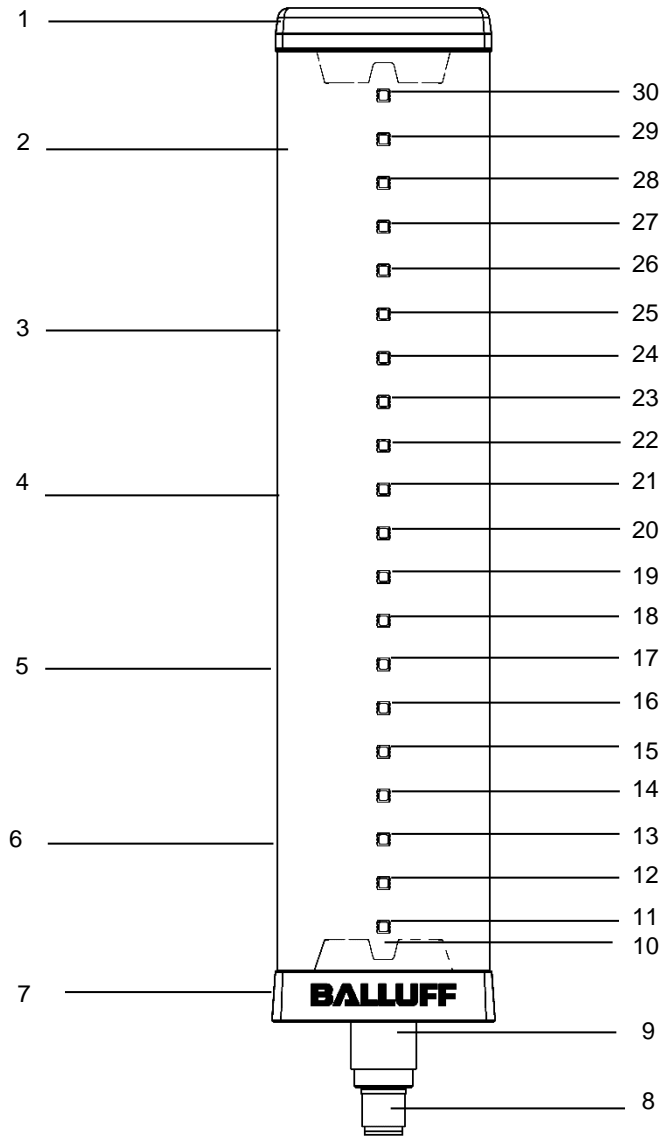


Fig. 3-1: BNI IOL-802-102-Z036

1 Cap	9 M18 thread for mounting	17 LED14	25 LED06
2 Segment 1	10 Status LED	18 LED13	26 LED05
3 Segment 2	11 LED20	19 LED12	27 LED04
4 Segment 3	12 LED19	20 LED11	28 LED03
5 Segment 4	13 LED18	21 LED10	29 LED02
6 Segment 5	14 LED17	22 LED09	30 LED01
7 Socket	15 LED16	23 LED08	
8 M12 connector	16 LED15	24 LED07	

3 Getting Started

3.2 Overview BNI IOL-802-102-Z037

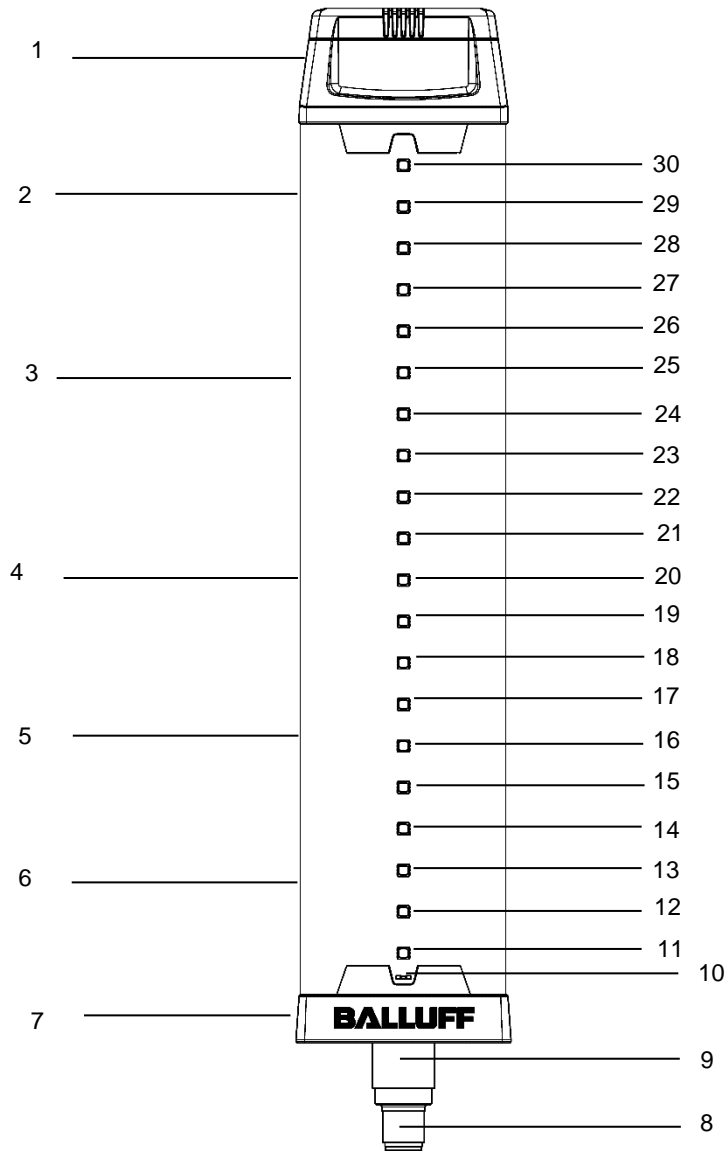


Fig. 3-2: BNI IOL-802-102-Z037

1 Cap with buzzer	9 M18 thread for mounting	17 LED14	25 LED06
2 Segment 1	10 Status LED	18 LED13	26 LED05
3 Segment 2	11 LED20	19 LED12	27 LED04
4 Segment 3	12 LED19	20 LED11	28 LED03
5 Segment 4	13 LED18	21 LED10	29 LED02
6 Segment 5	14 LED17	22 LED09	30 LED01
7 Socket	15 LED16	23 LED08	
8 M12 connector	16 LED15	24 LED07	

3 Getting Started


3.3 Mechanical connection

The BNI IOL-802-102-Z03x modules are attached by using an M18 nut.

3.4 Electrical connection

The BNI IOL-802-102-Z03x modules require no separate supply voltage connection. Power is provided through the IO-Link interface by the host IO-Link Master.

3.5 Function ground

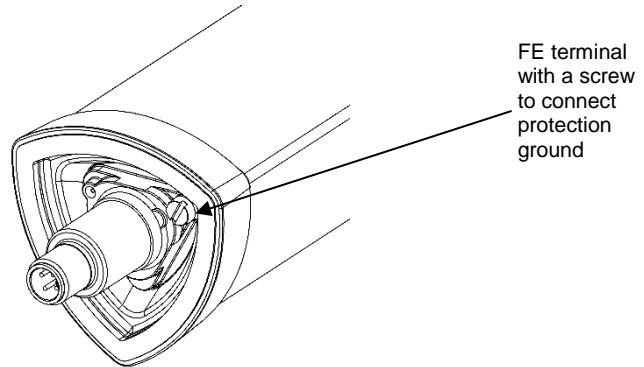


Note



The FE connection from the housing to the machine must be low-impedance and as short as possible. There is no need to use an additional FE connection if a low impedance connection to FE can be assured through the M18 Smart Light connector thread.

3.6 IO-Link connection

IO-Link (M12, A-coded, male)

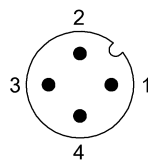

Pin	Function
1	Power supply controller, +24V
2	-
3	GND, reference potential
4	C/Q, IO-Link Data transmission channel

Smart Light connection

- Connection protection ground to FE terminal, if present.
- Connect the incoming IO-Link line to the Smart Light.

Note



A standard 3 wire sensor cable is used for connecting to the host IO-Link master.

Module versions

Version	Description
BNI IOL-802-102-Z036	Maximum 5 segment configurable signal light with level meter and runlight mode.
BNI IOL-802-102-Z037	Maximum 5 segment configurable signal light with level meter, runlight mode and buzzer.

3 Getting Started

3.7 Short description of the functionality

The functionality of the Balluff status light module can be controlled through process data and ISDU registers. It has four main mode of functionality:

- Segment mode
- Level mode
- Runlight mode
- Flexible mode*

With the help of these four modus various warning and indication signals can be indicated. The buzzer function is available in all modes. The synchronisation* is available in segment and runlight mode and if the Smartlight contains buzzer it is also available in level and flexible mode.

3.8 Segment mode

To use the module as a standard status light, the corresponding byte (Mode select) must be written with the proper value in the process data. The process data controls the color of each segment. In the segment mode the module can be used as a standard status light, with configurable number of segments. Maximum five segments can be set. Irrespectively of the selected number of segments, always all of the LEDs are used as a display element. The number of the segments can be set any number between 1 and 5. The module has 20 LEDs, which are equally distributed between the segments. (When three segments are set, one-one LEDs between the segments will be always switched off). The color of each segment can be selected from a color table, which has six pre-defined colors and one user defined color. The combinations of the pre-defined colors are not limited. In the segment mode, the segments can be set to blink too. Each segment has two control bits in process data, which determine the blinking state of the corresponding segment and the type of the blinking. The blinking has two modus. Either normal blinking or flash mode can be selected. In normal blinking the LEDs are switched on and off periodically with a 50% duty cycle. In the flash mode, the LEDs are switched on and off quickly three times. The flash is repeated in every second. The frequency of the normal blinking can be changed too.

3.9 Level mode

To use the module as a standard status light, the corresponding byte (Mode select) must be written with the proper value in the process data. In level mode the complete module works as one indicator element. In this case a level value can be displayed. The process data gives the level value. The higher value the module becomes, the more LEDs will be switched on. This mode can be used as a level indicator, for example to indicate a fluid level in a tank. The resolution of the input level can be selected from 8 bit up to 16 bit. In the level mode various parameters can be controlled through the process data or ISDU registers. The ISDU parameters should be set before the level mode is used. The level display can be selected to be bottom-up or top-down. In the bottom-up mode the level indicator increases from the bottom of the module. In the top-down mode the indicator increases from the top of the module.

Although there are no real segments in the level mode, because the LEDs are controlled by the input level, the LEDs are divided into five virtual segments. These virtual segments can have their own color. The color of these segments can be set in the process data. So it can be realized, that the level meter can have more colors (up to the maximum number of the segments). Some or all colors can be set as dominant color. This means, when the input level is high enough to switch on the next LED and this LED is in another virtual segment, the LEDs, which are under the actual LED, take over the color of the actual LED. In this case, as the input level increases, the color of the full LED bar can be changed.


For example:

The lower two segments are green, the middle two segments are yellow and the upper segment is red. The LEDs are shown in the next figures, when the Smartlight level mode is configured differently.

*Available from software version 3.0


3 Getting Started

The LED bar at increasing input data and no color dominance. (The virtual segments can be seen on the left side.) Of course the segment 2 or 4 does not have to be the same color as segment 3 or 5.

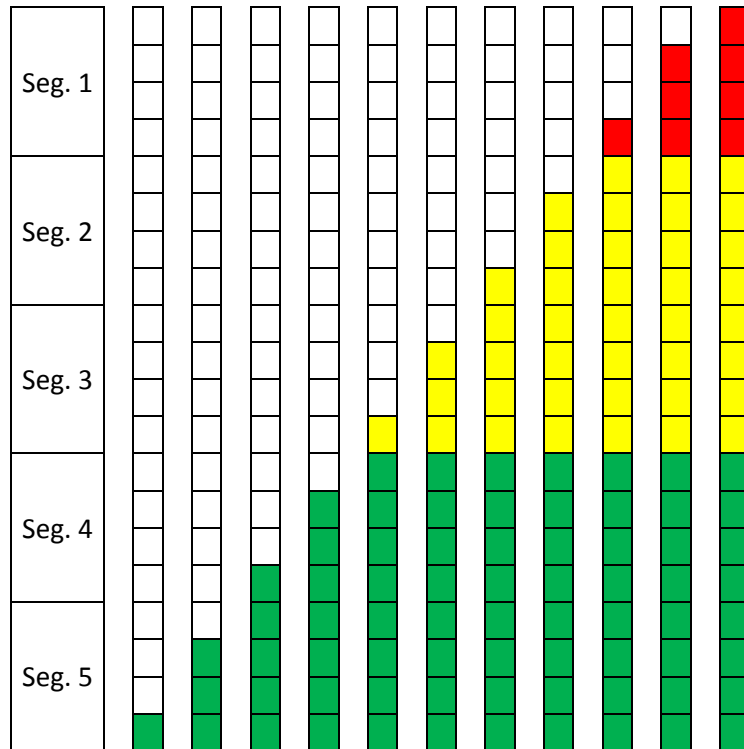


3 Getting Started

The LED bar at increasing input data, all the colors are dominant.

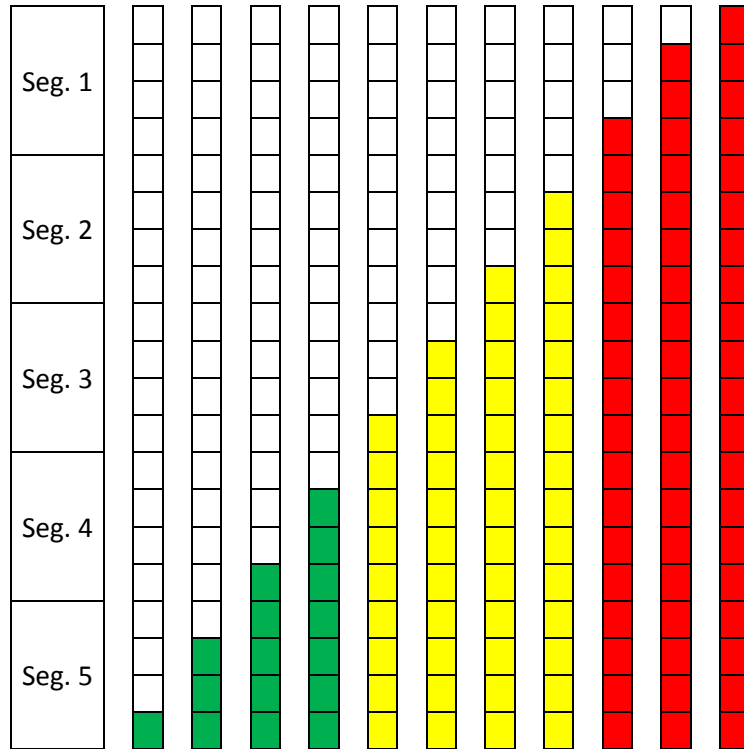

By default the 20 LEDs are divided into equal virtual segments. The height of the virtual segments can be modified too. There are four ISDU registers (Level mode limit x-y ISDU register), in which the limits of the virtual segments can be modified. For example: If the input level value is higher than the limit value of the 2. and 3. segment (Level mode limit 2-3), the current LED will become the color of the Level mode segment 2 color. The limits can be given either in percent or in absolute value.

The LED bar at increasing input data, there is no color dominance. The limits of the segments are modified, so they are not equally distributed. Of course segment 3, 4 and 5 could have different colors too.

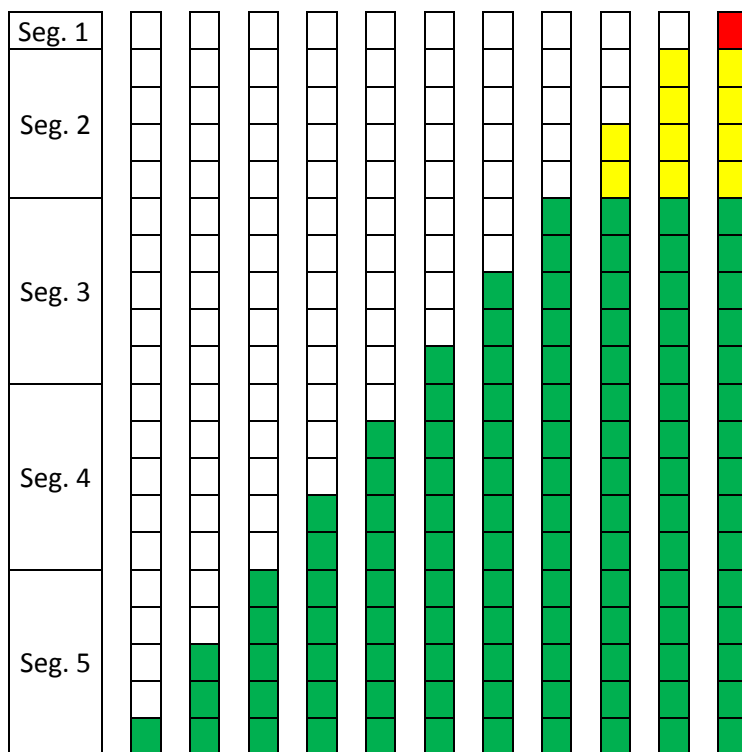

3.10 Runlight mode

To use the module as a standard status light, the corresponding byte (Mode select) must be written with the proper value in the process data. In the runlight mode, the complete module displays a running light effect. In this case all of the LEDs are working as one runlight effect.

The process data defines the color of the running segment, the background color, the size of the running segment and the speed of the segment. One segment has a size of 4 LEDs. The number of the running segment can be set between 1 and 3.

3 Getting Started

3.11 Flexible mode

In the flexi mode each LED-ring can be configured individually. With BNI IOL-802... you can realize up to 20 different segments. To use the flexi mode, the ISDU register must be set to flexi mode. There is an ISDU register for each LED ring, which has 5 subindices, 3 for the color channels, one for brightness ON and one for brightness OFF. In the process data there is one bit for every LED-ring, which sets the LED state (ON or OFF)

3.12 Synchronisation

In synchronisation mode you can synchronise functions (blinking, flashing, buzzer) of several Balluff SmartLights. The function is available in runlight- and segment mode. The synchronisation is controlled by 2 bits in the process data: (Sync Start and Sync Impluse). When a rising edge is detected on the Sync start bit, the SmartLight resets its internal state. This assures that the synchronised SmartLights start to work in the same state. The Sync start rising edge has to be generated once after a reset. When a rising edge is detected on the Sync impulse bit, the SmartLight resets its internal timer. It has to be generated cyclically in order to keep the SmartLights synchronised. The time period of the Sync impulse can be configured by the user. It's recommended to set the values between 1 sec. and 15 sec., depending on the frequency of the synchronised parameters (blinking, flashing, buzzer).

4 IO-Link Interface

4.1 IO-Link Data

BNI IOL-802-102-Z036, BNI IOL-802-102-Z037		
Data transmission rate	COM2 (38,4 kBaud)	
Minimal cycle time	7.2 ms	
Process data length	8 Byte output, 1 Byte input	
IO-Link Revision	1.1	1.0
Frame type	2.V	1
Process data cycle time*	7.2 ms	72 ms

* by min. cycle time

4.2 Process data / Input data

The BNI IOL-802-102-Z03x has one byte input process data. The input process data contains the error value for configuration errors. There are different errors, which can be present at the same time, but only the error code with the highest priority will be send in the input process data.

BNI IOL-802-102-Z03x

Byte	0							
Bit	7	6	5	4	3	2	1	0
Description	Error code							

Error codes

0x00 – No error
 0x01 – Wrong mode selected
 0x02 – Level value out of range
 0x04 – Wrong number of segments selected
 0x05 – Wrong frequency selected
 0x06 – Wrong speed selected
 0x07 – Wrong buzzer function selected (Only in case of BNI IOL-802-102-Z037)

An error code (values from 0x01 to 0x07) with lower value has higher priority than error code with higher value.

4.3 Process data / Output data

The BNI IOL-801-102-Z03x has 8 byte output process data. The output process data has different meaning depending on the selected mode (segment mode, level mode or runlight mode). The byte 3 has a special meaning in the output process data. It is common for all modes. The mode of the Smart Light can be selected with the help of this byte.

4 IO-Link Interface

**BNI IOL-802-102-Z03x,
Segment Mode**

Byte	0							
Bit	7	6	5	4	3	2	1	0
Description	Segment 2 blink	Segment 2 color			Segment 1 blink	Segment 1 color		

Byte	1							
Bit	7	6	5	4	3	2	1	0
Description	Segment 4 blink	Segment 4 color			Segment 3 blink	Segment 3 color		

Byte	2							
Bit	7	6	5	4	3	2	1	0
Description	Buzzer state	.	Buzzer Type		Segment 5 blink	Segment 5 color		

Bit 0-2/4-6, Segment color

- 000 = Off
- 001 = Green
- 010 = Red
- 011 = Yellow
- 100 = Blue
- 101 = Orange*
- 110 = User defined*
- 111 = White

*color is available from software version 2.1

Bit 3, Segment blink

- 0 – Segment does not blink
- 1 – Segment blinks according to the blink modus settings

Bit 4-5, Buzzer type

(Only in case of BNI IOL-802-102-Z037)

- 00 = Continuous sound
- 01 = 1 Hz chopped sound
- 10 = 5 Hz chopped sound
- 11 = 3 short beep, 2 sec pause

Bit 7, Buzzer state

(Only in case of BNI IOL-802-102-Z037)

- 0 – Buzzer is off
- 1 – Buzzer is on

Byte	3							
Bit	7	6	5	4	3	2	1	0
Description	Sync impulse*	Sync start*	.	.	Flexible Mode*	Runlight Mode	Levle Mode	Segment Mode

The operating mode of the Smart Light can be selected in the Byte 3. Only one bit should be set at the same time from the mode bits (bit0-3). The Sync start/impulse bits are rising edge sensitive.

Byte	4							
Bit	7	6	5	4	3	2	1	0
Description	Number of segments (1 – 5)							

Byte	5							
Bit	7	6	5	4	3	2	1	0
Description	.	.	.	Blink mode Segment 5	Blink mode Segment 4	Blink mode Segment 3	Blink mode Segment 2	Blink mode Segment 1

Blink mode segment X

- 0 – The segment is blinking with a 50% duty cycle
- 1 – The segment is flashing.

*Avalable from software version 3.0

4 IO-Link Interface

Byte	6							
Bit	7	6	5	4	3	2	1	0
Description	Blinking frequency (1 – 5)							

- 0x01 – 0.5 Hz
- 0x02 – 1 Hz
- 0x03 – 2 Hz
- 0x04 – 5 Hz
- 0x05 – 10 Hz

Byte	7							
Bit	7	6	5	4	3	2	1	0
Description	Buzzer volume** (0-255)							

0: minimum volume
255: maximum volume

**Available from software version 4.0

BNI IOL-802-102-Z03x, Level Mode

Byte	0							
Bit	7	6	5	4	3	2	1	0
Description	Segment 2 dominance	Segment 2 color			Segment 1 dominance	Segment 1 color		

Byte	1							
Bit	7	6	5	4	3	2	1	0
Description	Segment 4 dominance	Segment 4 color			Segment 3 dominance	Segment 3 color		

Byte	2							
Bit	7	6	5	4	3	2	1	0
Description	Buzzer state	.	Buzzer Type		Segment 5 dominance	Segment 5 color		

Bit 0-2/4-6, Segment color

000 = Off
 001 = Green
 010 = Red
 011 = Yellow
 100 = Blue
 101 = Orange*
 110 = User defined*
 111 = White

*color is available from software version 2.1

Bit 3 / 7, Segment dominance

0 – Segment is not dominant
 1 – Segment is dominant

Bit 4-5, Buzzer type

(only by BNI IOL-802-102-Z037)

00 = Continuous sound
 01 = 1 HZ chopped sound
 10 = 5 Hz chopped sound
 11 = 3 short beep, 2 sec pause

Bit 7, Buzzer state

(only by BNI IOL-802-102-Z037)

0 – Buzzer is off
 1 – Buzzer is on

4 IO-Link Interface

Byte	3							
Bit	7	6	5	4	3	2	1	0
Description	Sync impulse*	Sync start*	.	.	.	Runlight Mode	Level Mode	Segment Mode

The operating mode of the Smart Light can be selected in the Byte 3. Only one bit should be set at the same time. The Smart Light stays in the last Modus, when the operating mode is set on 0x00.

Byte	4							
Bit	7	6	5	4	3	2	1	0
Description	Level type

0 – bottom – up
 1 – top - down

Byte	5							
Bit	7	6	5	4	3	2	1	0
Description	Level value (16 bit) – Low byte							

Byte	6							
Bit	7	6	5	4	3	2	1	0
Description	Level value (16 bit) – High byte							

*Avalable from software version 3.0

4 IO-Link Interface

Byte	7							
Bit	7	6	5	4	3	2	1	0
Description	Buzzer volume** (0-255)							

0: minimum volume

255: maximum volume

Level value (16 bit) – High byte								level value (16 bit) – Low byte																					
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0														
8 bit level value																													
MSB																LSB													
10 bit level value																													
MSB																						LSB							
12 bit level value																													
MSB												LSB																	
14 bit level value																													
MSB																LSB													
16 bit level value																													
MSB																LSB													

Level value: 8, 10, 12, 14 or 16 bit value for level indicator. The resolution can be set in Level resolution ISDU register. The Level value is always left justified.

**Available from software version 4.0

4 IO-Link Interface

**BNI IOL-802-102-Z03x,
Runlight Mode**

Byte	0							
Bit	7	6	5	4	3	2	1	0
Description	.	Running color			.	Background color		

Byte	1							
Bit	7	6	5	4	3	2	1	0
Description

Byte	2							
Bit	7	6	5	4	3	2	1	0
Description	Buzzer state	.	Buzzer Type	

Bit 0-2 / 4-6, Background Color / Running color

- 000 = Off
- 001 = Green
- 010 = Red
- 011 = Yellow
- 100 = Blue
- 101 = Orange*
- 110 = User defined*
- 111 = White

*color is available from software version 2.1

Bit 4-5, Buzzer type
(only by BNI IOL-802-102-Z037)

- 00 = Continuous sound
- 01 = 1 HZ chopped sound
- 10 = 5 Hz chopped sound
- 11 = 3 short beep, 2 sec pause

Bit 7, Buzzer state
(only by BNI IOL-802-102-Z037)

- 0 – Buzzer is off
- 1 – Buzzer is on

4 IO-Link Interface

Byte	3							
Bit	7	6	5	4	3	2	1	0
Description	Sync impulse*	Sync start*	.	Run direction**	Flexible Mode*	Runlight Mode	Levle Mode	Segment Mode

The operating mode of the Smart Light can be selected in the Byte 3. Only one bit should be set at the same time from the mode bits (bit0-3). The Sync start/impulse bits are rising edge sensitive. The Smart Light stays in the last Modus, when the operating mode is set on 0x00.

Run direction:

0 – bottom-up

1 – top-down

Byte	4							
Bit	7	6	5	4	3	2	1	0
Description	Number of running segments (1 – 3)							

Byte	5							
Bit	7	6	5	4	3	2	1	0
Description

*Available from software version 3.0

**Available from software version 4.0

4 IO-Link Interface

Byte	6							
Bit	7	6	5	4	3	2	1	0
Description	Running speed (1 – 5)							

The speed of the running segment can be set between 1 and 5. The segment will be running slowly, when the speed is set to 1, and it will be running quicker when the speed value is set to higher value.

Byte	7							
Bit	7	6	5	4	3	2	1	0
Description	Buzzer volume** (0-255)							

0: minimum volume
255: maximum volume

**Available from software version 4.0

**BNI IOL-802-102-Z03x,
Flexible Mode**

Byte	0							
Bit	7	6	5	4	3	2	1	0
Description	LED08 state	LED07 state	LED06 state	LED05 state	LED04 state	LED03 state	LED02 state	LED01 state

Byte	1							
Bit	7	6	5	4	3	2	1	0
Description	LED16 state	LED15 state	LED14 state	LED13 state	LED12 state	LED11 state	LED10 state	LED09 state

Byte	2							
Bit	7	6	5	4	3	2	1	0
Description	Buzzer state	.	Buzzer Type	LED20 state	LED19 state	LED18 state	LED17 state	

Bit 0-8/0-4, LEDxx state

- 0 – LED is off
- 1 – LED is on

Bit 7, Buzzer state

(Only in case of BNI IOL-802-102-Z037)

- 0 – Buzzer is off
- 1 – Buzzer is on

Bit 4-5, Buzzer type

(Only in case of BNI IOL-802-102-Z037)

- 00 = Continuous sound
- 01 = 1 Hz chopped sound
- 10 = 5 Hz chopped sound
- 11 = 3 short beep, 2 sec pause

4 IO-Link Interface

Byte	3							
Bit	7	6	5	4	3	2	1	0
Description	Sync impulse*	Sync start*	.	.	Flexible Mode*	Runlight Mode	Level Mode	Segment Mode

*Available from software version 3.0

The operating mode of the Smart Light can be selected in the Byte 3. Only one bit should be set at the same time from the mode bits (bit0-3). The Sync start/impulse bits are rising edge sensitive.

Byte	4							
Bit	7	6	5	4	3	2	1	0
Description

Byte	5							
Bit	7	6	5	4	3	2	1	0
Description

Byte	6							
Bit	7	6	5	4	3	2	1	0
Description

Byte	7							
Bit	7	6	5	4	3	2	1	0
Description	Buzzer volume** (0-255)							

0: minimum volume
255: maximum volume

**Available from software version 4.0

4.4 Parameter data/
Request data

	DPP	ISDU		Object name	Length	Access right	Default Value
	Index	Index	Sub-index				
Identification Data	07hex			Vendor ID	2 Byte	Read only	0378hex
	08hex			Device ID	3 Byte		050A07hex 050A08hex
	09hex						BALLUFF
	0Ahex						www.balluff.com
	0Bhex						BNI IOL-802-102-Z036 BNI IOL-802-102-Z037
		10hex	0	Vendor name	7 Byte		BNI0082 BNI0085
		11hex	0	Vendor text	15 Byte		Smart Light 5 segment Smart Light 5 segment with buzzer
		12hex	0	Product name	20 Byte		
		13hex	0	Product ID	7 Byte		
		14hex	0	Product text	21 Byte 33 Byte		
		15hex	0	Serial Number	16 Byte		
		16hex	0	Hardware Revision	1 Byte		
	17hex	0	Firmware Revision	48 Byte			
	18hex	0	Application tag*	32 Byte	Read / Write		

* 32 Byte string adjustable by the user

4 IO-Link Interface

	ISDU		Object name	Length	Range	Default Value
	Index	Sub-index				
Parameter Data	43hex	0	Resolution	1 Byte	0...4	4
	49hex	0	Level mode limit 1-2	2 Byte	0hex...FFFFhex	80
	4Ahex	0	Level mode limit 2-3	2 Byte	0hex...FFFFhex	60
	4Bhex	0	Level mode limit 3-4	2 Byte	0hex...FFFFhex	40
	4Chex	0	Level mode limit 4-5	2 Byte	0hex...FFFFhex	20
	50hex	0 1-2	Supply monitoring*	1 Byte	-	-
	51hex	0 1-3	Brightness	3 Byte	0hex...7F7F7Fhex	7F7F7Fhex
	54hex	0	Serial Number Set****	16 Byte	-	16x00hex
	57hex	0 1-3	Operating Hours Counter*****	12 Byte	-	-
	58hex	0	Boot Cycle Counter*****	4 Byte	-	-
	59hex	0 1-5	Device Temperature*****	5 Byte	-	-
	A1hex	0 1-5	LED01 settings***	5 Byte	0hex...FFFFFFFFhex	FF0000FF01hex
	A2hex	0 1-5	LED02 settings***	5 Byte	0hex...FFFFFFFFhex	FF0000FF01hex
	A3hex	0 1-5	LED03 settings***	5 Byte	0hex...FFFFFFFFhex	FF0000FF01hex
	A4hex	0 1-5	LED04 settings***	5 Byte	0hex...FFFFFFFFhex	FF0000FF01hex
	A5hex	0 1-5	LED05 settings***	5 Byte	0hex...FFFFFFFFhex	808080FF01hex
	A6hex	0 1-5	LED06 settings***	5 Byte	0hex...FFFFFFFFhex	808080FF01hex
	A7hex	0 1-5	LED07 settings***	5 Byte	0hex...FFFFFFFFhex	808080FF01hex
	A8hex	0 1-5	LED08 settings***	5 Byte	0hex...FFFFFFFFhex	808080FF01hex
A9hex	0 1-5	LED09 settings***	5 Byte	0hex...FFFFFFFFhex	00FF00FF01hex	

*Read only

**Available from software version 2.1

***Available from software version 3.0

****Available from software version 4.0

*****Read only, available from software version 4.0

	ISDU		Object name	Length	Range	Default Value
	Index	Sub-index				
Parameter Data	AA _{hex}	0 1-5	LED10 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	00FF00FF01 _{hex}
	AB _{hex}	0 1-5	LED11 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	00FF00FF01 _{hex}
	AC _{hex}	0 1-5	LED12 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	00FF00FF01 _{hex}
	AD _{hex}	0 1-5	LED13 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	FFFF00FF01 _{hex}
	AE _{hex}	0 1-5	LED14 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	FFFF00FF01 _{hex}
	AF _{hex}	0 1-5	LED15 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	FFFF00FF01 _{hex}
	B0 _{hex}	0 1-5	LED16 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	FFFF00FF01 _{hex}
	B1 _{hex}	0 1-5	LED17 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	0000FFFF01 _{hex}
	B2 _{hex}	0 1-5	LED18 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	0000FFFF01 _{hex}
	B3 _{hex}	0 1-5	LED19 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	0000FFFF01 _{hex}
	B4 _{hex}	0 1-5	LED20 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	0000FFFF01 _{hex}
	FB _{hex}	0	Safe State****	1 Byte	0...1	0
	FC _{hex}	0 1-3	User color**	3 Byte	0 _{hex} ...FFFFFF _{hex}	008080 _{hex}
	FD _{hex}	0	Limit type**	1 Byte	0...1	0

*Read only

**Available from software version 2.1

***Available from software version 3.0

**** Available from software version 4.0

Level resolution The resolution of the input data in level mode.
43hex

- 0 = 8 bit
- 1 = 10 bit
- 2 = 12 bit
- 3 = 14 bit
- 4 = 16 bit

Level mode
limit x-y
49hex
4Ahex
4Bhex
4Chex

The level limit values are interpreted either as a percent value or as an absolute value depending on the value of the Limit type register (FDhex). The values are interpreted as a percent value between 0% and 100% by default. When the Limit type is set to absolute value, an 8, 10, 12, 14, 16 bit number (depends on the resolution) determines the limits between two segments in level mode. The limit values are always right justified.

Byte	0								1							
	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
Limit type is absolute									MSB 8 bit limit value LSB							
								MSB 10 bit limit value LSB								
					MSB 12 bit limit value LSB											
				MSB 14 bit limit value LSB												
			MSB 16 bit limit value LSB													
Limit type is percent									Percent value: 0 – 100							



Note

Before changing the limit values, the Resolution and Limit type should be set to the desired value!

Supply monitoring
50_{hex}

Bit	7	6	5	4	3	2	1	0
Sub-index							2	1
Description	LED Voltage failure	Under voltage Us

Under voltage Us

0: Us voltage is Ok
1: Low voltage on IO-Link pin 1

LED Voltage failure

0: LED Voltage is Ok
1: LED Voltage failure

Brightness
51_{hex}

This register sets the brightness for each channel (red, green and blue). Values from 0x00 to 0x7F are accepted for each channel. This register can be accessed through the subindices 0, 1, 2 or 3. Reading/writing the subindex 0 the whole 3 byte brightness data can be accessed. Subindex 1, 2 and 3 contains the brightness data for red, green and blue channels.

Byte	0	1	2
Sub-index	1	2	3
Description	Brightness value for red channel	Brightness value for green channel	Brightness value for blue channel

Setting the serial number
54_{hex}

The serial number has a default value of 16x 00_{hex}. In order to use the "Identity" master validation mode, a serial number can be set using this parameter. This prevents a device from connecting to the wrong master port.



Note

It is recommended to set a unique serial number for each device, and use the "Identity" master validation mode.

4 IO-Link Interface

Operating Hours Counter 57_{hex}

The register contains the operating hours of the device.

Operating Hours (Subindex 1): operating hours during lifetime, not resettable.

Operating Hours Maintenance (Subindex 2): operating hours, resettable with system command 0xA5.

Operating Hours Power Up (Subindex 3): operating hours since last power up.

Byte	3	2	1	0	3	2	1	0	3	2	1	0
Sub-index	1				2				3			
Description	Operating Hours				Operating Hours Maintenance				Operating Hours Power Up			

Boot Cycle Counter 58_{hex}

Boot Cycle Counter counts the number of start-ups.

Byte	3	2	1	0
Sub-index	0			
Description	Boot Cycle Counter			

Device Temperature
59hex

The device measures its temperature and stores the minimum and maximum temperature values during life-time and since last start-up.

The temperature value is stored as a signed 8 bit integer (from -128 °C to 127 °C), with 1 °C resolution.

For example:
 1E_{hex} = 30_{dec} = 30 °C
 FD_{hex} = -3_{dec} = -3 °C

Byte	0	1	2	3	4
Sub-index	1	2	3	4	5
Description	Actual Temperature Value (°C)	Max. Temperature Value Since Last Start (°C)	Min. Temperature Value Since Last Start (°C)	Max. Temperature Value Since First Start (°C)	Min. Temperature Value Since First Start (°C)

Flexible mode, LEDxx settings
A1hex...B4hex

This register contains the settings for the flexible LEDs. Values from 0x00 to 0xFF are accepted for each setting. This register can be accessed through the subindices 0, 1, 2, 3, 4 or 5. Reading/writing the subindex 0 the whole 5 byte data can be accessed. Subindex 1, 2 and 3 contains the red, green and blue color component, subindex 4 is the ON brightness and subindex 5 is the OFF brightness.

Note



These registers are available from software version 3.0. The Brightness ISDU register (51hex) determines the maximum brightness of each channel. It is recommended to set the Brightness ISDU register's value to 7F7F7Fhex in case of using flexible mode.

Byte	0	1	2	3	4
Sub-index	1	2	3	4	5
Description	LED color, red channel	LED color, green channel	LED color, blue channel	On brightness	Off brightness

Safe State
FBhex

The safe state function can be activated with this register.

0 = Not Active
 1 = Active

Safe state not active: when there is no IO-Link communication all LEDs are switched off.
 Safe state active: when there is no IO-Link communication segment 1 blinks red, with 5 Hz frequency.

4 IO-Link Interface

User color
FC_{hex}

This register sets the value of the user defined color. Values for 0x00 to 0xFF are accepted for each channel. This register can be accessed through the subindices 0, 1, 2 or 3. Reading/writing the subindex 0 the whole 3 byte user color data can be accessed. Subindex 1, 2 and 3 contains the red, green and blue channel data for the user color.



Note

This register is available from software version 2.1.

Byte	0	1	2
Sub-index	1	2	3
Description	User defined color, red channel	User defined color, green channel	User defined color, blue channel

Limit type
FD_{hex}

The limit registers are evaluated either as a percent value or as an absolute value. The Limit type register sets the type of the evaluation.

- 0x00 – Limit type is given in a percent value
- 0x01 – Limit type is given in an absolute value



Note

This register is available from software version 2.1.

4.5 Errors


Error Code	Description
0x8011	Index not available
0x8012	Subindex not available
0x8023	Access Denied
0x8030	Parameter Value out of Range
0x8033	Parameter length overrun
0x8034	Parameter length underrun

4.6 Events

IO-Link Revision 1.0	
Event Code	Description
0x5112	Low supply voltage (US)
IO-Link Revision 1.1	
Event Code	Description
0x5111	Low supply voltage (US)


4.7 RGB Color

The RGB color model is an additive color model in which red, green and blue light are added together in various ways to reproduce a broad array of colors. The name of the model comes from the initials of the three additive primary colors, red, green and blue.
By changing the respective red - green - blue channels different colors can be created

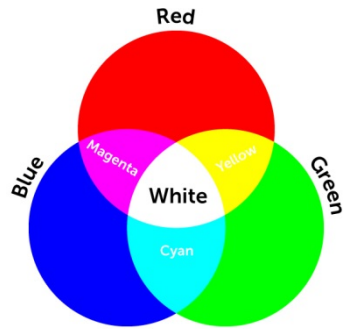

5 Technical Data

5.1 Dimensions

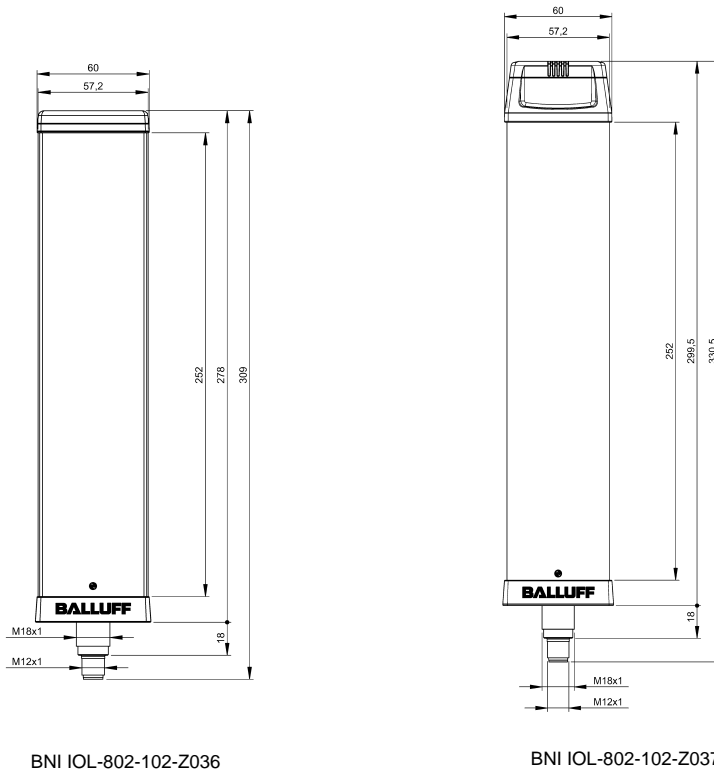

BNI IOL-802-102-Z036

BNI IOL-802-102-Z037

5.2 Mechanical data

Housing Material	Polycarbonate transparent - die-cast zinc housing
IO-Link-Port	M12, A-coded, male
Enclosure rating	BNI IOL-802-102-Z036 IP65 (only when plugged-in) BNI IOL-802-102-Z037 IP30 (only when plugged-in)
Weight	BNI IOL-802-102-Z036 ca. 500 g BNI IOL-802-102-Z037 ca. 570 g
Dimensions (L x W x H, excluding connector)	BNI IOL-802-102-Z036: 309 x 60 x 60 mm BNI IOL-802-102-Z037: 330.5 x 60 x 60 mm


5.3 Electrical data

Operating voltage	18 ... 30,2 V DC, per EN 61131-2
Ripple	< 1 %
Current draw all segments off	≤ 40 mA @24V
Current draw all segments white, buzzer on	BNI IOL-802-102-Z036: ≤ 400 mA @ 24V BNI IOL-802-102-Z037: ≤ 410 mA @ 24V
Volume of the buzzer module	100dB at 1m distance
Tone frequency of the buzzer module	2800 ± 500 Hz
Total number of signal lights (all 3 pages)	3 x 20

5.4 Operating conditions

Operating temperature	-5 °C ... +50 °C
Storage temperature	-15 °C ... +50 °C

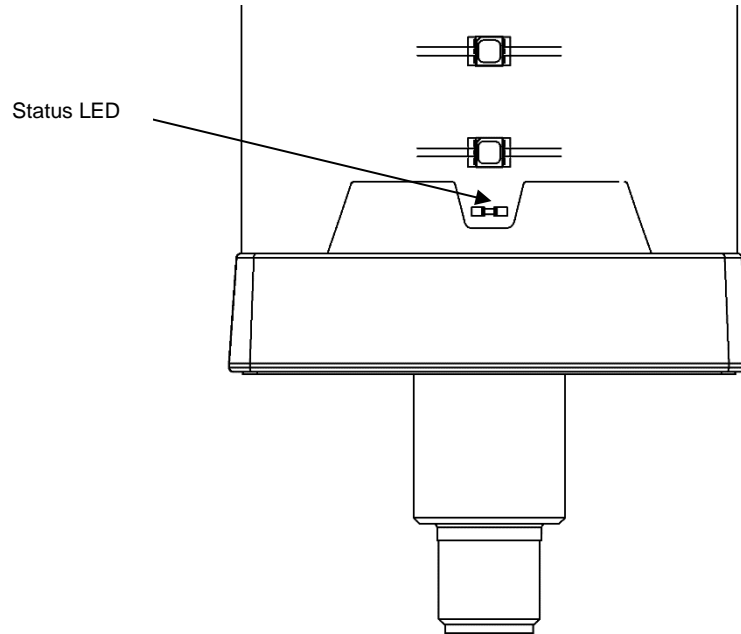

5.5 LED indicator



Status LED


LED	Indicator	Function
Status LED	Green, green flashing	Status for supply and communication

The status LED indicates the current status of the power supply and the communication. It can be switched on, switched of and flashing.

	Communication error	Communication ok
Supply modul undervoltage	LED is static off	LED is flashing 
Supply module ok	LED is static on	LED is flashing 

6 Appendix

6.1 Product ordering code

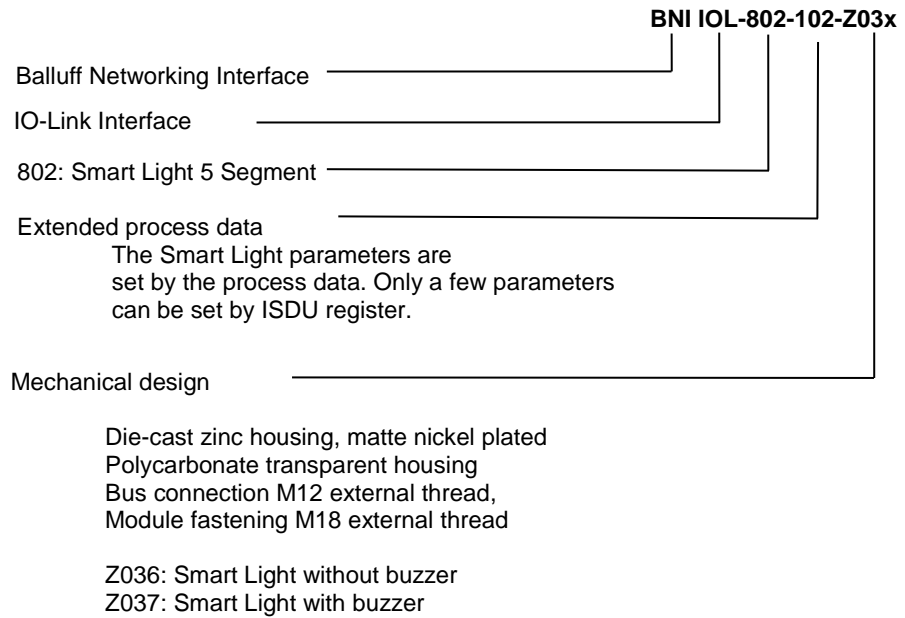

6.2 Order information

Type	Order Code
BNI IOL-802-102-Z036	BNI0082
BNI IOL-802-102-Z037	BNI0085

Included material

BNI IOL-802-102-Z03x consists of the following components:

- signal light
- M18x1 nut
- rubber foot
- screw M4
- spring washer
- user's guide

www.balluff.com

Balluff GmbH
Schurwaldstrasse 9
73765 Neuhausen a.d.F.
Germany
Tel. +49 7158 173-0
Fax +49 7158 5010
balluff@balluff.de

Nr. 915906-726 EN • 08.125409 • Edition L17 • Replaces Edition H17 • Subject to modification