


BNI IOL-801-102-Z036
BNI IOL-801-102-Z037

Smart Light
User's Guide



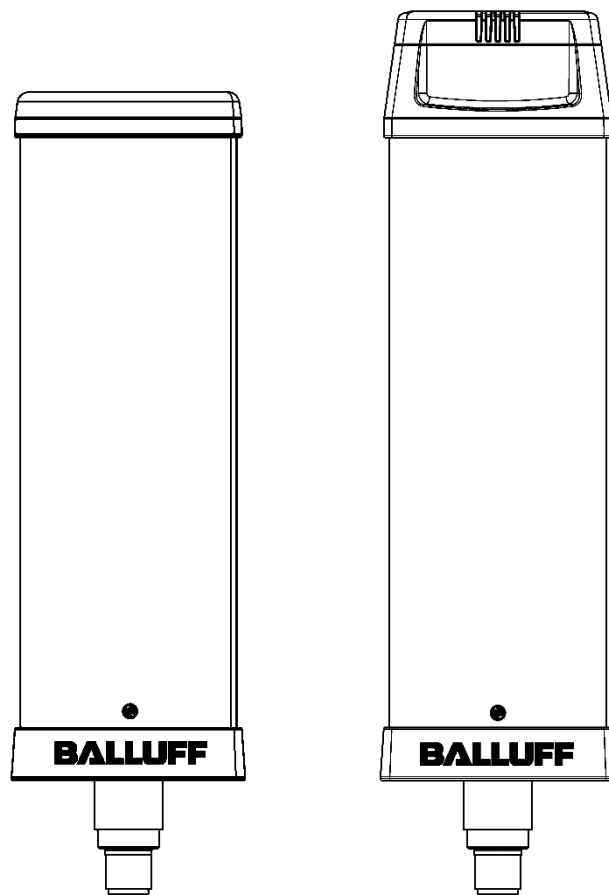

1	Notes to the user	3
1.1	Structure of the guide	3
1.2	Typographical conventions	3
	Enumerations	3
	Actions	3
	Syntax	3
	Cross-references	3
1.3	Symbols	3
1.4	Abbreviations	3
1.5	Deviating views	3
2	Safety	4
2.1	Intended use	4
2.2	Installation and startup	4
2.3	General safety instructions	4
2.4	Resistance to aggressive substances	4
	Hazardous voltage	4
3	Getting Started	5
3.1	Overview BNI IOL-801-102-Z036	5
3.2	Overview BNI IOL-801-102-Z037	6
3.3	Mechanical connection	7
3.4	Electrical connection	7
3.5	Function ground	7
3.6	IO-Link connection	7
	Smart Light connection	7
	Module versions	7
3.7	Short description of the functionality	8
3.8	Segment mode	8
3.9	Level mode	8
3.10	Runlight mode	11
3.11	Flexible mode	11
3.12	Synchronisation	11
4	IO-Link Interface	12
4.1	IO-Link Data	12
4.2	Process data / Input data	12
	BNI IOL-801-102-Z036	12
	Error codes	12
4.3	Process data / Output data	12
	BNI IOL-801-102-Z03x, Segment Mode	13
	BNI IOL-801-102-Z03x, Level Mode	16
	BNI IOL-801-102-Z03x, Runlight Mode	19
	BNI IOL-801-102-Z03x, Flexible Mode	22
4.4	Parameter data/ Request data	24
	Level resolution 43hex	26
	Level mode limit x-y 49hex 4Ahex	26
	Supply monitoring 50hex	27
	Brightness 51hex	27
	Setting the serial number 54hex	27
	Operating Hours Counter 57hex	28
	Boot Cycle Counter 58hex	28
	Device Temperature 59hex	28
	Flexible mode, LEDxx settings A1hex...AChex	29
	Safe State FBhex	29
	User color FChex	30
	Limit type FDhex	30
4.5	Errors	30
4.6	Events	30

4.7	RGB Color	31
5	Technical Data	32
5.1	Dimensions	32
5.2	Mechanical data	32
5.3	Electrical data	32
5.4	Operating conditions	32
5.5	LED indicator	33
	Status LED	33
6	Appendix	34
6.1	Product ordering code	34
6.2	Order information	34
	Included material	34

1 Notes to the user

- 1.1 Structure of the guide** The guide is organized so that the sections build on one another.
 Section 2: Basic safety information.
 Section 3: The main steps for installing the device.

- 1.2 Typographical conventions** The following typographical conventions are used in this Guide.
- Enumerations** Enumerations are shown in list form with bullet points.
- Entry 1,
 - Entry 2.
- Actions** Action instructions are indicated by a preceding triangle. The result of an action is indicated by an arrow.
- Action instruction 1.
 - Action result.
 - Action instruction 2.
- Syntax** **Numbers:**
 Decimal numbers are shown without additional indicators (e.g. 123),
 Hexadecimal numbers are shown with the additional indicator _{hex} (e.g. 00_{hex}).
- Cross-references** Cross-references indicate where additional information on the topic can be found.
-
- 1.3 Symbols**
-  **Attention!**
 This symbol indicates a security notice which must be observed.
-
-  **Note**
 This symbol indicates general notes.
-
- 1.4 Abbreviations**
- | | |
|------|-------------------------------|
| BNI | Balluff Networking Interface |
| DPP | Direct Parameter Page |
| EMC | Electromagnetic Compatibility |
| FE | Function Earth |
| IOL | IO-Link |
| ISDU | Indexed Service Data Unit |
- 1.5 Deviating views** Product views and illustrations in this guide may differ from the actual product. They are intended only as illustrative material.

2 Safety

2.1 Intended use This guide describes the Balluff BNI IOL-801-102-Z03x for the application as status light module. Hereby it is about an IO-Link device which communicates by means of IO-Link protocol with the superordinate IO-Link master assembly.

2.2 Installation and startup



Attention!

Installation and startup are to be performed only by trained specialists. Qualified personnel are persons who are familiar with the installation and operation of the product, and who fulfills the qualifications required for this activity. Any damage resulting from unauthorized manipulation or improper use voids the manufacturer's guarantee and warranty. The Operator is responsible for ensuring that applicable of safety and accident prevention regulations are complied with.

2.3 General safety instructions

Commissioning and inspection

Before commissioning, carefully read the operating manual. The system must not be used in applications in which the safety of persons is dependent on the function of the device.

Authorized Personnel

Installation and commissioning may only be performed by trained specialist personnel.

Intended use

Warranty and liability claims against the manufacturer are rendered void by:

- Unauthorized tampering
- Improper use
- Use, installation or handling contrary to the instructions provided in this operating manual

Obligations of the Operating Company

The device is a piece of equipment from EMC Class A. Such equipment may generate RF noise. The operator must take appropriate precautionary measures. The device may only be used with an approved power supply. Only approved cables may be used.

Malfunctions

In the event of defects and device malfunctions that cannot be rectified, the device must be taken out of operation and protected against unauthorized use.

Intended use is ensured only when the housing is fully installed.

2.4 Resistance to aggressive substances



Attention!

The BNI modules generally have a good chemical and oil resistance. When used in aggressive media (eg chemicals, oils, lubricants and coolants each in high concentration (ie, low water content)) must be checked prior application-related material compatibility. In the event of failure or damage to the BNI modules due to such aggressive media are no claims for defects.

Hazardous voltage



Attention!

Disconnect all power before servicing equipment.



Note

In the interest of product improvement, the Balluff GmbH reserves the right to change the specifications of the product and the contents of this manual at any time without notice.

3 Getting Started

3.1 Overview BNI IOL-801-102-Z036

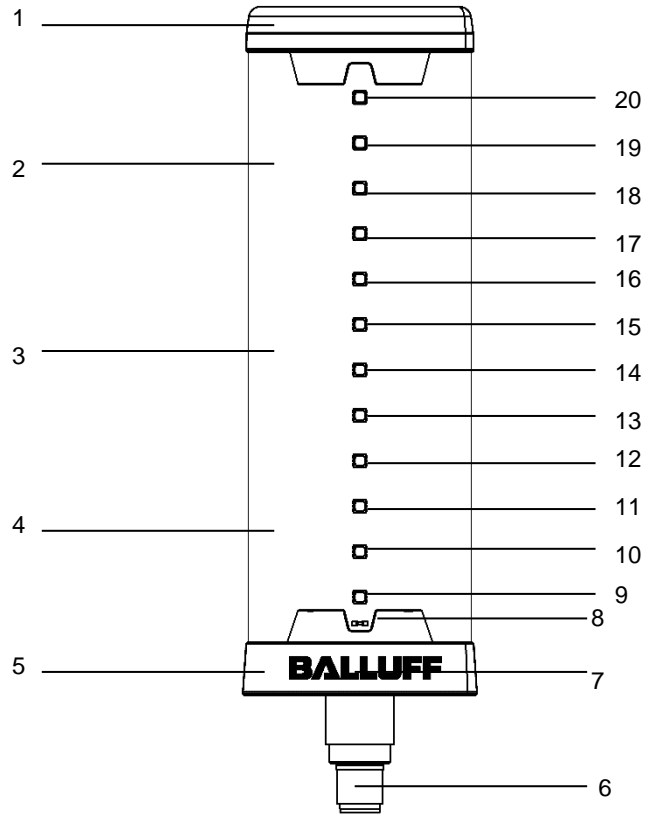


Fig. 3-1: BNI IOL-801-102-Z036

- | | |
|---------------------------|----------|
| 1 Cap | 9 LED12 |
| 2 Segment 1 | 10 LED11 |
| 3 Segment 2 | 11 LED10 |
| 4 Segment 3 | 12 LED09 |
| 5 Socket | 13 LED08 |
| 6 M12 connector | 14 LED07 |
| 7 M18 thread for mounting | 15 LED06 |
| 8 Status LED | 16 LED05 |
| | 17 LED04 |
| | 18 LED03 |
| | 19 LED02 |
| | 20 LED01 |

3 Getting Started

3.2 Overview BNI IOL-801-102-Z037

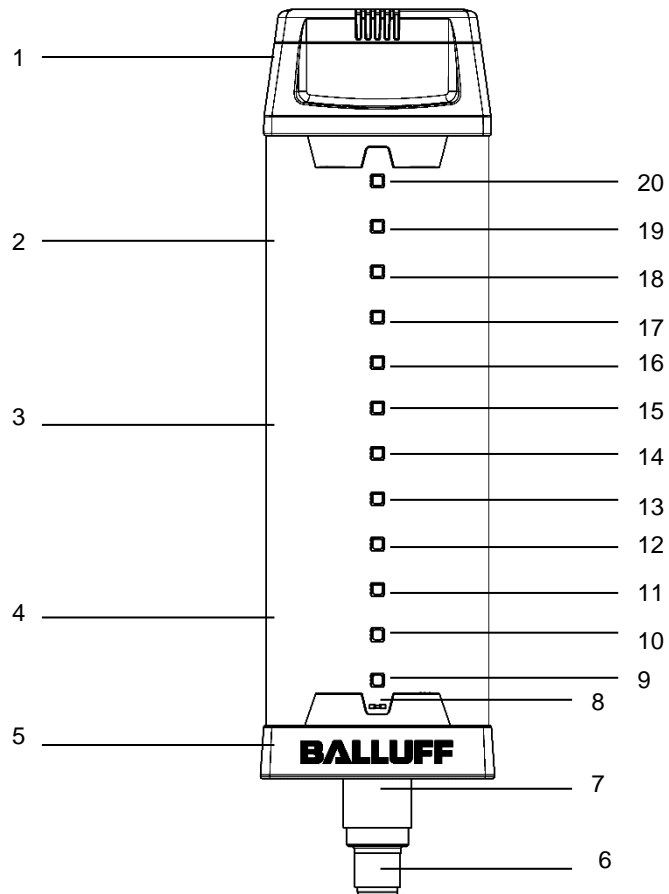


Fig. 3-2: BNI IOL-801-102-Z037

- | | |
|---------------------------|----------|
| 1 Cap with buzzer | 9 LED12 |
| 2 Segment 1 | 10 LED11 |
| 3 Segment 2 | 11 LED10 |
| 4 Segment 3 | 12 LED09 |
| 5 Socket | 13 LED08 |
| 6 M12 connector | 14 LED07 |
| 7 M18 thread for mounting | 15 LED06 |
| 8 Status LED | 16 LED05 |
| | 17 LED04 |
| | 18 LED03 |
| | 19 LED02 |
| | 20 LED01 |

3 Getting Started


3.3 Mechanical connection

The BNI IOL-801-102-Z03x modules are attached by using an M18 nut.

3.4 Electrical connection

The BNI IOL-801-102-Z03x modules require no separate supply voltage connection. Power is provided through the IO-Link interface by the host IO-Link Master.


3.5 Function ground

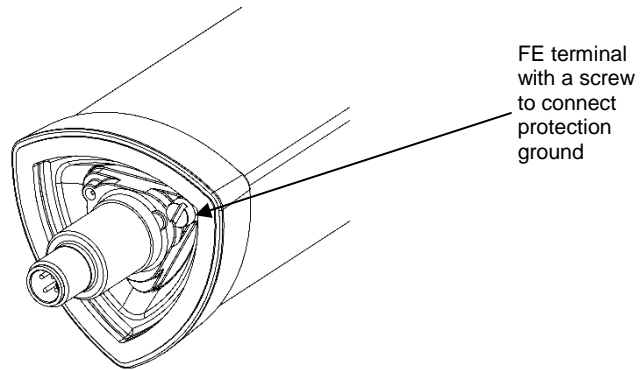

Note
 The FE connection from the housing to the machine must be low-impedance and as short as possible. There is no need to use an additional FE connection if a low impedance connection to FE can be assured through the M18 Smart Light connector thread.

3.6 IO-Link connection

IO-Link (M12, A-coded, male)

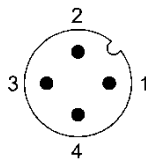

Pin	Function
1	Power supply controller, +24V
2	-
3	GND, reference potential
4	C/Q, IO-Link Data transmission channel

Smart Light connection

- Connection protection ground to FE terminal, if present.
- Connect the incoming IO-Link line to the Smart Light.

Note
 A standard 3 wire sensor cable is used for connecting to the host IO-Link master.

Module versions

Version	Description
BNI IOL-801-102-Z036	Maximum 3 segment configurable signal light with level meter, runlight mode and flexible mode.
BNI IOL-801-102-Z037	Maximum 3 segment configurable signal light with level meter, runlight mode, flexible mode and buzzer.

3 Getting Started

3.7 Short description of the functionality

The functionality of the Balluff status light module can be controlled through process data and ISDU registers. It has four main mode of functionality:

- Segment mode
- Level mode
- Runlight mode
- Flexible mode*

With the help of these four modes various warning and indication signals can be indicated. The buzzer function is available in all modes. The synchronisation* is available in segment and runlight mode and if the Smartlight contains buzzer it is also available in level and flexible mode.

3.8 Segment mode

To use the module as a standard status light, the corresponding byte (Mode select) must be written with the proper value in the process data. The process data controls the color of each segment. In the segment mode the module can be used as a standard status light, with configurable number of segments. Maximum three segments can be set. Irrespectively of the selected number of segments, always all of the LEDs are used as a display element. The number of the segments can be set any number between 1 and 3. The module has 12 LEDs, which are equally distributed between the segments. The color of each segment can be selected from a color table, which has six pre-defined colors and one user defined color. The combinations of the pre-defined colors are not limited. In the segment mode, the segments can be set to blink too. Each segment has two control bits in process data, which determine the blinking state of the corresponding segment and the type of the blinking. The blinking has two modus. Either normal blinking or flash mode can be selected. In normal blinking the LEDs are switched on and off periodically with a 50% duty cycle. In the flash mode, the LEDs are switched on and off quickly three times. The flash is repeated in every second. The frequency of the normal blinking can be changed too.

3.9 Level mode

In level mode the complete module works as one indicator element. In this case a level value can be displayed. The higher value the module becomes, the more LEDs will be switched on. This mode can be used as a level indicator, for example to indicate a fluid level in a tank. The number of the LEDs switched on depends on the input level. In the level mode process data gives the level. The resolution of the input level can be selected from 8 bit up to 16 bit.

In the level mode various parameters can be controlled through the process data or ISDU registers. These ISDU parameters should be set before the level mode is used. The level display can be selected to be bottom-up or top-down. In the bottom-up mode the level indicator increases from the bottom of the module. In the top-down mode the indicator increases from the top of the module.

Although there are no real segments in the level mode, because the LEDs are controlled by the input level, the LEDs are divided into three virtual segments. These virtual segments can have their own color. The color of these segments can be set in the process data. So it can be realized, that the level meter can have more colors (up to the maximum number of the segments). Some or all colors can be set as dominant color. This means, when the input level is high enough to switch on the next LED and this LED is in another virtual segment, the LEDs, which are under the actual LED, take over the color of the actual LED. In this case, as the input level increases, the color of the full LED bar can be changed.


For example:

The lower segment is green, the middle segment is yellow and the upper segment is red. The LEDs are shown in the next figures, when the Smartlight level mode is configured differently.

*Available from software version 3.0


3 Getting Started

The LED bar at increasing input data and no color dominance. (The virtual segments can be seen on the left side.)

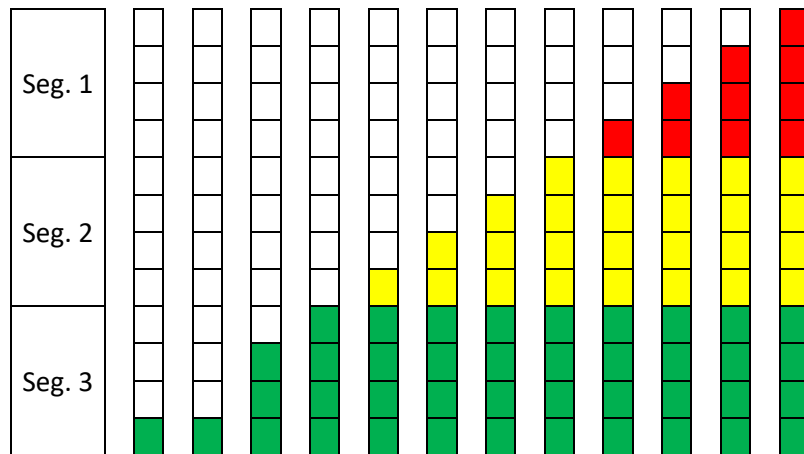

3 Getting Started


The LED bar at increasing input data, all the colors are dominant.

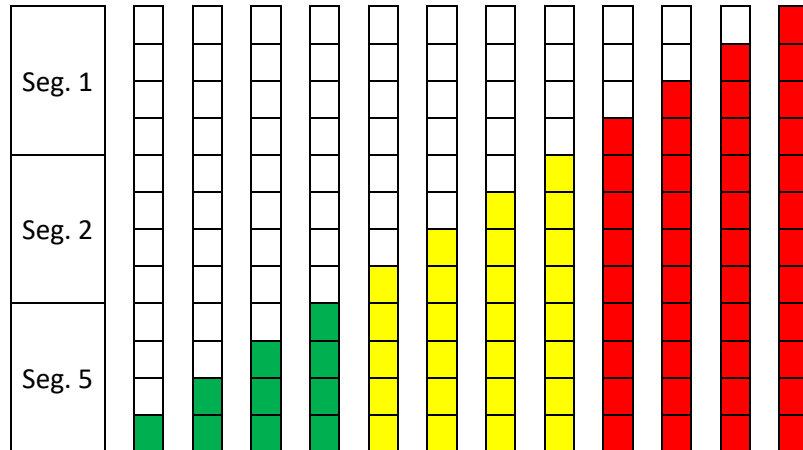

3 Getting Started

By default the 12 LEDs are divided into equal virtual segments. The height of the virtual segments can be modified too. There are two ISDU registers (Level mode limit x-y ISDU register), in which the limits of the virtual segments can be modified. For example: If the input level value is higher than the limit value of the 2. and 3. segment (Level mode limit 2-3), the current LED will become the color of the Level mode segment 2 color. The limits can be given either in percent or in absolute value.

The LED bar at increasing input data, there is no color dominance. The limits of the segments are modified, so they are not equally distributed.

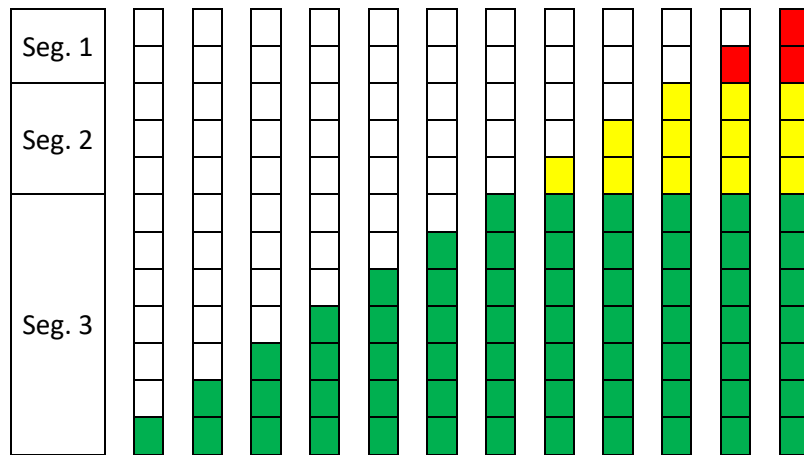

3.10 Runlight mode

In the runlight mode, the complete module displays a running light effect. In this case all of the LEDs are working as one runlight effect. The process data defines the color of the running segment, the background color and the speed of the segment. One segment has a size of 4 LEDs.

3.11 Flexible mode

In the flexi mode each LED-ring can be configured individually. With BNI IOL-801... you can realize up to 12 different segments. To use the flexi mode, the ISDU register must be set to flexi mode. There is an ISDU register for each LED ring, which has 5 subindices, 3 for the color channels, one for brightness ON and one for brightness OFF. In the process data there is one bit for every LED-ring, which sets the LED state (ON or OFF)

3.12 Synchronisation

In synchronisation mode you can synchronise functions (blinking, flashing, buzzer) of several Balluff SmartLights. The function is available in runlight- and segment mode. The synchronisation is controlled by 2 bits in the process data: (Sync Start and Sync Impluse). When a rising edge is detected on the Sync start bit, the SmartLight resets its internal state. This assures that the synchronised SmartLights start to work in the same state. The Sync start rising edge has to be generated once after a reset. When a rising edge is detected on the Sync impulse bit, the SmartLight resets its internal timer. It has to be generated cyclically in order to keep the SmartLights synchronised. The time period of the Sync impulse can be configured by the user. It's recommended to set the values between 1 sec. and 15 sec., depending on the frequency of the synchronised parameters (blinking, flashing, buzzer).

4 IO-Link Interface

4.1 IO-Link Data

BNI IOL-801-102-Z03x		
Data transmission rate	COM2 (38,4 kBaud)	
Minimal cycle time	7.2 ms	
Process data length	8 Byte output, 1 Byte input	
IO-Link Revision	1.1	1.0
Frame type	2.V	1
Process data cycle time*	7.2 ms	7.2 ms

* by min. cycle time

4.2 Process data / Input data

The BNI IOL-801-102-Z03x has one byte input process data. The input process data contains the error value for configuration errors. There are different errors, which can be present at the same time, but only the error code with the highest priority will be send in the input process data.

BNI IOL-801-102-Z036

Byte	0							
Bit	7	6	5	4	3	2	1	0
Description	Error code							

Error codes

- 0x00 – No error
- 0x01 – Wrong mode selected
- 0x02 – Level value out of range
- 0x04 – Wrong number of segments selected
- 0x05 – Wrong frequency selected
- 0x06 – Wrong speed selected
- 0x07 – Wrong buzzer function selected (Only in case of BNI IOL-801-102-Z037)

An error code (values from 0x01 to 0x07) with lower value has higher priority than error code with higher value.

4.3 Process data / Output data

The BNI IOL-801-102-Z03x has 8 byte output process data. The output process data has different meaning depending on the selected mode (segment mode, level mode, runlight mode or flexible mode). The byte 3 has a special meaning in the output process data. It is common for all modes. The mode of the Smart Light can be selected and the synchronisation can be controlled with the help of this byte.

4 IO-Link Interface

**BNI IOL-801-102-Z03x,
Segment Mode**

Byte	0							
Bit	7	6	5	4	3	2	1	0
Description	Segment 2 blink	Segment 2 color			Segment 1 blink	Segment 1 color		

Byte	1							
Bit	7	6	5	4	3	2	1	0
Description	Segment 3 blink	Segment 3 color		

Byte	2							
Bit	7	6	5	4	3	2	1	0
Description	Buzzer state	.	Buzzer Type	

Bit 0-2/4-6, Segment color

- 000 = Off
- 001 = Green
- 010 = Red
- 011 = Yellow
- 100 = Blue
- 101 = Orange*
- 110 = User defined*
- 111 = White

*color is available from software version 2.1

Bit 3, Segment blink

- 0 – Segment does not blink
- 1 – Segment blinks according to the blink modus settings

Bit 4-5, Buzzer type

(Only in case of BNI IOL-801-102-Z037)

- 00 = Continuous sound
- 01 = 1 Hz chopped sound
- 10 = 5 Hz chopped sound
- 11 = 3 short beep, 2 sec pause

Bit 7, Buzzer state

(Only in case of BNI IOL-801-102-Z037)

- 0 – Buzzer is off
- 1 – Buzzer is on

4 IO-Link Interface

Byte	3							
Bit	7	6	5	4	3	2	1	0
Description	Sync impulse*	Sync start*	.	.	Flexible Mode*	Runlight Mode	Level Mode	Segment Mode

The operating mode of the Smart Light can be selected in the Byte 3. Only one bit should be set at the same time from the mode bits (bit0-3). The Sync start/impulse bits are rising edge sensitive. The Smart Light stays in the last Modus, when the operating mode is set on 0x00.

Byte	4							
Bit	7	6	5	4	3	2	1	0
Description	Number of segments (1 – 3)							

Byte	5							
Bit	7	6	5	4	3	2	1	0
Description	Blink mode Segment 3	Blink mode Segment 2	Blink mode Segment 1

Blink mode segment X

- 0 – The segment is blinking with a 50% duty cycle
- 1 – The segment is flashing.

*Available from software version 3.0

4 IO-Link Interface

Byte	6							
Bit	7	6	5	4	3	2	1	0
Description	Blinking frequency (1 – 5)							

- 0x01 – 0.5 Hz
- 0x02 – 1 Hz
- 0x03 – 2 Hz
- 0x04 – 5 Hz
- 0x05 – 10 Hz

Byte	7							
Bit	7	6	5	4	3	2	1	0
Description	Buzzer volume** (0-255)							

- 0: minimum volume
- 255: maximum volume

**Available from software version 4.0

4 IO-Link Interface

BNI IOL-801-102-Z03x, Level Mode

Byte	0							
Bit	7	6	5	4	3	2	1	0
Description	Segment 2 dominance	Segment 2 color			Segment 1 dominance	Segment 1 color		

Byte	1							
Bit	7	6	5	4	3	2	1	0
Description	Segment 3 dominance	Segment 3 color		

Byte	2							
Bit	7	6	5	4	3	2	1	0
Description	Buzzer state	.	Buzzer Type	

Bit 0-2/4-6, Segment color

- 000 = Off
- 001 = Green
- 010 = Red
- 011 = Yellow
- 100 = Blue
- 101 = Orange*
- 110 = User defined*
- 111 = White

*color is available from software version 2.1

Bit 3 / 7, Segment dominance

- 0 – Segment is not dominant
- 1 – Segment is dominant

Bit 4-5, Buzzer type

(only by BNI IOL-801-102-Z037)

- 00 = Continuous sound
- 01 = 1 HZ chopped sound
- 10 = 5 Hz chopped sound
- 11 = 3 short beep, 2 sec pause

Bit 7, Buzzer state

(only by BNI IOL-801-102-Z037)

- 0 – Buzzer is off
- 1 – Buzzer is on

4 IO-Link Interface

Byte	3							
Bit	7	6	5	4	3	2	1	0
Description	Sync impulse*	Sync start*	.	.	Flexible Mode*	Runlight Mode	Level Mode	Segment Mode

The operating mode of the Smart Light can be selected in the Byte 3. Only one bit should be set at the same time from the mode bits (bit0-3). The Sync start/impulse bits are rising edge sensitive. The Smart Light stays in the last Modus, when the operating mode is set on 0x00.

Byte	4							
Bit	7	6	5	4	3	2	1	0
Description	Level type

0 – bottom – up
 1 – top - down

Byte	5							
Bit	7	6	5	4	3	2	1	0
Description	Level value (16 bit) – Low byte							

Byte	6							
Bit	7	6	5	4	3	2	1	0
Description	Level value (16 bit) – High byte							

*Available from software version 3.0

4 IO-Link Interface

Byte	7							
Bit	7	6	5	4	3	2	1	0
Description	Buzzer volume** (0-255)							

0: minimum volume
255: maximum volume

Level value (16 bit) – High byte								level value (16 bit) – Low byte								
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
MSB	8 bit level value						LSB									
MSB	10 bit level value					LSB										
MSB	12 bit level value				LSB											
MSB	14 bit level value			LSB												
MSB	16 bit level value															LSB

Level value: 8, 10, 12, 14 or 16 bit value for level indicator. The resolution can be set in Level resolution ISDU register. The Level value is always left justified.

**Available from software version 4.0

4 IO-Link Interface

BNI IOL-801-102-Z03x, Runlight Mode

Byte	0							
Bit	7	6	5	4	3	2	1	0
Description	.	Running color			.	Background color		

Byte	1							
Bit	7	6	5	4	3	2	1	0
Description

Byte	2							
Bit	7	6	5	4	3	2	1	0
Description	Buzzer state	.	Buzzer Type	

Bit 0-2 / 4-6, Background Color / Running color **Bit 7, Buzzer state**
(only by BNI IOL-801-102-Z037)

- 000 = Off
- 001 = Green
- 010 = Red
- 011 = Yellow
- 100 = Blue
- 101 = Orange*
- 110 = User defined*
- 111 = White

- 0 – Buzzer is off
- 1 – Buzzer is on

*color is available from software version 2.1

Bit 4-5, Buzzer type
(only by BNI IOL-801-102-Z037)

- 00 = Continuous sound
- 01 = 1 HZ chopped sound
- 10 = 5 Hz chopped sound
- 11 = 3 short beep, 2 sec pause

4 IO-Link Interface

Byte	3							
Bit	7	6	5	4	3	2	1	0
Description	Sync impulse*	Sync start*	.	Run direction**	Flexible Mode*	Runlight Mode	Level Mode	Segment Mode

The operating mode of the Smart Light can be selected in the Byte 3. Only one bit should be set at the same time from the mode bits (bit0-3). The Sync start/impulse bits are rising edge sensitive. The Smart Light stays in the last Modus, when the operating mode is set on 0x00.

Run direction:

0 – bottom-up

1 – top-down

Byte	4							
Bit	7	6	5	4	3	2	1	0
Description

Byte	5							
Bit	7	6	5	4	3	2	1	0
Description

Byte	6							
Bit	7	6	5	4	3	2	1	0
Description	Running speed (1 – 5)							

*Available from software version 3.0

4 IO-Link Interface

The speed of the running segment can be set between 1 and 5. The segment will be running slowly, when the speed is set to 1, and it will be running quicker when the speed value is set to higher value.

Byte	7							
Bit	7	6	5	4	3	2	1	0
Description	Buzzer volume** (0-255)							

0: minimum volume
255: maximum volume

**Available from software version 4.0

4 IO-Link Interface

**BNI IOL-801-102-Z03x,
Flexible Mode**

Byte	0							
Bit	7	6	5	4	3	2	1	0
Description	LED08	LED07	LED06	LED05	LED04	LED03	LED02	LED01

Byte	1							
Bit	7	6	5	4	3	2	1	0
Description	LED12	LED11	LED10	LED09

Byte	2							
Bit	7	6	5	4	3	2	1	0
Description	Buzzer state	.	Buzzer Type

Bit 0-4 / 0-8, LEDxx state

0 – LED is off
1 – LED is on

Bit 4-5, Buzzer type

(only by BNI IOL-801-102-Z037)

00 = Continuous sound
01 = 1 Hz chopped sound
10 = 5 Hz chopped sound
11 = 3 short beep, 2 sec pause

Bit 7, Buzzer state

(only by BNI IOL-801-102-Z037)

0 – Buzzer is off
1 – Buzzer is on

4 IO-Link Interface

Byte	3							
Bit	7	6	5	4	3	2	1	0
Description	Sync impulse*	Sync start*	.	.	Flexible Mode*	Runlight Mode	Level Mode	Segment Mode

The operating mode of the Smart Light can be selected in the Byte 3. Only one bit should be set at the same time from the mode bits (bit0-3). The Sync start/impulse bits are rising edge sensitive. The Smart Light stays in the last Modus, when the operating mode is set on 0x00.

Byte	4							
Bit	7	6	5	4	3	2	1	0
Description

Byte	5							
Bit	7	6	5	4	3	2	1	0
Description

Byte	6							
Bit	7	6	5	4	3	2	1	0
Description

Byte	7							
Bit	7	6	5	4	3	2	1	0
Description	Buzzer volume** (0-255)							

0: minimum volume
255: maximum volume

*Available from software version 3.0

**Available from software version 4.0

4 IO-Link Interface

4.4 Parameter data/
Request data

	DPP	ISDU		Object name	Length	Access right	Default Value		
	Index	Index	Sub-index						
Identification Data	07hex			Vendor ID	2 Byte	Read only	0378hex		
	08hex			Device ID	3 Byte		050A09hex 050A10hex		
	09hex						Vendor name	7 Byte	BALLUFF
	0Ahex			Vendor text	15 Byte				www.balluff.com
	0Bhex								Product name
		Product ID	7 Byte	BNI0088 BNI008A					
				Product text	21 Byte 33 Byte		Smart Light 3 segment Smart Light 3 segment with buzzer		
		Serial Number	16 Byte						
		Hardware Revision	1 Byte						
		Firmware Revision	48 Byte						
	18hex	0	Application tag*	32 Byte	Read / Write				

* 32 Byte string adjustable by the user

4 IO-Link Interface

	ISDU		Object name	Length	Range	Default Value
	Index	Sub-index				
Parameter Data	43 _{hex}	0	Resolution	1 Byte	0...4	4
	49 _{hex}	0	Level mode limit 1-2	2 Byte	0 _{hex} ...FFFF _{hex}	66
	4A _{hex}	0	Level mode limit 2-3	2 Byte	0 _{hex} ...FFFF _{hex}	33
	50 _{hex}	0 1-2	Supply monitoring*	1 Byte	-	-
	51 _{hex}	0 1-3	Brightness	3 Byte	0 _{hex} ...7F7F7F _{hex}	7F7F7F _{hex}
	54 _{hex}	0	Serial Number Set****	16 Byte		16x00 _{hex}
	57 _{hex}	0 1-3	Operating Hours Counter****	12 Byte	-	-
	58 _{hex}	0	Boot Cycle Counter****	4 Byte	-	-
	59 _{hex}	0 1-5	Device Temperature****	5 Byte	-	-
	A1 _{hex}	0 1-5	LED01 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	FF0000FF01 _{hex}
	A2 _{hex}	0 1-5	LED02 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	FF0000FF01 _{hex}
	A3 _{hex}	0 1-5	LED03 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	FF0000FF01 _{hex}
	A4 _{hex}	0 1-5	LED04 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	FF0000FF01 _{hex}
	A5 _{hex}	0 1-5	LED05 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	808080FF01 _{hex}
	A6 _{hex}	0 1-5	LED06 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	808080FF01 _{hex}
	A7 _{hex}	0 1-5	LED07 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	808080FF01 _{hex}
	A8 _{hex}	0 1-5	LED08 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	808080FF01 _{hex}
	A9 _{hex}	0 1-5	LED09 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	00FF00FF01 _{hex}
	AA _{hex}	0 1-5	LED10 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	00FF00FF01 _{hex}
	AB _{hex}	0 1-5	LED11 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	00FF00FF01 _{hex}
AC _{hex}	0 1-5	LED12 settings***	5 Byte	0 _{hex} ...FFFFFFFF _{hex}	00FF00FF01 _{hex}	
FB _{hex}	0	Safe State****	1 Byte	0...1	0	
FC _{hex}	0 1-3	User color**	3 Byte	0 _{hex} ...FFFFFF _{hex}	008080 _{hex}	
FD _{hex}	0	Limit type**	1 Byte	0...1	0	

*Read only

**Available from software version 2.1

***Available from software version 3.0

****Available from software version 4.0

4 IO-Link Interface

Level resolution
43hex

The resolution of the input data in level mode.

0 = 8 bit
 1 = 10 bit
 2 = 12 bit
 3 = 14 bit
 4 = 16 bit

Level mode limit x-y
49hex
4Ahex

The level limit values are interpreted either as a percent value or as an absolute value depending on the value of the Limit type register (FDhex). The values are interpreted as a percent value between 0% and 100% by default. When the Limit type is set to absolute value, an 8, 10, 12, 14, 16 bit number (depends on the resolution) determines the limits between two segments in level mode. The limit values are always right justified.

Byte	0								1								
Bit	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	
Limit type is absolute									MSB	8 bit limit value							LSB
								MSB	10 bit limit value							LSB	
					MSB	12 bit limit value							LSB				
				MSB	14 bit limit value							LSB					
			MSB	16 bit limit value							LSB						
Limit type is percent									Percent value: 0 – 100								



Note

Before changing the limit values, the Resolution and Limit type should be set to the desired value!

4 IO-Link Interface

Supply monitoring
50hex

Bit	7	6	5	4	3	2	1	0
Sub Index							2	1
Description	LED Voltage failure	Under voltage Us

Under voltage Us

0: Us voltage is Ok
1: Low voltage on IO-Link pin 1

LED Voltage failure

0: LED Voltage is Ok
1: LED Voltage failure

Brightness
51hex

This register sets the brightness for each channel (red, green and blue). Values from 0x00 to 0x7F are accepted for each channel. This register can be accessed through the subindices 0, 1, 2 or 3. Reading/writing the subindex 0 the whole 3 byte brightness data can be accessed. Subindex 1, 2 and 3 contains the brightness data for red, green and blue channels.

Byte	0	1	2
Sub Index	1	2	3
Description	Brightness value for red channel	Brightness value for green channel	Brightness value for blue channel

Setting the serial number
54hex

The serial number has a default value of 16x 00_{hex}.
In order to use the "Identity" master validation mode, a serial number can be set using this parameter.
This prevents a device from connecting to the wrong master port.



Note

It is recommended to set a unique serial number for each device, and use the "Identity" master validation mode.

4 IO-Link Interface

Operating Hours Counter
57hex

The register contains the operating hours of the device.
 Operating Hours (Subindex 1): operating hours during lifetime, not resettable.
 Operating Hours Maintenance (Subindex 2): operating hours, resettable with system command 0xA5.
 Operating Hours Power Up (Subindex 3): operating hours since last power up.

Byte	3	2	1	0	3	2	1	0	3	2	1	0
Subindex	1				2				3			
Description	Operating Hours				Operating Hours Maintenance				Operating Hours Power Up			

Boot Cycle Counter
58hex

Boot Cycle Counter counts the number of start-ups.

Byte	3	2	1	0
Subindex	0			
Description	Boot Cycle Counter			

Device Temperature
59hex

The device measures its temperature and stores the minimum and maximum temperature values during life-time and since last start-up.

The temperature value is stored as a signed 8 bit integer (from -128 °C to 127 °C), with 1 °C resolution.


For example:
 1Ehex = 30dec = 30 °C
 FDhex = -3dec = -3 °C

Byte	0	1	2	3	4
Sub-index	1	2	3	4	5
Description	Actual Temperature Value (°C)	Max. Temperature Value Since Last Start (°C)	Min. Temperature Value Since Last Start (°C)	Max. Temperature Value Since First Start (°C)	Min. Temperature Value Since First Start (°C)

4 IO-Link Interface

Flexible mode, LEDxx settings
A1hex...AChex

This register contains the settings for the flexible LEDs. Values from 0x00 to 0xFF are accepted for each setting. This register can be accessed through the subindices 0, 1, 2, 3, 4 or 5. Reading/writing the subindex 0 the whole 5 byte data can be accessed. Subindex 1, 2 and 3 contains the red, green and blue color component, subindex 4 is the ON brightness and subindex 5 is the OFF brightness.

Note
 These registers are available from software version 3.0. The Brightness ISDU register (51hex) determines the maximum brightness of each channel. It is recommended to set the Brightness ISDU register's value to 7F7F7Fhex in case of using flexible mode.

Byte	0	1	2	3	4
Sub Index	1	2	3	4	5
Description	LED color, red channel	LED color, green channel	LED color, blue channel	On brightness	Off brightness

Safe State
FBhex

The safe state function can be activated with this register.

0 = Not Active
1 = Active

Safe state not active: when there is no IO-Link communication all LEDs are switched off.
 Safe state active: when there is no IO-Link communication segment 1 blinks red, with 5 Hz frequency.

4 IO-Link Interface

User color
FC_{hex}

This register sets the value of the user defined color. Values for 0x00 to 0xFF are accepted for each channel. This register can be accessed through the subindices 0, 1, 2 or 3. Reading/writing the subindex 0 the whole 3 byte user color data can be accessed. Subindex 1, 2 and 3 contains the red, green and blue channel data for the user color.



Note

This register is available from software version 2.1

Byte	0	1	2
Sub Index	1	2	3
Description	User defined color, red channel	User defined color, green channel	User defined color, blue channel

Limit type
FD_{hex}

The limit registers are evaluated either as a percent value or as an absolute value. The Limit type register sets the type of the evaluation.

- 0x00 – Limit type is given in a percent value
- 0x01 – Limit type is given in an absolute value



Note

This register is available from software version 2.1

4.5 Errors

Error Code	Description
0x8011	Index not available
0x8012	Subindex not available
0x8023	Access Denied
0x8030	Parameter Value out of Range
0x8033	Parameter length overrun
0x8034	Parameter length underrun


4.6 Events

IO-Link Revision 1.0	
Event Code	Description
0x5112	Low supply voltage (US)
IO-Link Revision 1.1	
Event Code	Description
0x5111	Low supply voltage (US)

4 IO-Link Interface


4.7 RGB Color

The RGB color model is an additive color model in which red, green and blue light are added together in various ways to reproduce a broad array of colors. The name of the model comes from the initials of the three additive primary colors, red, green and blue.
By changing the respective red - green - blue channels different colors can be created

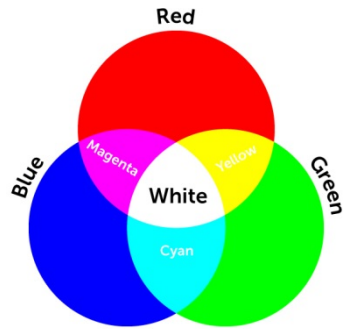


5 Technical Data

5.1 Dimensions

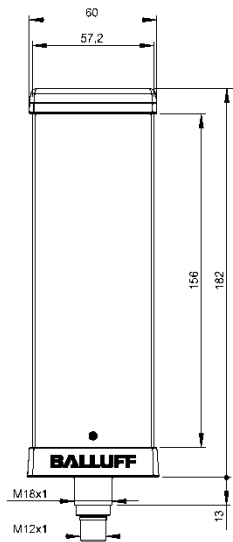

BNI IOL-801-102-Z036

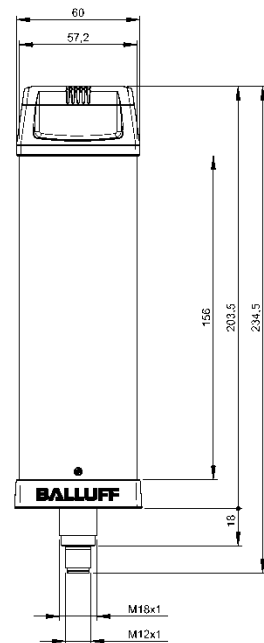

BNI IOL-801-102-Z037

5.2 Mechanical data

Housing Material	Polycarbonate transparent - die-cast zinc housing
IO-Link-Port	M12, A-coded, male
Enclosure rating	BNI IOL-801-102-Z036 IP65 (only when plugged-in) BNI IOL-801-102-Z037 IP30 (only when plugged-in)
Weight	BNI IOL-801-102-Z036 ca. 400 g BNI IOL-801-102-Z037 ca. 470 g
Dimensions (L x W x H, excluding connector)	BNI IOL-801-102-Z036: 182 x 60 x 60 mm BNI IOL-801-102-Z037: 234.5 x 60 x 60 mm

5.3 Electrical data


Operating voltage	18 ... 30,2 V DC, per EN 61131-2
Ripple	< 1 %
Current draw all segments off	≤ 35 mA @24V
Current draw all segments white, buzzer on	BNI IOL-801-102-Z036: ≤ 245 mA BNI IOL-801-102-Z037: ≤ 255 mA
Volume of the buzzer module	100dB at 1m distance
Tone frequency of the buzzer module	2800 ± 500 Hz
Total number of signal lights (all 3 sides)	3 x 12

5.4 Operating conditions

Operating temperature	-5 °C ... +50 °C
Storage temperature	-15 °C ... +50 °C

5 Technical Data

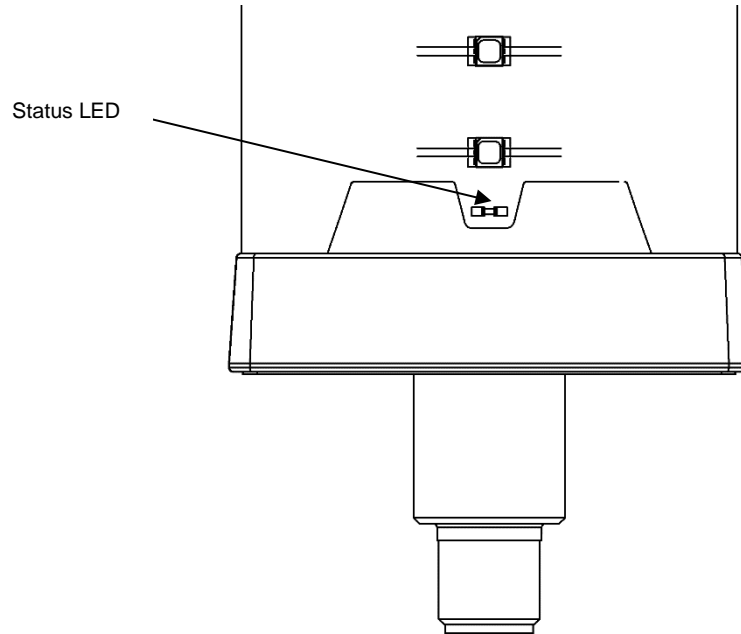

5.5 LED indicator



Status LED


LED	Indicator	Function
Status LED	Green, green flashing	Status for supply and communication

The status LED indicates the current status of the power supply and the communication. It can be switched on, switched of and flashing.

	Communication error	Communication ok
Supply modul undervoltage	LED is static off	LED is flashing 
Supply module ok	LED is static on	LED is flashing 

6 Appendix

6.1 Product ordering code

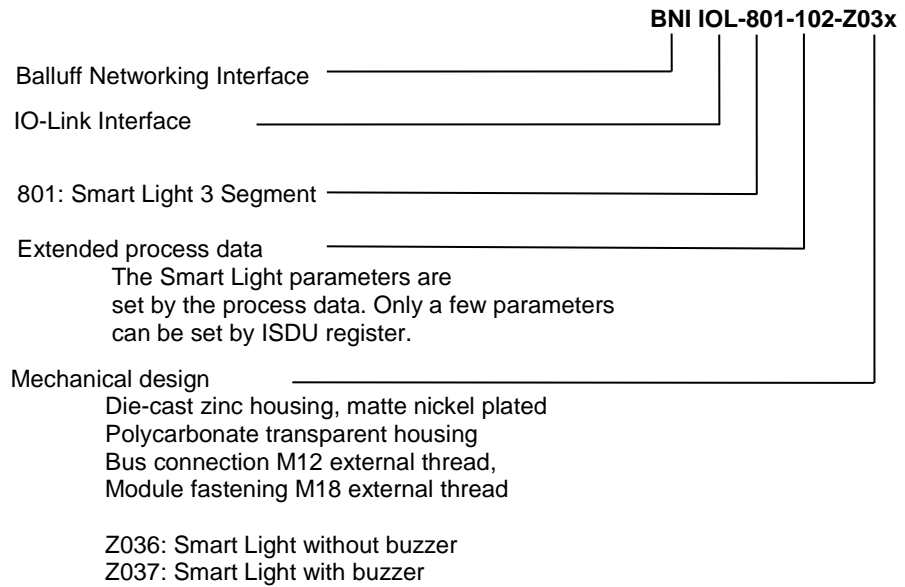

6.2 Order information

Type	Order Code
BNI IOL-801-102-Z036	BNI0088
BNI IOL-801-102-Z037	BNI008A

Included material

- BNI IOL-801-102-Z036 consists of the following components:
- signal light
 - M18x1 nut
 - rubber foot
 - screw M4
 - spring washer
 - user's guide

www.balluff.com