

Material Mass directives Standards CCC approval

General specifications Sensing range Adjustment range Dead band Standard target plate Transducer frequency Response delay

Electrical specifications Operating voltage U_B No-load supply current I0

Input Input type

Output

Output type Rated operating current Ie Default setting Voltage drop Ud Repeat accuracy Switching frequency f Range hysteresis H Temperature influence Ambient conditions Ambient temperature Storage temperature **Mechanical specifications** Connection type Degree of protection

Housing Transducer

Compliance with standards and Standard conformity

Approvals and certificates UL approval

Dimensions

30 ... 250 mm 50 ... 250 mm 0 ... 30 mm 100 mm x 100 mm approx. 310 kHz approx. 50 ms

10 ... 30 V DC , ripple 10 $\%_{\rm SS}$ \leq 30 mA

1 program input lower evaluation limit A1: -U_B ... +1 V, upper evaluation limit A2: +4 V ... +U_B input impedance: > 4.7 k Ω , pulse duration: \geq 1 s

1 switch output PNP Normally open/closed , programmable 100 mA , short-circuit/overload protected Switch point A1: 50 mm Switch point A2: 250 mm \leq 3 V ≤1 % ≤ 8 Hz 1 % of the set operating distance ± 1.5 % of full-scale value


-25 ... 70 °C (-13 ... 158 °F) -40 ... 85 °C (-40 ... 185 °F)

Connector M12 x 1 , 4-pin IP68 / IP69K

stainless steel 1.4404 / AISI 316L O-ring for cover seal: Viton PTFE (diaphragm surface) 35 g

EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012

cULus Listed, Class 2 Power Source CCC approval / marking not required for products rated \leq 36 V

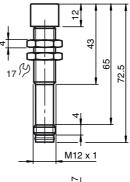



Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

Х

Curve 1: flat surface 100 mm x 100 mm Curve 2: round bar, Ø 25 mm

> USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Electrical Connection

Standard symbol/Connections: (version E5, pnp)

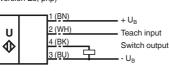

Core colours in accordance with EN 60947-5-2.

Pinout

Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)

Accessories

UB-PROG2 Programming unit

BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm **BF 12**

Mounting flange, 12 mm

V1-G-2M-PVC Female cordset, M12, 4-pin, PVC cable

V1-W-2M-PUR

Female cordset, M12, 4-pin, PUR cable

Adjusting the switching points

The ultrasonic sensor features a switch output with two teachable switching points. These are set by applying the supply voltage -U_B or +U_B to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. Switching point A1 is taught with $-U_B$, A2 with $+U_B$.

Five different output functions can be set

- 1. Window mode, normally-open function
- 2. Window mode, normally-closed function
- 3. one switching point, normally-open function
- 4. one switching point, normally-closed function
- 5. Detection of object presence

TEACH-IN window mode, normally-open function

- Set target to near switching point
- TEACH-IN switching point A1 with -U_B
- Set target to far switching point
- TEACH-IN switching point A2 with +UB

TEACH-IN window mode, normally-closed function

- Set target to near switching point

2

- TEACH-IN switching point A2 with +UB

Pepperl+Fuchs Group

www.pepperl-fuchs.com


Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001

fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



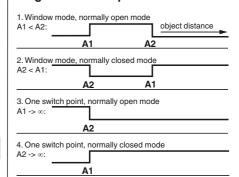

Additional Information

Programmable output modes

5. A1 -> ∞ , A2 -> ∞ : Object presence detection mode Object detected: Switch output closed No object detected: Switch output open

- Set target to far switching point
- TEACH-IN switching point A1 with -UB

TEACH-IN switching point, normally-open function

- Set target to near switching point
- TEACH-IN switching point A2 with +UB
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -UB

TEACH-IN switching point, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A1 with -UB
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with +U_B
- **TEACH-IN** detection of objects presence
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -UB
- TEACH-IN switching point A2 with +U_B

Default setting of switching points

A1 = blind range, A2 = nominal distance

Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF 12, BF 12-F or BF 5-30 must be used. In case of direct mounting of the sensor in a through hole, it has to be fixed at the middle of the housing thread.

Note

If the sensor is used in an environment with strong electromagnetic interference, we recommend non-conductive mounting. For this, use the accompanying plastic nuts or the BF12 or BF12-F mounting flange.

Please observe proper application when using the accompanying plastic nuts. The hole for the sensor must be \geq 14 mm.

