
# Thru-beam sensor

## OBE500-R2F-SE2-0,2MV31-Y263382

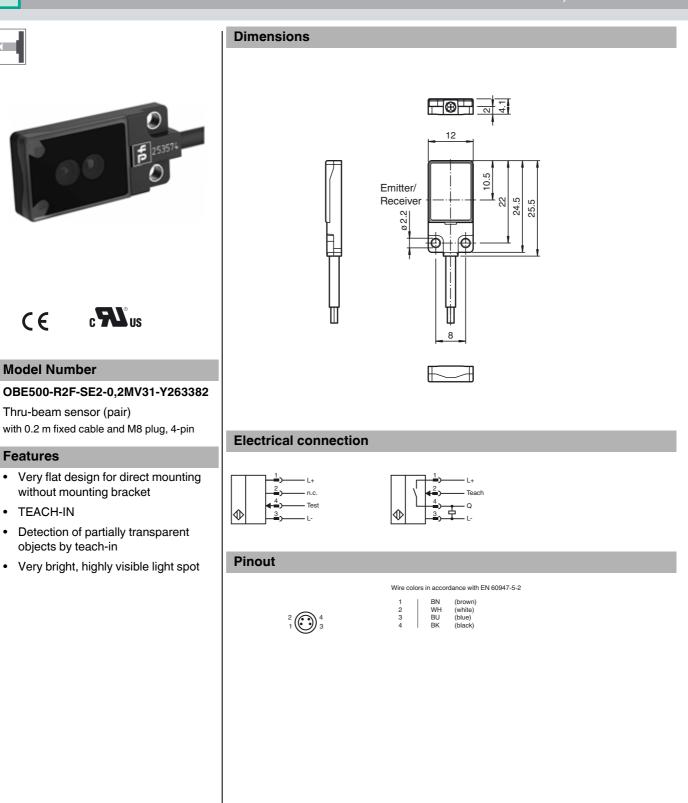

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com


Technical data			Accessories	
System components			V31-GM-2M-PUR	
Emitter		OBE500-R2F-S-0,2M-V31	Female cordset single-ended, M8, 4-pi	
Receiver		OBE500-R2F-E2-0,2M-V31-Y814590	PUR cable	
General specifications				
Effective detection range		0 500 mm	V31-WM-2M-PUR Female cordset single-ended, M8, 4-pin,	
Threshold detection range		700 mm	PUR cable	
Light source		LED		
Light type		modulated visible red light , 630 nm	Other suitable accessories can be found	
LED risk group labelling		exempt group	www.pepperl-fuchs.com	
Angle deviation		approx. 2°		
Object size		typ. starts from 1.5 mm		
Diameter of the light spot		approx. 90 mm at a distance of 500 mm		
Angle of divergence		approx. 5 °		
Optical face		frontal		
Ambient light limit		EN 60947-5-2 : 25000 Lux		
Functional safety related parame	ters			
MTTFd		806 a		
Mission Time (T <sub>M</sub> )		20 a		
Diagnostic Coverage (DC)		0 %		
ndicators/operating means				
Operation indicator		LED green, statically lit Power on , short-circuit : LED green		
		flashing (approx. 4 Hz)		
Function indicator		Receiver: LED yellow, lights up when light beam is free, flashes when falling short of the stability control ; OFF when light beam is interrupted		
		is interrupted		
Electrical specifications		10 30 V DC		
Operating voltage	UB			
No-load supply current Protection class	I <sub>0</sub>	< 10 mA III		
		III		
nput				
Test input		Test of switching function at 0 V		
Switching threshold		Teach-In input		
Dutput				
Switching type		NO contact / dark on		
Signal output		1 PNP output, short-circuit protected, reverse polarity protected, open collector		
Switching voltage		max. 30 V DC		
Switching current		max. 50 mA , resistive load		
Voltage drop	U <sub>d</sub>	≤ 1.5 V DC		
Switching frequency	f	approx. 1 kHz		
Response time		500 μs		
Conformity				
Product standard		EN 60947-5-2		
Ambient conditions				
Ambient temperature		-20 60 °C (-4 140 °F)		
Storage temperature		-20 70 °C (-4 158 °F)		
Mechanical specifications				
Housing width		12 mm		
Housing height		25.5 mm		
Housing depth		4.1 mm		
Degree of protection		IP67		
Connection		200 mm fixed cable with 4-pin, M8x1 connector		
Material				
Housing		PC (Polycarbonate) and Stainless steel		
Optical face		РММА		
Cable		PUR		
Mass		approx. 10 g Per sensor		
Tightening torque, fastening screw Cable length	S	0.25 Nm 200 mm		
Approvals and certificates				
UL approval		E87056, cULus Recognized, Class 2 Power Source		
CCC approval		CCC approval / marking not required for products rated ≤36 V		


2

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

### **Curves/Diagrams**

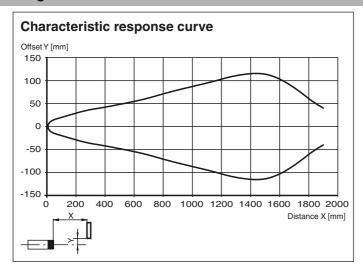

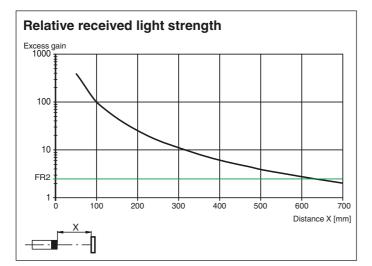

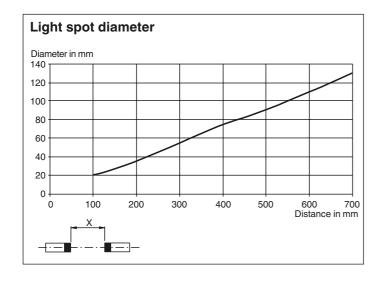

Date of issue: 2019-10-29 263382\_eng.xml

## **Teach-In Methods**

The thru-beam sensor enables the switching points to be taught in for optimum adaptation to specific applications. This eliminates the need for additional components such as apertures.

The sensitivity of the thru-beam sensor can be adjusted using three Teach-in methods:

#### **Position Teach**

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to an optimum value
- The signal threshold is set to a minimum

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

gnal st	trength	
Opt	•	
	Threshold level	
0 -		



#### Recommended application:

S

This method enables minuscule particles in the beam path to be detected, and provides exceptional positioning accuracy. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.

- 1. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. 2. The green and yellow LED indicators flash alternately at 2.5 Hz
- The end of the Teach-in process is indicated when the green LED indicator lights up static and yellow LED blinks. 3.

### **Two-Point Teach-In**

When using this Teach-in method, the following settings are made on the thru-beam sensor:

· The gain is set to an optimum value

· The signal threshold is set in the center between the two taught signal values

Signal s	strength		
Max			$\square$
	Teach-in value 1 (avg)	• •	rs p
	Threshold level	<ul> <li>Contrast levels</li> </ul>	
	Teach-in value 2 (avg)		
		2	
0 -		t t	

- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- 2. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 3. Position the object in the beam path.
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. 4. The green and yellow LED indicators flash alternately at 2.5 Hz
- 5. The end of the Teach-in process is indicated when the green LED indicator lights up static.

#### Maximum Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to a maximum
- · The signal threshold is set to a minimum

Signal strength Max	
Threshold level	

Recommended application:

Enables an object to be detected with a high excess gain. This can be useful if there is severe environmental contamination or to achieve long operating times.

Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.

- 6. Cover the receiver or transmitter.
- Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. 7. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. 8. The green and yellow LED indicators flash alternately at 2.5 Hz
- The end of the Teach-in process is indicated when the green LED indicator lights up static. 9.

4