







## **Model Number**

### OBE25M-R200-S2EP-IO-V31

Thru-beam sensor with 4-pin, M8 x 1 connector

### **Features**

- Medium design with versatile mounting options
- IO-link interface for service and process data
- Various frequencies for avoiding mutual interference (cross-talk immunity)
- Extended temperature range -40°C ... 60°C
- · High degree of protection IP69K

# **Product information**


The optical sensors in the series are the first devices to offer an end-to-end solution in a medium-sized standard design—from the thru-beam sensor through to the measuring distance sensor. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The entire series enables sensors to communicate via IO-Link.


The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

Multi Pixel Technology (MPT) ensures that the standard sensors are flexible and can be adapted to the application environment.


### **Dimensions**

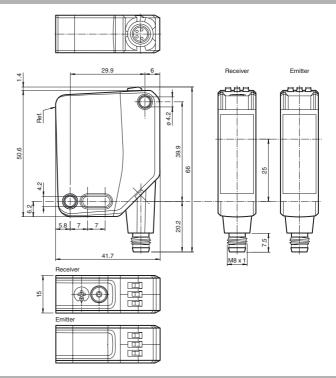

## **Electrical connection emitter**



## **Electrical connection receiver**



### **Pinout**


Wire colors in accordance with EN 60947-5-2



1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)


# Indicators/operating means

#### Emitter



Operating indicator

#### Receiver



1	Sensitivity adjustment	
2	Light-on / dark-on changeover switch	
3	Operating indicator / dark on	
4	Signal indicator	
5	Operating indicator / light on	

### **Accessories**

### IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

### V31-GM-2M-PUR

Female cordset single-ended, M8, 4-pin, PUR cable

### V31-WM-2M-PUR

Female cordset single-ended, M8, 4-pin, PUR cable

### OMH-MLV12-HWG

Mounting bracket for series MLV12 sensors

### OMH-R200-01

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

#### OMH-MLV12-HWK

Mounting bracket for series MLV12 sensors

### **OMH-R20x-Quick-Mount**

Quick mounting accessory


Other suitable accessories can be found at www.pepperl-fuchs.com


**5**PEPPERL+FUCHS

Technical data		
System components		
Emitter		OBE25M-R200-S-IO-V31
Receiver		OBE25M-R200-2EP-IO-V31
General specifications		
Effective detection range		0 25 m
Threshold detection range		33 m
Light source		LED
Light type		modulated visible red light
LED risk group labelling		exempt group
Alignment aid		LED red (in receiver lens) illuminated constantly: beam is interrupted, flashes: reaching switching point, off: sufficient stability control
Diameter of the light spot		approx. 850 mm at a distance of 25 m
Angle of divergence		approx. 2 °
Ambient light limit		EN 60947-5-2 : 40000 Lux
Functional safety related para	meters	
MTTF <sub>d</sub>		462 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		60 %
Indicators/operating means		150
Operation indicator		LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode
Function indicator		Yellow LED: Permanently lit - light path clear Permanently off - object detected Flashing (4 Hz) - insufficient operating reserve
Control elements		Receiver: light/dark switch
Control elements		Receiver: sensitivity adjustment
Electrical specifications		
Operating voltage	$U_B$	10 30 V DC
Ripple		max. 10 %
No-load supply current	I <sub>0</sub>	Emitter: ≤ 15 mA Receiver: ≤ 15 mA at 24 V Operating voltage
Protection class		III
Interface		IO Link (via C/O min 4)
Interface type  Device profile		IO-Link ( via C/Q = pin 4 ) Identification and diagnosis
Device profile		Smart Sensor: Receiver: type 2.4 Emitter: -
Transfer rate		COM 2 (38.4 kBaud)
IO-Link Revision		1.1
Min. cycle time		2.3 ms
Process data witdh		Emitter: Process data input: 0 bit Process data output: 1 bit Receiver: Process data input: 2 bit Process data output: 2 bit
SIO mode support		yes
Device ID		Emitter: 0x111401 (1119233) Receiver: 0x111301 (1118977)
Compatible master port type		A
Input		
Test input		emitter deactivation at +U <sub>B</sub>
Output		
Switching type		The switching type of the sensor is adjustable. The default
- 575-		setting is:
		C/Q - Pin4: NPN normally open / dark-on, PNP normally clo
		light-on, IO-Link /Q - Pin2: NPN normally closed / light-on, PNP normally op
		dark-on
Signal output		2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected
Switching voltage		max. 30 V DC
Switching current		max. 100 mA , resistive load
Usage category	- 11	DC-12 and DC-13
Voltage drop	U <sub>d</sub> f	≤ 1.5 V DC 1000 Hz
Switching frequency	1	1000 Hz 0.5 ms
Response time		0.0 1110
Response time		
Conformity		IEC 61131.0
•		IEC 61131-9 EN 60947-5-2

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

# **Curves/Diagrams**

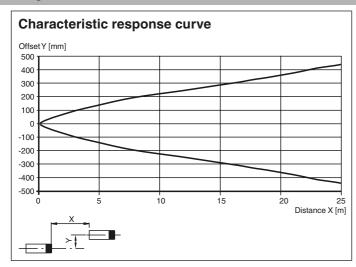

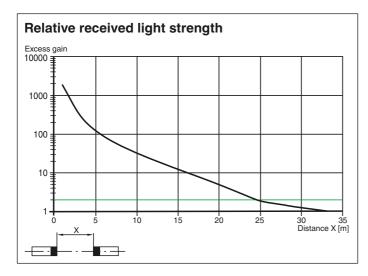

## **Functions and Operation**

To unlock the adjustment functions turn the sensing range /sensitivity adjuster for more than 180 degrees.

### Sensing Range / Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range / sensitivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

### **Light-on / Dark-on Configuration**

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on /dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

# **Restore Factory Settings**

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjustment, turn the sensing range /sensitivity adjuster for more than 180 degrees.