Thru-beam sensor



Model Number

M7/MV7/59/76a/103/115

Thru-beam sensor


with 2 m fixed cable

Features

- Reliable sensor for standard • applications
- Miniature design with versatile ٠ mounting options
- Automatic adjustment of sensitivity • via TEACH-IN
- Resistant against noise: reliable operation under all conditions
- Certified by ECOLAB ٠

Product information


Small, robust, effective, and reliable - these are the properties of the ML7 sensor series. Due to their small size, number of versions, and two different lens positions, they are particularly suited for installation in tight spaces. The robust design and high quality of Pepperl+Fuchs mean they can also be used under harsh environmental conditions. The efficient technology, switching frequencies up to 1000 Hz, high resistance to ambient light, and 4-in-1 output make the series suitable for non-contact object detection.

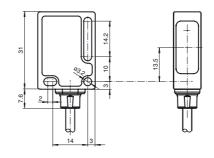




Electrical connection

Dimensions

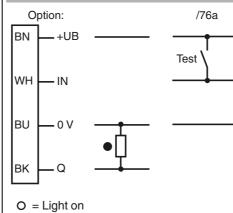

= Dark on

Indicators/operating means

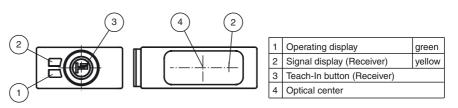

Pepperl+Fuchs Group

www.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com ⁵ PEPPERL+FUCHS 1

CCC approval

Table to the factor				
Technical data			Accessories	
System components			Montagekit OMH-ML7-01 Mounting set consisting of bracket OMH- ML-01 sheet OMH-ML7-03, and	
Emitter		M7/76a/115		
Receiver		MV7/59/103/115		
General specifications		0.05	fastening material	
Effective detection range		0 3.5 m	Montagekit OMH-ML7-02 Mounting set consisting of bracket OMH- ML-02 sheet OMH-ML7-03, and fastening material OMH-ML7-01 Mounting aid for ML7 and ML8 series,	
Threshold detection range Light source		4.5 m LED		
Light type		modulated visible red light		
Target size		min. 7 mm		
Diameter of the light spot		approx. 180 mm at a distance of 3.5 m		
Angle of divergence		approx. 3 °		
Ambient light limit		40000 Lux		
Functional safety related part	rameters		Mounting bracket	
MTTF _d		1130 a		
Mission Time (T _M)		20 a	OMH-ML7-02	
Diagnostic Coverage (DC)		60 %	Mounting aid for ML7 and ML8 series,	
Indicators/operating means			Mounting bracket	
Operation indicator		Receiver: LED green, flashes in case of short-circuit Emitter: LED green	OMH-ML7-03 Mounting aid for ML7 and ML8 series, Fixing plate	
Function indicator		Receiver: LED yellow, lights up when light beam is free, flashes when falling short of the stability control		
Control elements		Receiver: Teach-In key		
Electrical specifications			Other suitable accessories can be found at	
Operating voltage	UB	10 30 V DC , class 2	www.pepperl-fuchs.com	
Ripple		max. 10 %		
No-load supply current	Ι _Ο	Emitter: ≤ 17 mA Receiver: ≤ 15 mA		
Input				
Test input		emitter deactivation at +U _B		
Output		deule en		
Switching type		dark on		
Signal output		1 PNP output, short-circuit protected, reverse polarity protected, open collector		
Switching voltage		max. 30 V DC		
Switching current Voltage drop	U _d	max. 100 mA ≤ 1.5 V DC		
Switching frequency	f	1000 Hz		
Response time		0.5 ms		
Conformity		0.0 110		
Product standard		EN 60947-5-2		
Ambient conditions				
Ambient temperature		-20 60 °C (-4 140 °F)		
Storage temperature		-40 75 °C (-40 167 °F)		
Mechanical specifications				
Housing width		23 mm		
Housing height		31 mm		
Housing depth		11 mm		
Degree of protection		IP67 / IP69K		
Connection		2 m fixed cable		
Material				
Housing		PC (glass-fiber-reinforced Makrolon)		
Optical face		PMMA		
Mass		approx. 100 g (emitter and receiver)	-	
Approvals and certificates				
Protection class		II, rated voltage \leq 250 V AC with pollution degree 1-2 according to IEC 60664-1	1277409 en en e	
UL approval		cULus	107	
CCC approval		CCC approval / marking not required for products rated <26 V		

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group

2


Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com


CCC approval / marking not required for products rated ≤36 V

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

EPPERL+FUCHS

Curves/Diagrams

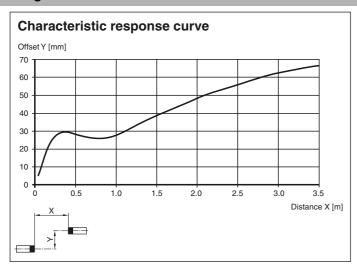

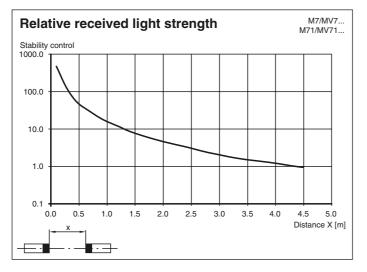

Teach-In

Connect the sensors to operating voltage, the green LEDs green lights up constantly.

- The receiver operates at max. sensitivity (delivery status) or with the last teached values.
- · Mount transmitter and receiver opposite each other and align roughly.
- Adjust the transmitter to the receiver.
- Press the Teach-In button on the receiver as an acknowledgement the green LED will quickly turn off one time.
- Press the Teach-In button on the receiver until both LEDs green and yellow are blinking in parallel (2 Hz). Release the Teach-In button now. • While the green and yellow LEDs are blinking alternating (2 Hz) on the receiver the unit is in the internal set up procedure.
- Teach-In successful: Both LEDs green and yellow on the receiver are on. The unit is ready to use and in switching mode now.
- Teach-In not successful: Both LEDs on the receiver are flashing alternating (4 Hz) for approx. 5 seconds. Afterwards the sensor returns to max. sensitivity setting. Please retry the Teach-In procedure beginning by step 1.