



Model Number

OBE12M-R101-S2EP-IO-V31

Thru-beam sensor with 4-pin, M8 x 1 connector

Features


- Miniature design with versatile • mounting options
- IO-link interface for service and ٠ process data
- Various frequencies for avoiding • mutual interference (cross-talk immunity)
- Extended temperature range ٠ -40°C ... 60°C
- High degree of protection IP69K

Product information


The miniature optical sensors are the first devices of their kind to offer an end-to- end solution in a small single standard design from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.


The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

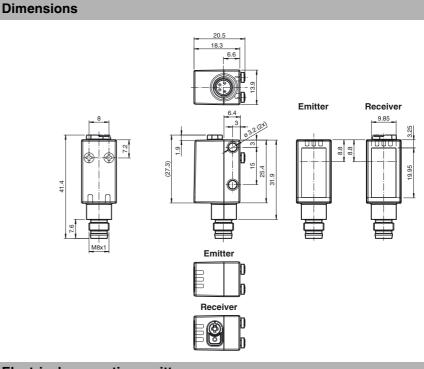

Electrical connection emitter



Electrical connection receiver



Pinout



Wire colors in accordance with EN 60947-5-2 BN WH BU BK (brown (white) (blue) (black)

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com


⁵ PEPPERL+FUCHS 1

Indicators/operating means

Emitter



Receiver

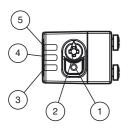

1 Operating indicator

1	Light-on/dark-on changeover switch	
2	Sensitivity adjuster	
3	Operating indicator / light on	
4	Signal indicator	
5	Operating indicator / dark on	

Accessories

IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

OMH-R101

Mounting Clamp

OMH-R101-Front Mounting Clamp

OMH-4.1 Mounting Clamp

OMH-ML6

Mounting bracket

OMH-ML6-U Mounting bracket

OMH-ML6-Z Mounting bracket

V31-GM-2M-PUR

Female cordset single-ended, M8, 4-pin, PUR cable

V31-WM-2M-PUR

Female cordset single-ended, M8, 4-pin, PUR cable

Other suitable accessories can be found at www.pepperl-fuchs.com

Pepperl+Fuchs Group www.pepperl-fuchs.com

2

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

Technical data		
System components		
Emitter		M-R101-S-IO-V31
Receiver	OBE12	M-R101-2EP-IO-V31
General specifications		
Effective detection range	0 12 ı	n
Threshold detection range	15 m	
Light source	LED	
Light type		ted visible red light
LED risk group labelling	exempt	•
Diameter of the light spot		65 mm at a distance of 1 m
Angle of divergence	3.7 °	47-5-2 : 30000 Lux
Ambient light limit		47-5-2:30000 Lux
Functional safety related paran	462 a	
MTTF _d Mission Time (T _M)	402 a 20 a	
Diagnostic Coverage (DC)	20 a 0 %	
Indicators/operating means	0 /0	
Operation indicator	LED gre	en.
operation indicator	constan flashing	tly on - power on (4Hz) - short circuit with short break (1 Hz) - IO-Link mode
Function indicator	Perman	ently lit - light path clear ently off - object detected
Control plant ant		g (4 Hz) - insufficient operating reserve
Control elements		r: light/dark switch
Control elements Parameterization indicator		er: sensitivity adjustment communication: green LED goes out briefly (1 Hz)
Electrical specifications		onintanication. green LED goes out blieny (1 mZ)
Operating voltage	U _B 1030	VDC
Ripple	max. 10	
No-load supply current	I ₀ Emitter:	≤ 14 mA r: ≤ 13 mA at 24 V supply voltage
Protection class		
Interface		
Interface type	IO-Link	(via C/Q = pin 4)
Transfer rate	COM 2	(38.4 kBaud)
IO-Link Revision	1.1	
Min. cycle time	2.3 ms	
Process data witdh	Receive Process	data output: 2 Bit
SIO mode support		
Device ID	yes Emitter:	0x110401 (1115137)
Bevice iB		er: 0x110301 (1114881)
Compatible master port type	А	
Input		
Test input	emitter	deactivation at +U _B
Output		
Switching type	setting i C/Q - Pi light-on	tching type of the sensor is adjustable. The default s: n4: NPN normally open / dark-on, PNP normally closed IO-Link 2: NPN normally closed / light-on, PNP normally open /
Signal output	polarity	pull (4 in 1)outputs, short-circuit protected, reverse protected, overvoltage protected
Switching voltage	max. 30	
Switching current		0 mA, resistive load
Usage category		and DC-13
Voltage drop Switching frequency	U _d ≤ 1.5 V f 1000 Hz	
Switching frequency Response time	0.5 ms	
Ambient conditions	0.0 118	
Ambient temperature	-40 6	0 °C (-40 140 °F)
	-40 6	ο ο (-40 140 Γ)
Storage temperature	-40 7	0 °C (-40 158 °F)
Mechanical specifications		
Housing width	13.9 mr	n
Housing height		n
Housing depth		n
Degree of protection		269 / IP69K
Connection		connector, 4-pin
Material		
Housing		ycarbonate)

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com


Optical face	РММА
Mass	Emitter: approx. 10 g receiver: approx. 10 g
Compliance with standards and directives	
Directive conformity	
EMC Directive 2004/108/EC	EN 60947-5-2:2007+A1:2012
Standard conformity	
Product standard	EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012
Standards	UL 60947-5-2: 2014 IEC 61131-9:2013 EN 62471:2008 EN 61131-9:2013


Approvals and certificates

UL approval


E87056, cULus Listed, class 2 power supply, type rating 1

Curves/Diagrams

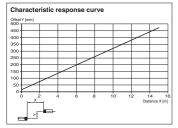

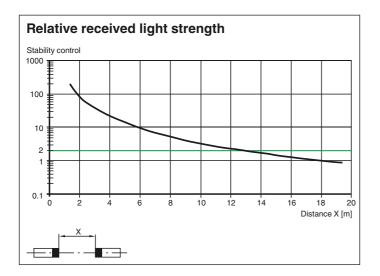

Functions and Operation

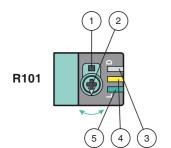

- 1 Light-on / dark-on changeover switch
- 2 Sensing range /sensitivity adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range adjuster for more than 180 degrees.

Sensing Range / Sensitivity

Turn sensing range / sensivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range /sensivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

Light-on / Dark-on Configuration

4

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on / dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

Restore Factory Settings

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensivity adjustment is locked. In order to reactivate the sensing range /sensivity adjustment, turn the sensing range / sensivity adjuster for more than 180 degrees.