Thru-beam sensor

OBE12M-R102-S2EP-IO-V31





Model Number

OBE12M-R102-S2EP-IO-V31

Thru-beam sensor with 4-pin, M8 x 1 connector

Features


- Miniature design with versatile • mounting options
- IO-link interface for service and ٠ process data
- Various frequencies for avoiding . mutual interference (cross-talk immunity)
- Extended temperature range -40°C ... 60°C
- High degree of protection IP69K

Product information


The miniature optical sensors are the first devices of their kind to offer an end-to- end solution in a small single standard design — from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.


The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

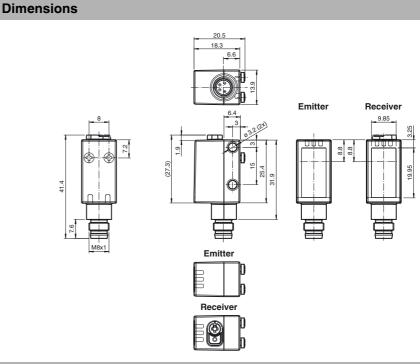

Electrical connection emitter

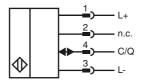

Electrical connection receiver



2 3 4

Pinout

 $^{2}_{1} \bigcirc ^{4}_{3}$

Wire colors in accordance with EN 60947-5-2 BN WH BU BK (brown (white) (blue) (black)

ena.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com




Indicators/operating means

Emitter



Receiver

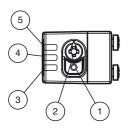

1 Operating indicator

1	Light-on/dark-on changeover switch		
2	Sensitivity adjuster		
3	Operating indicator / light on		
4	Signal indicator		
5	Operating indicator / dark on		

Accessories

IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

OMH-R101

Mounting Clamp

OMH-R101-Front Mounting Clamp

OMH-4.1 Mounting Clamp

OMH-ML6 Mounting bracket

OMH-ML6-U Mounting bracket

OMH-ML6-Z Mounting bracket

V31-GM-2M-PUR Female cordset, M8, 4-pin, PUR cable

V31-WM-2M-PUR Female cordset, M8, 4-pin, PUR cable

Other suitable accessories can be found at www.pepperl-fuchs.com



2

Technical data		
System components		
Emitter Receiver		OBE12M-R102-S-IO-V31 OBE12M-R102-2EP-IO-V31
General specifications		0DE12M-R102-2EF-10-V31
Effective detection range		0 12 m
Threshold detection range		15 m
Light source		LED
Light type		modulated visible red light
LED risk group labelling		exempt group
Diameter of the light spot		approx. 65 mm at a distance of 1 m
Angle of divergence		3.7 °
Ambient light limit		EN 60947-5-2 : 30000 Lux
Functional safety related parame	elers	462 a
MTTF _d Mission Time (T _M)		20 a
Diagnostic Coverage (DC)		0 %
Indicators/operating means		
Operation indicator Function indicator		LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode Yellow LED: Permanently lit - light path clear
		Permanently off - object detected Flashing (4 Hz) - insufficient operating reserve
Control elements Control elements		Receiver: light/dark switch Receiver: sensitivity adjustment
Parameterization indicator		IO link communication: green LED goes out briefly (1 Hz)
Electrical specifications		
Operating voltage	UB	10 30 V DC
Ripple	D	max. 10 %
No-load supply current	Ι _Ο	Emitter: \leq 14 mA Receiver: \leq 13 mA at 24 V supply voltage
Protection class		Ш
Interface		
Interface type Transfer rate		IO-Link (via $C/Q = pin 4$)
IO-Link Revision		COM 2 (38.4 kBaud) 1.1
Min. cycle time		2.3 ms
Process data witdh		Emitter: Process data output: 2 Bit Receiver: Process data input: 2 Bit Brocess data output: 2 Bit
SIO mode support		Process data output: 2 Bit yes
Device ID		Emitter: 0x110405 (1115141) Receiver: 0x110305 (1114885)
Compatible master port type		Α
Input		
Test input		emitter deactivation at +U _B
Output		
Switching type		The switching type of the sensor is adjustable. The default setting is: C/Q - Pin4: NPN normally open / dark-on, PNP normally closed / light-on, IO-Link /Q - Pin2: NPN normally closed / light-on, PNP normally open / dark-on
Signal output		2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected
Switching voltage Switching current		max. 30 V DC max. 100 mA , resistive load
Usage category		DC-12 and DC-13
Voltage drop	Ud	≤ 1.5 V DC
Switching frequency	f	1000 Hz
Response time		0.5 ms
Ambient conditions Ambient temperature		-40 60 °C (-40 140 °F)
Storage temperature		-40 70 °C (-40 158 °F)
Mechanical specifications		
Housing width		13.9 mm
Housing height		33.8 mm
Housing depth		18.3 mm
Degree of protection		IP67 / IP69 / IP69K
Connection		M8 x 1 connector, 4-pin
Material		PC (Polycorhonoto)
Housing		PC (Polycarbonate)
Refer to "General Notes Relating to Pepperl- Pepperl+Fuchs Group USA:+		Product Information". 36 0001 Germany: +49 621 776 4411 Singapore: +65 677

Refer to "General Notes Rel	ating to Pepp
Pepperl+Fuchs Group	USA
www.pepperl-fuchs.com	fa-info@

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com




Optical face	Float glass
Mass	Emitter: approx. 10 g receiver: approx. 10 g
Compliance with standards and directives	
Directive conformity	
EMC Directive 2004/108/EC	EN 60947-5-2:2007+A1:2012
Standard conformity	
Product standard	EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012
Standards	UL 60947-5-2: 2014 IEC 61131-9:2013 EN 62471:2008 EN 61131-9:2013


Approvals and certificates

UL approval


E87056, cULus Listed, class 2 power supply, type rating 1

Curves/Diagrams

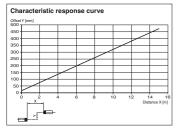

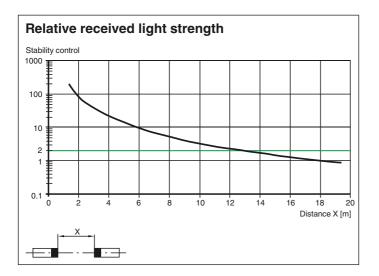

Functions and Operation

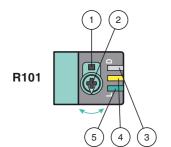

- 1 Light-on / dark-on changeover switch
- 2 Sensing range /sensitivity adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range adjuster for more than 180 degrees.

Sensing Range / Sensitivity

Turn sensing range / sensivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range /sensivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on / dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

Restore Factory Settings

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensivity adjustment is locked. In order to reactivate the sensing range /sensivity adjustment, turn the sensing range / sensivity adjuster for more than 180 degrees.

