

CE **OIO**-Link US

Model Number

OBD1400-R201-2EP-IO-V31

Diffuse mode sensor with 4-pin, M8 x 1 connector

Features

- Medium design with versatile • mounting options
- Extended temperature range ٠ -40°C ... 60°C
- High degree of protection IP69K .
- IO-link interface for service and • process data

Product information


The optical sensors in the series are the first devices to offer an end-to-end solution in a medium-sized standard design-from the thru-beam sensor through to the measuring distance sensor. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The entire series enables sensors to communicate via IO-Link.


The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

Multi Pixel Technology (MPT) ensures that the standard sensors are flexible and

can be adapted to the application environment.

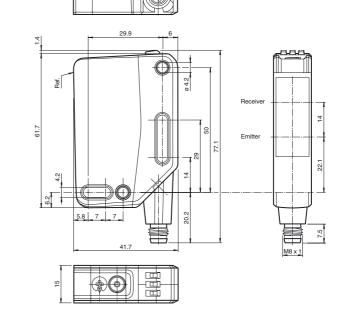

Electrical connection

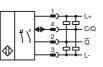

Dimensions




Wire colors in accordance with EN 60947-5-2 (brown) (white) (blue) (black) ΒN WH BU BK

2

3 4

Indicators/operating means

 $^{2}_{1} \bigcirc ^{4}_{3}$

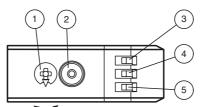

1	Sensitivity adjustment	
2	Light-on / dark-on changeover switch	
3	Operating indicator / dark on	GN
4	Signal indicator	YE
5	Operating indicator / light on	GN

Pepperl+Fuchs Group

www.pepperl-fuchs.com

295670-100055_eng.xml

fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

Technical data

General specifications Detection range Detection range min. Detection range max Adjustment range Reference target Light source Light type LED risk group labelling Diameter of the light spot Angle of divergence Ambient light limit

Functional safety related parameters MTTF_d Mission Time (T_M)

Diagnostic Coverage (DC) Indicators/operating means Operation indicator

Function indicator

Control elements Control elements

Electrical specifications

Operating voltage Ripple No-load supply current Protection class Interface

Interface type Device profile

Transfer rate **IO-Link Revision** Min. cycle time

Process data witdh

SIO mode support Device ID Compatible master port type

Output

Switching type

Signal output

Switching voltage Switching current Usage category Voltage drop Switching frequency Response time Conformity

Communication interface

Product standard Ambient conditions

Ambient temperature

Housing height

Housing depth Degree of protection Connection Material Housina Optical face Mass

Storage temperature **Mechanical specifications** Housing width

www.pepperl-fuchs.com

2 ... 1400 mm 200 ... 1400 mm standard white, 100 mm x 100 mm LED modulated visible red light exempt aroup approx. 50 mm at a distance of 1400 mm 2 EN 60947-5-2 : 60000 Lux 724 a

2 ... 1400 mm

100 ... 200 mm

20 a 0%

 U_B

 I_0

 U_{d}

LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode LED yellow: constantly on - object detected constantly off - object not detected Light-on/dark-on changeover switch Sensing range adjuster 10 ... 30 V DC

max. 10 % < 18 mA at 24 V Operating voltage Ш

IO-Link (via C/Q = pin 4) Identification and diagnosis Smart Sensor type 2.4 COM 2 (38.4 kBaud) 1.1 2.3 ms Process data input 1 Bit Process data output 2 Bit ves 0x111111 (1118481)

А The switching type of the sensor is adjustable. The default setting is: C/Q - Pin4: NPN normally open / light-on, PNP normally closed / dark-on, IO-Link /Q - Pin2: NPN normally closed / dark-on, PNP normally open / light-on 2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected max. 30 V DC max. 100 mA . resistive load DC-12 and DC-13 < 1.5 V DC 1000 Hz 0.5 ms

EN 60947-5-2 -40 ... 60 °C (-40 ... 140 °F) -40 ... 70 °C (-40 ... 158 °F)

IEC 61131-9

15 mm
61.7 mm
41.7 mm
IP67 / IP69 / IP69K
4-pin, M8 x 1 connector, 90° rotatable
PC (Polycarbonate)
PMMA
approx. 44 g

Accessories

IO-Link-Master02-USB IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

V31-WM-2M-PUR Female cordset single-ended, M8, 4-pin, PUR cable

V31-GM-2M-PUR Female cordset single-ended, M8, 4-pin, PUR cable

OMH-RL31-02 Mounting bracket narrow

OMH-RL31-03 Mounting bracket narrow

OMH-RL31-04 Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

OMH-RL31-07 Mounting bracket including adjustment

OMH-R20x-Quick-Mount Quick mounting accessory

Other suitable accessories can be found at www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group


USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091


fa-info@sg.pepperl-fuchs.com

UL approval CCC approval $\label{eq:stability} E87056\ ,\ cULus\ Listed\ ,\ class\ 2\ power\ supply\ ,\ type\ rating\ 1\\ CCC\ approval\ /\ marking\ not\ required\ for\ products\ rated\ {} {\leq}36\ V$

Curves/Diagrams

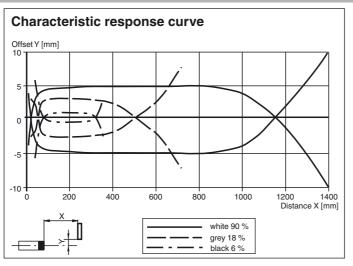

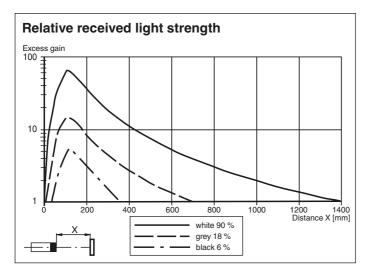

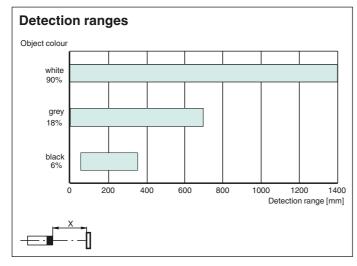

Functions and Operation

To unlock the adjustment functions turn the sensing range /sensitivity adjuster for more than 180 degrees.

Sensing Range / Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range / sensitivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on /dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

Restore Factory Settings

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjustment, turn the sensing range /sensitivity adjuster for more than 180 degrees.

www.pepperl-fuchs.com