Diffuse mode sensor

CE **OIO-**Link c(US

Model Number

OBD1000-R101-EP-IO-0,3M-V3

Diffuse mode sensor

with fixed cable and 3-pin, M8 connector

Features


- Miniature design with versatile • mounting options
- Extended temperature range ٠ -40°C ... 60°C
- High degree of protection IP69K .
- IO-link interface for service and • process data

Product information

The miniature optical sensors are the first devices of their kind to offer an end-to- end from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

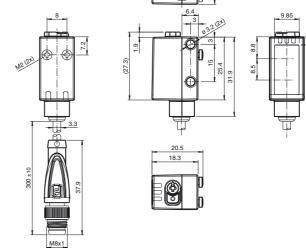

Emitter Receiver

Electrical connection




Dimensions

Pinout



Indicators/operating means

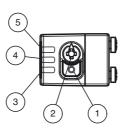

1	Light-on/dark-on changeover switch	
2	Sensitivity adjuster	
3	Operating indicator / dark on	
4	Signal indicator	
5	Operating indicator / light on	
Ľ	opolating indicator / light of	

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

⁵ PEPPERL+FUCHS 1

Technical data				
General specifications				
Detection range		2 1000 mm		
Detection range min.		20 50 mm		
Adjustment range		50 1000 mm		
Reference target		standard white, 100 mm x 100 mm		
Light source		LED		
Light type		modulated visible red light		
LED risk group labelling		exempt group		
Diameter of the light spot		approx. 65 mm at a distance of 1000 mm		
Angle of divergence		3.7°		
Ambient light limit EN 60947-5-2				
Functional safety related parame	eters	724 a		
MTTF _d Mission Time (T _M)		224 a 20 a		
Diagnostic Coverage (DC)		0%		
Indicators/operating means				
Operation indicator		LED green:		
		constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode		
Function indicator		LED yellow: constantly on - object detected constantly off - object not detected		
Control elements		Light-on/dark-on changeover switch		
Control elements		Sensing range adjuster		
Electrical specifications				
Operating voltage	UB	10 30 V DC		
Ripple		max. 10 %		
No-load supply current	I ₀	< 25 mA at 24 V supply voltage		
Protection class		III		
Interface				
Interface type		IO-Link (via $C/Q = pin 4$)		
Transfer rate		COM 2 (38.4 kBaud)		
IO-Link Revision Min. cycle time		1.1 2.3 ms		
Process data witdh		Process data input 1 Bit		
		Process data output 2 Bit		
SIO mode support		yes		
Device ID		0x110101 (1114369)		
Compatible master port type		A		
Output				
Switching type		The switching type of the sensor is adjustable. The default setting is:		
Cignal autout		$\rm C/Q$ - Pin4: NPN normally open / light-on, PNP normally closed / dark-on, IO-Link		
Signal output Switching voltage		1 push-pull (4 in 1) output, short-circuit protected, reverse polarity protected, overvoltage protected max. 30 V DC		
Switching current		max. 100 mA , resistive load		
Usage category		DC-12 and DC-13		
Voltage drop	Ud	≤ 1.5 V DC		
Switching frequency	f	1000 Hz		
Response time		0.5 ms		
Conformity				
Communication interface		IEC 61131-9		
Product standard		EN 60947-5-2		
Ambient conditions Ambient temperature		-40 60 °C (-40 140 °F) , fixed cable -25 60 °C (-13 140 °F) , movable cable not appropriate for conveyor chains		
Storage temperature		-40 70 °C (-40 158 °F)		
Mechanical specifications		(· /		
Housing width		13.9 mm		
Housing height		33.8 mm		
Housing depth		18.3 mm		
Degree of protection		IP67 / IP69 / IP69K		
Connection		300 mm fixed cable with M8 x 1, 3-pin connector		
Material				
Housing		PC (Polycarbonate)		
Optical face		PMMA		
Mass Cable length		approx. 10 g 0.3 m		
Cable length		0.0 m		
Approvals and certificates				
UL approval		E87056 , cULus Listed , class 2 power supply , type rating 1		

Accessories

IO-Link-Master02-USB IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

V3-WM-2M-PUR Cable socket, M8, 3-pin, PUR cable

OMH-R101 Mounting Clamp

OMH-R101-Front Mounting Clamp

OMH-4.1 Mounting Clamp

OMH-ML6 Mounting bracket

OMH-ML6-U Mounting bracket

OMH-ML6-Z Mounting bracket

V31-GM-2M-PUR Female cordset, M8, 4-pin, PUR cable

V31-WM-2M-PUR Female cordset, M8, 4-pin, PUR cable

Other suitable accessories can be found at www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001

fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com


EPPPERL+FUCHS


2


Pepperl+Fuchs Group

www.pepperl-fuchs.com

Curves/Diagrams

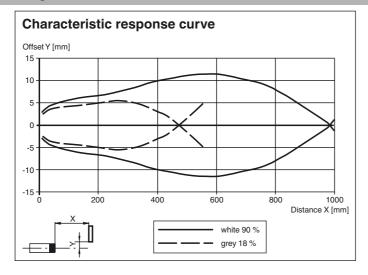

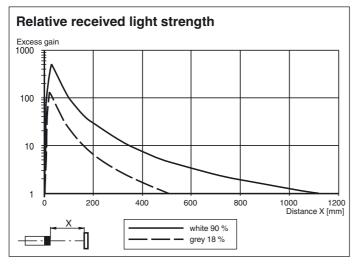

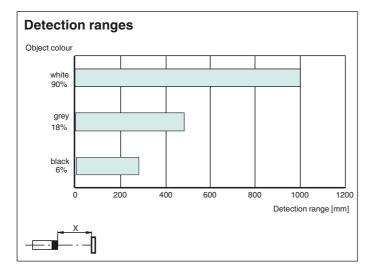

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

EPPPERL+FUCHS

3

Functions and Operation

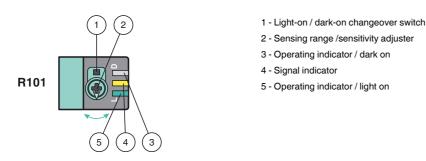

To unlock the adjustment functions turn the sensing range adjuster for more than 180 degrees.

Sensing Range / Sensitivity

Turn sensing range / sensivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range /sensivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on / dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

Restore Factory Settings

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensivity adjustment is locked. In order to reactivate the sensing range / sensivity adjustment, turn the sensing range / sensivity adjuster for more than 180 degrees.

Germany: +49 621 776 1111

fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091

fa-info@sg.pepperl-fuchs.com

EPPERL+FUCHS

fa-info@us.pepperl-fuchs.com

4

www.pepperl-fuchs.com