



€





Model Number

OBD1400-R201-2EP-IO

Diffuse mode sensor with fixed cable

Features

- Medium design with versatile mounting options
- Extended temperature range -40°C ... 60°C
- High degree of protection IP69K
- IO-link interface for service and process data

Product information

The optical sensors in the series are the first devices to offer an end-to-end solution in a medium-sized standard design—from the thru-beam sensor through to the measuring distance sensor. As a result of this design, the sensors are able to perform practically all standard automation tasks.


The entire series enables sensors to communicate via IO-Link.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.


Multi Pixel Technology (MPT) ensures that the standard sensors are flexible and

can be adapted to the application environment.


Dimensions

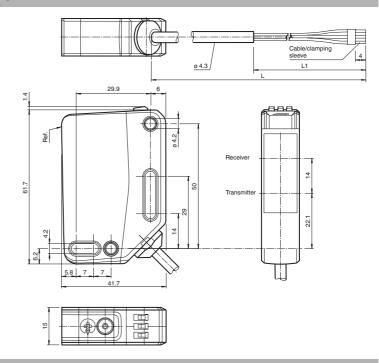

Electrical connection

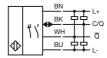

Indicators/operating means

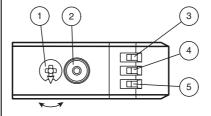

	1	Sensitivity adjustment	
	2	Light-on / dark-on changeover switch	
	3	Operating indicator / dark on	GN
	4	Signal indicator	YE
Г	5	Operating indicator / light on	GN

Technical data General specifications Detection range 2 ... 1400 mm 100 ... 200 mm Detection range min. Detection range max 2 ... 1400 mm Adjustment range 200 ... 1400 mm standard white, 100 mm x 100 mm Reference target Light source Light type modulated visible red light LED risk group labelling exempt group Diameter of the light spot approx. 50 mm at a distance of 1400 mm Angle of divergence EN 60947-5-2: 60000 Lux Ambient light limit Functional safety related parameters 724 a MTTF_d Mission Time (T_M) 20 a 0 % Diagnostic Coverage (DC) Indicators/operating means Operation indicator LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode Function indicator LED yellow: constantly on - object detected constantly off - object not detected Control elements Light-on/dark-on changeover switch Control elements Sensing range adjuster **Electrical specifications** Operating voltage U_{B} 10 ... 30 V DC Ripple max. 10 % No-load supply current I_0 < 18 mA at 24 V Operating voltage Protection class Interface Interface type IO-Link (via C/Q = BK) Device profile Identification and diagnosis Smart Sensor type 2.4 Transfer rate COM 2 (38.4 kBaud) IO-Link Revision 1.1 Min. cycle time 2.3 ms Process data witdh Process data input 1 Bit Process data output 2 Bit SIO mode support 0x111111 (1118481) Device ID Compatible master port type Output Switching type The switching type of the sensor is adjustable. The default setting is: C/Q - BK: NPN normally open / light-on, PNP normally closed / dark-on, IO-Link /Q - WH: NPN normally closed / dark-on, PNP normally open / 2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected Signal output max. 30 V DC Switching voltage max. 100 mA . resistive load Switching current Usage category DC-12 and DC-13 < 1.5 V DC Voltage drop U_{d} 1000 Hz Switching frequency 0.5 ms Response time Conformity Communication interface IEC 61131-9 Product standard EN 60947-5-2 Ambient conditions Ambient temperature -40 ... 60 °C (-40 ... 140 °F) , fixed cable -20 ... 60 °C (-4 ... 140 °F) , movable cable not appropriate for conveyor chains -40 ... 70 °C (-40 ... 158 °F) Storage temperature **Mechanical specifications** Housing width 15 mm Housing height 61.7 mm Housing depth 41.7 mm IP67 / IP69 / IP69K Degree of protection Connection 2 m fixed cable Material Housing PC (Polycarbonate) Optical face **PMMA** Mass approx. 83 g

Accessories

IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

OMH-RL31-02

Mounting bracket narrow

OMH-RL31-03

Mounting bracket narrow

OMH-RL31-04

Mounting aid for round steel \emptyset 12 mm or sheet 1.5 mm ... 3 mm

OMH-RL31-07


Mounting bracket including adjustment


OMH-R20x-Quick-Mount


Quick mounting accessory

Other suitable accessories can be found at www.pepperl-fuchs.com

Curves/Diagrams

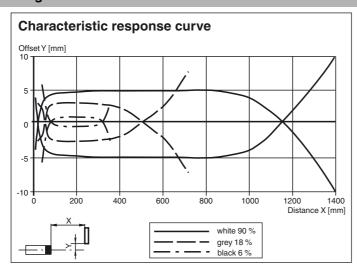

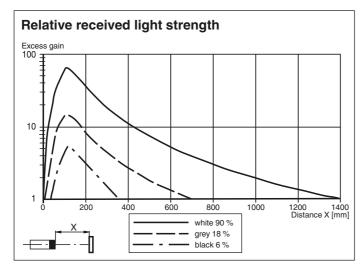

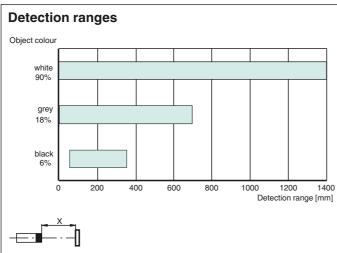

Functions and Operation

To unlock the adjustment functions turn the sensing range /sensitivity adjuster for more than 180 degrees.

Sensing Range / Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range / sensitivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on /dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

Restore Factory Settings

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjustment, turn the sensing range /sensitivity adjuster for more than 180 degrees.

FPEPPERL+FUCHS