### **Dimensions**





# **Model Number**

# VDM28-50-R1/73c/136

Distance sensor with 4-pin, M12 x 1 connector

### **Features**


- Retroreflective laser distance sensor •
- Measuring method PRT (Pulse ٠ Ranging Technology)
- Accurate, clear, and reproducible ٠ measuring results
- Red laser as the light emitter
- Laser class 1, eyesafe •

# **Product information**


The VDM28 distance measurement device employs Pulse Ranging Technology (PRT). It has a repeat accuracy of 5 mm with an

operating range of 0.2 ... 50 m and an absolute accuracy of 25 mm. The compact housing of the Series 28

photoelectric sensors, with dimensions of 88 mm (height), 26 mm (width) and 54 mm (depth), make it the smallest device available in its class.

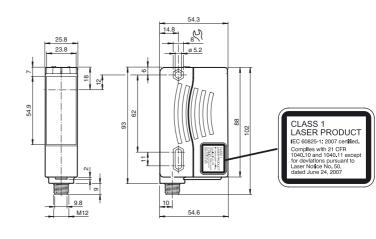


# **Electrical connection**

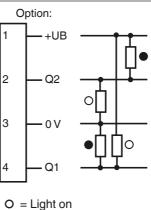




Pinout

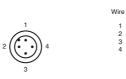

### Wire colors in accordance with EN 60947-5-2 (brown) (white) (blue) (black) BN WH BU BK

# Indicators/operating means

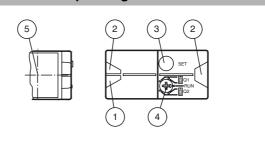

1	Operating display	green
2	Signal display	yellow
3	TEACH-IN button	
4	Mode rotary switch	
5	Laser output	

Pepperl+Fuchs Group www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



### **Technical data** General specifications Measurement range 0.2 ... 50 m OFR-100/100 Reference target Light source laser diode typ. service life 85,000 h at Ta = +25 °C Light type modulated visible red light Laser nominal ratings LASER LIGHT, DO NOT STARE INTO BEAM Note Laser class Wave length 660 nm Beam divergence < 1.5 mrad approx. 4 ns Pulse length Repetition rate 250 kHz max. pulse energy < 1.5 nJ Angle deviation max. ± 2° Pulse Ranging Technology (PRT) Measuring method Diameter of the light spot < 50 mm at a distance of 50 m at 20 °C Ambient light limit 50000 Lux Temperature influence typ. ≤ 0.25 mm/K Functional safety related parameters MTTF<sub>d</sub> 200 a Mission Time (T<sub>M</sub>) 10 a Diagnostic Coverage (DC) 0 % Indicators/operating means Operation indicator LED areen Function indicator Teach-In indicator Control elements Control elements Electrical specifications Operating voltage UB Ripple No-load supply current 10 Time delay before availability t<sub>v</sub> Output Signal output Switching voltage Switching current Switching frequency Response time Measurement accuracy Absolute accuracy Repeat accuracy Ambient conditions Ambient temperature Storage temperature Mechanical specifications Housing width Housing height Housing depth IP67 Degree of protection Connection Material Housing Optical face Mass Compliance with standards and directives Standard conformity Product standard Laser class Approvals and certificates Protection class

# 2 LEDs yellow for switching state Teach-In: LED green/yellow equiphase flashing; 2.5 Hz Teach Error:LED green/yellow non equiphase flashing; 8.0 Hz 5-step rotary switch for operating modes selection (threshold setting and operating modes) Switch for setting the threshold values 10 ... 30 V DC , class 2 10 % within the supply tolerance $\leq$ 70 mA / 24 V DC 1.5 s 2 push-pull (4 in 1) outputs, short-circuit protected, reverse polarity protected max. 30 V DC max. 100 mA 50 Hz 10 ms ±25 mm < 5 mm -30 ... 55 °C (-22 ... 131 °F) -30 ... 70 °C (-22 ... 158 °F) 25.8 mm 88 mm 54.6 mm

4-pin, M12 x 1 connector Plastic ABS

Plastic pane 90 g

EN 60947-5-2 IEC 60825-1:2007 Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

II, rated voltage ≤ 250 V AC with pollution degree 1-2 according to IEC 60664-1 cULus Listed, Class 2 Power Source, Type 1 enclosure CCC approval / marking not required for products rated ≤36 V

# CCC approval Preferences

UL approval

Teach-In:

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

Laserlabel

CLASS 1 LASER PRODUCT IEC 60825-1: 2007 certified. Complies with 21 CFR 1040 10 and 1040 11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

# Accessories

### **OMH-05**

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

### **OMH-07**

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

**OMH-21** Mounting bracket

**OMH-22** Mounting bracket

OMH-MLV11-K dove tail mounting clamp

**OMH-RLK29-HW** Mounting bracket for rear wall mounting

OMH-RL28-C Weld slag cover model

**OMH-K01** dove tail mounting clamp

**OMH-K03** dove tail mounting clamp

OFR-100/100 Reflective tape 100 mm x 100 mm

REF-MH82 Reflector with Micro-structure, rectangular 82 mm x 60 mm, mounting holes

# REF-MH50

Reflector with Micro-structure, rectangular 50.9 mm x 50.9 mm, mounting holes, fixing strap

# REF-MH78

Reflector with Micro-structure, hexagonal 78 mm x 61 mm, mounting holes

**OMH-VDM28-01** 

Metal enclosure for inserting protective panes or apertures

V1-G-2M-PVC Female cordset, M12, 4-pin, PVC cable

V1-W-2M-PUR Female cordset, M12, 4-pin, PUR cable

V1-G-2M-PUR Female cordset, M12, 4-pin, PUR cable

**OMH-VDM28-02** Mounting and fine adjustment device for sensors from the 28 series PEPPERL+FUCHS

\_eng.xml

2

You can use the rotary switch to select the output **Q1** or **Q2** and the relevant switching threshold A or B for teaching in. The yellow LEDs indicate the current state of the selected output.


To store a switching threshold (distance measured value), press and hold the "SET" button until the yellow and green LEDs flash in phase (approx. 2 s). Teach-In starts when the "SET" button is released.

A successful Teach-In is indicated by rapidly alternating flashing (2.5 Hz) of the yellow and green LEDs.

An unsuccessful Teach-In is indicated by alternating flashing (8 Hz) of the yellow and green LEDs.

After an unsuccessful Teach-In, the sensor continues to operate with the previous valid setting after the relevant visual fault signal is issued.

Different switching modes can be defined by teaching in the relevant distance measured values for the switching thresholds A and B:

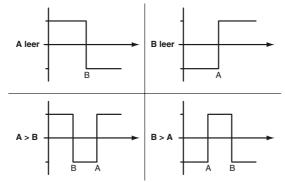

Every taught-in switching threshold can be retaught (overwritten) by pressing the SET button again.

Pressing and holding the "SET" button for > 5 s completely deletes the taught-in value. The yellow and green LEDs go out simultaneously to indicate that this procedure has been completed.

### Default setting:

In general, no switching points are set at the factory. The outputs are switched to low.

- Reset to default settings:
- · Set the rotary switch to the "RUN" position
- Press and hold the "SET" button until the yellow and green LEDs stop flashing in phase (approx. 10 s)
- If the green LED lights up, the procedure is complete.

### Error messages:

Note!

sensor.

- · Short circuit: In the event of a short circuit at the sensor output, the green LED flashes with a frequency of approx. 4 Hz.
- Teach error: In the event of a teach error, the yellow and green LEDs flash alternately with a frequency of approx. 8 Hz.

# 0 11

The difference in the taught-in distance measured values for the switching thresholds A and B must be greater than the switching hysteresis set in the

On delivery, the switching hysteresis is 15 mm.

If the difference in the taught-in measured values is the same as or smaller than the set switching hysteresis, the sensor will visually signal an unsuccessful Teach-In. The last distance measured value that was taught in will not be adopted by the sensor.

Select a new distance measured value for switching threshold A or B with a greater difference between the switching thresholds.

Teach in this distance measured value on the sensor again.

### Laser notice laser class 1

- The irradiation can lead to irritation especially in a dark environment. Do not point at people!
- Maintenance and repairs should only be carried out by authorized service personnel!
- · Attach the device so that the warning is clearly visible and readable.
- Caution Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

