

CE **OIO**-Link

Model Number

OMT50-R100-EP-IO-V3

Distance sensor with 3-pin, M8 x 1 connector

Features

- Miniature design with versatile • mounting options
- Space-saving distance sensors in ٠ small standardized design
- Multi Pixel Technology (MPT) exact • and precise signal evaluation
- IO-link interface for service and • process data


Product information

The R100 series miniature optical sensors are the first devices of their kind to offer an end-to-end solution in a small single standard design — from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The entire series enables sensors to communicate via IO-Link.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

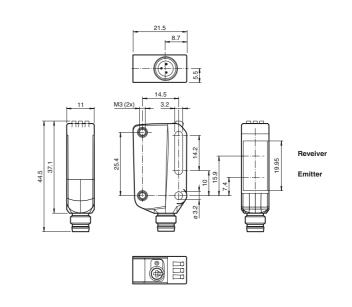

Electrical connection




Dimensions

Pinout




Indicators/operating means



ν

(O

80



Ι	Switch output 1 / switch point B
Ш	Switch output 1 / switch point A
	Switch output 2 / switch point A
IV	Switch output 2 / B
V	Keylock

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411

õ

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

fa-info@de.pepperl-fuchs.com

Technical data		
General specifications		
Measurement range		20 50 mm
Reference target		standard white, 100 mm x 100 mm
Light source Light type		LED modulated visible red light
LED risk group labelling		exempt group
Angle deviation		max. +/- 1.5 °
Diameter of the light spot		approx. 4 mm at a distance of 50 mm
Angle of divergence		4 °
Ambient light limit		EN 60947-5-2 : 30000 Lux
Resolution		0.01 mm
Functional safety related parame	eters	600 a
MTTF _d Mission Time (T _M)		20 a
Diagnostic Coverage (DC)		0%
Indicators/operating means		
Operation indicator		LED green: constantly on - power on flashing (4Hz) - short circuit
Eurotian indicator		flashing with short break (1 Hz) - IO-Link mode
Function indicator		LED yellow: constantly on - switch output active constantly off - switch output inactive
Control elements		Teach-In key
Control elements		5-step rotary switch for operating modes selection
Electrical specifications		10 30 V DC
Operating voltage Ripple	UB	max. 10 %
No-load supply current	I ₀	< 25 mA at 24 V supply voltage
Protection class	-0	III
Interface		
Interface type		IO-Link (via C/Q = pin 4)
Device profile		Smart Sensor
Transfer rate		COM 2 (38.4 kBaud)
IO-Link Revision Min. cycle time		1.1 3 ms
Process data witdh		Process data input 3 Byte Process data output 2 Bit
SIO mode support		yes
Device ID		0x110901 (1116417)
Compatible master port type		A
Output Switching type		The default setting is:
Switching type		C/Q - Pin4: NPN normally open, PNP normally closed, IO-Link
Signal output		1 push-pull (4 in 1) output, short-circuit protected, reverse polarity protected, overvoltage protected max. 30 V DC
Switching voltage Switching current		max. 30 v DC max. 100 mA , resistive load
Usage category		DC-12 and DC-13
Voltage drop	U _d	≤ 1.5 V DC
Response time		2 ms
Conformity		
Communication interface		IEC 61131-9
Product standard		EN 60947-5-2
Measurement accuracy Temperature drift		20 μm/K
Warm up time		5 min
Repeat accuracy		≤0.15 mm
Linearity error		± 0.3 mm
Ambient conditions		
Ambient temperature		10 60 °C (50 140 °F)
Storage temperature		-40 70 °C (-40 158 °F)
Mechanical specifications Housing width		11 mm
Housing height		44.5 mm
Housing depth		21.5 mm
Degree of protection		IP67 / IP69 / IP69K
Connection		M8 x 1 connector, 3-pin
Material		DO (Daturation to)
Housing Optical face		PC (Polycarbonate) PMMA
Mass		approx. 10 g
Approvals and certificates		

Accessories

V31-GM-2M-PUR Female cordset, M8, 4-pin, PUR cable

V31-WM-2M-PUR Female cordset, M8, 4-pin, PUR cable

IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

Other suitable accessories can be found at www.pepperl-fuchs.com

Approvals and certificates

2

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



E87056, cULus Listed, class 2 power supply, type rating 1

UL approval

Preferences

Teach-In:

You can use the rotary switch to select the relevant switching threshold A and/or B for teaching in for switch signal Q1 or Q2.

The yellow LEDs indicate the current state of the selected output.

To store a threshold value, press and hold the "TI" button until the yellow and green LEDs flash in phase (approx. 1 s). Teach-In starts when the "TI" button is released.

Successful Teach-In is indicated by alternating flashing (2.5 Hz) of the yellow and green LEDs.


An unsuccessful Teach-In is indicated by rapidly alternating flashing (8 Hz) of the yellow and green LEDs.

After an unsuccessful Teach-In, the sensor continues to operate with the previous valid setting after the relevant visual fault signal is issued.

Different switching modes can be defined by teaching in the relevant distance measured values

for the switching thresholds A and B:

Single point mode:



Window mode:



Every taught-in switching threshold can be retaught (overwritten) by pressing the "TI" button again.

Pressing and holding the "TI" button for > 4 s completely deletes the taught-in value. The yellow and green LEDs go out simultaneously to indicate that this procedure has been completed. Successful resetting is indicated by alternating flashing (2.5 Hz) of the yellow and green LEDs.

Resetting to Factory Default Settings

Press the "TI" button for > 10 s in rotary switch position "O' to reset to factory default settings. The yellow and green LEDs go out simultaneously to indicate the resetting.

Resetting process starts when the "TI" button is released and is indicated by the yellow LED. After the process the sensor works with factory default settings, immediately.

OMT:

- Factory default settings switch signal Q1: Switch signal active, window mode
- Factory default settings switch signal Q2:
- Switch signal active, window mode

OQT:

- · Factory default settings switch signal Q1:
- Switch signal active, BGS mode (background suppression)
- Factory default settings switch signal Q2: Switch signal active, BGS mode (background suppression)

Configuration via IO-Link interface


Setting different operating modes via the IO-Link interface

The devices are equipped with an IO-Link interface as standard for diagnostics and parameterization tasks to ensure optimum adjustment of the sensors to the relevant application.

Single point mode operating mode (one switch point):

- "Detection of objects irrespective of type and color in a defined detection range. Objects in the background are suppressed.
- "The switch point corresponds exactly to the set point.

active detection range

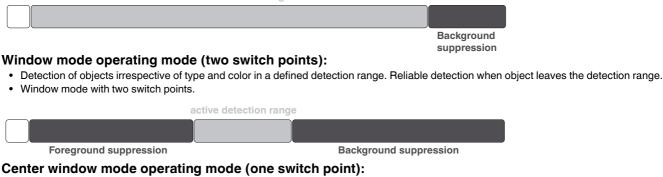

Detection of objects irrespective of type and color in a defined detection range. Sets a defined window around a given object. Objects outside this window are not detected.

Refer to "General Notes Rela	ting to Pepperl+Fuchs Product Information	ation".
Pepperl+Fuchs Group	USA: +1 330 486 0001	G
www.pepperl-fuchs.com	fa-info@us.pepperl-fuchs.com	fa-i

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



2018-06-08 issue: Date of 2018-06-08 14:49 date: Release

Re

ena.x

00180

267075-1

• Window mode with one switch point.


active	detection range	

Foreground suppression

Background suppression

Two point mode operating mode (hysteresis operating mode):

• Detection of objects irrespective of type and color between a defined switch-on and switch-off point.



Inactive operating mode:

• Evaluation of switching signals is deactivated.

The associated IODD device description file can be found in the download area at www.pepperl-fuchs.com.

